 


ASSEMBLY INSTRUCTIONS

Part no. 0458-395-0411

REV:1

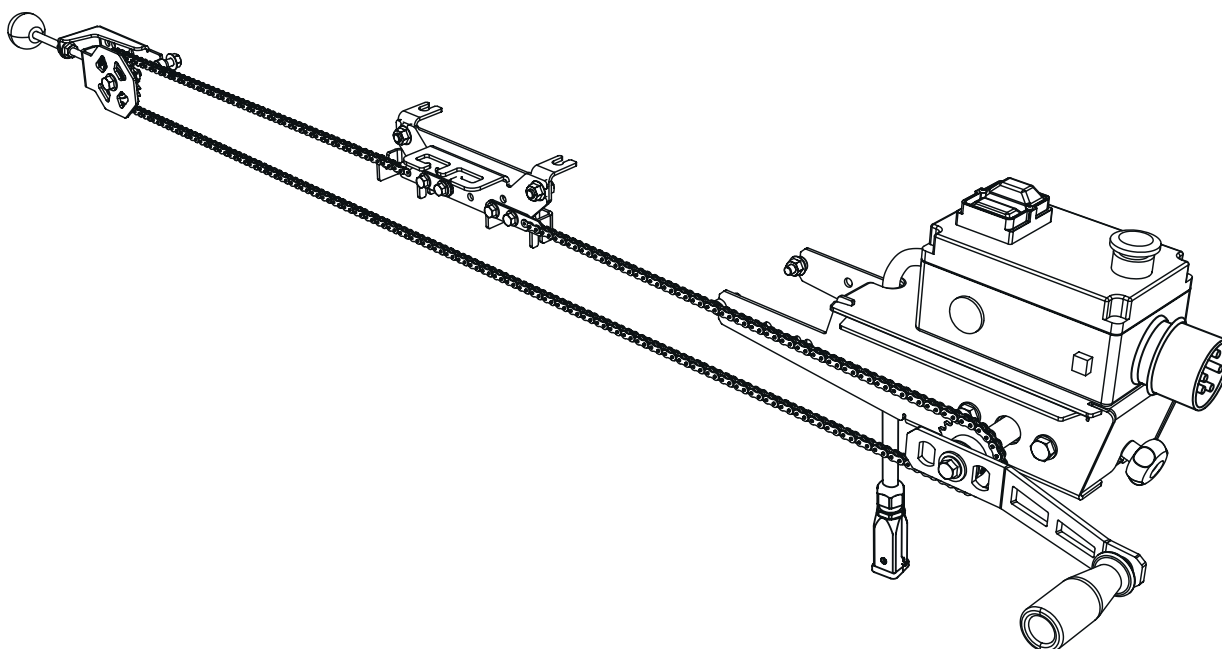



MANUAL REMOTE FEEDING FOR ELECTRIC SAW




01-00696

COMPONENT PARTS

	_____	1 x	_____	03-02832
	_____	1 x	_____	03-03156
	_____	1 x	_____	04-00561
	_____	1 x	_____	03-03158
	_____	2 x	_____	04-00409
	_____	1 x	_____	DS-00169
	_____	1 x	_____	03-03239
	_____	1 x	_____	03-02819
	_____	1 x	_____	03-02813
	_____	1 x	_____	04-00407
	_____	1 x	_____	DK-00110
	_____	1 x	_____	03-02811
	_____	1 x	_____	03-03159
	_____	1 x	_____	03-02797
	_____	1 x	_____	03-02796
	_____	4 x	_____	03-03157
	_____	1 x	_____	01-00697, 4 m
	_____	1 x	_____	01-00696-skp
	_____	1 x	_____	01-00777-skp

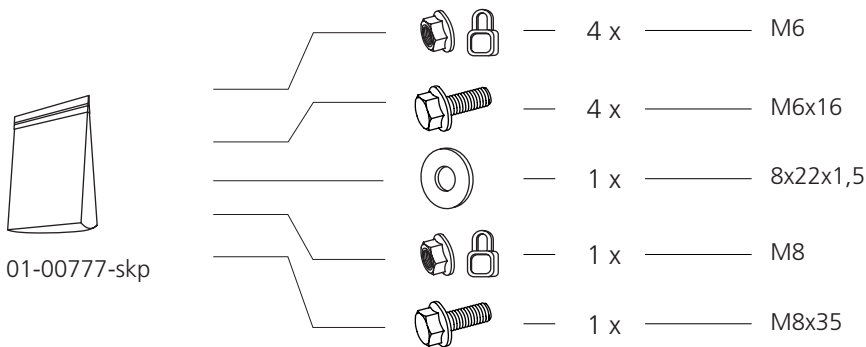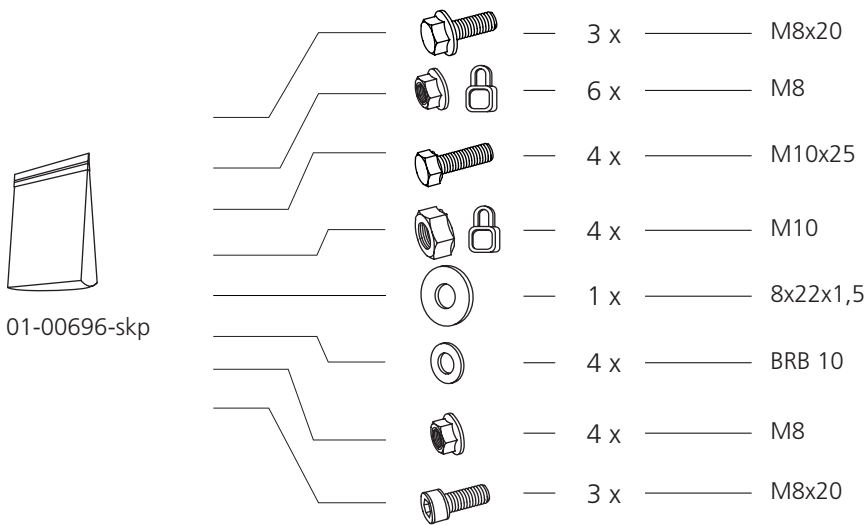  

01-00804

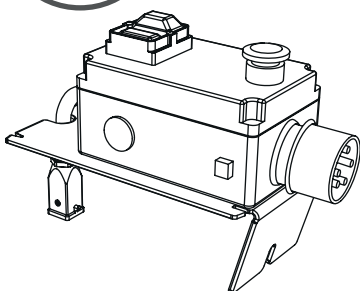 

— 1 x — 01-00804



 
01-00720



— 1 x — 01-00720, 1 m
Used for each 1 m extension



01-00696

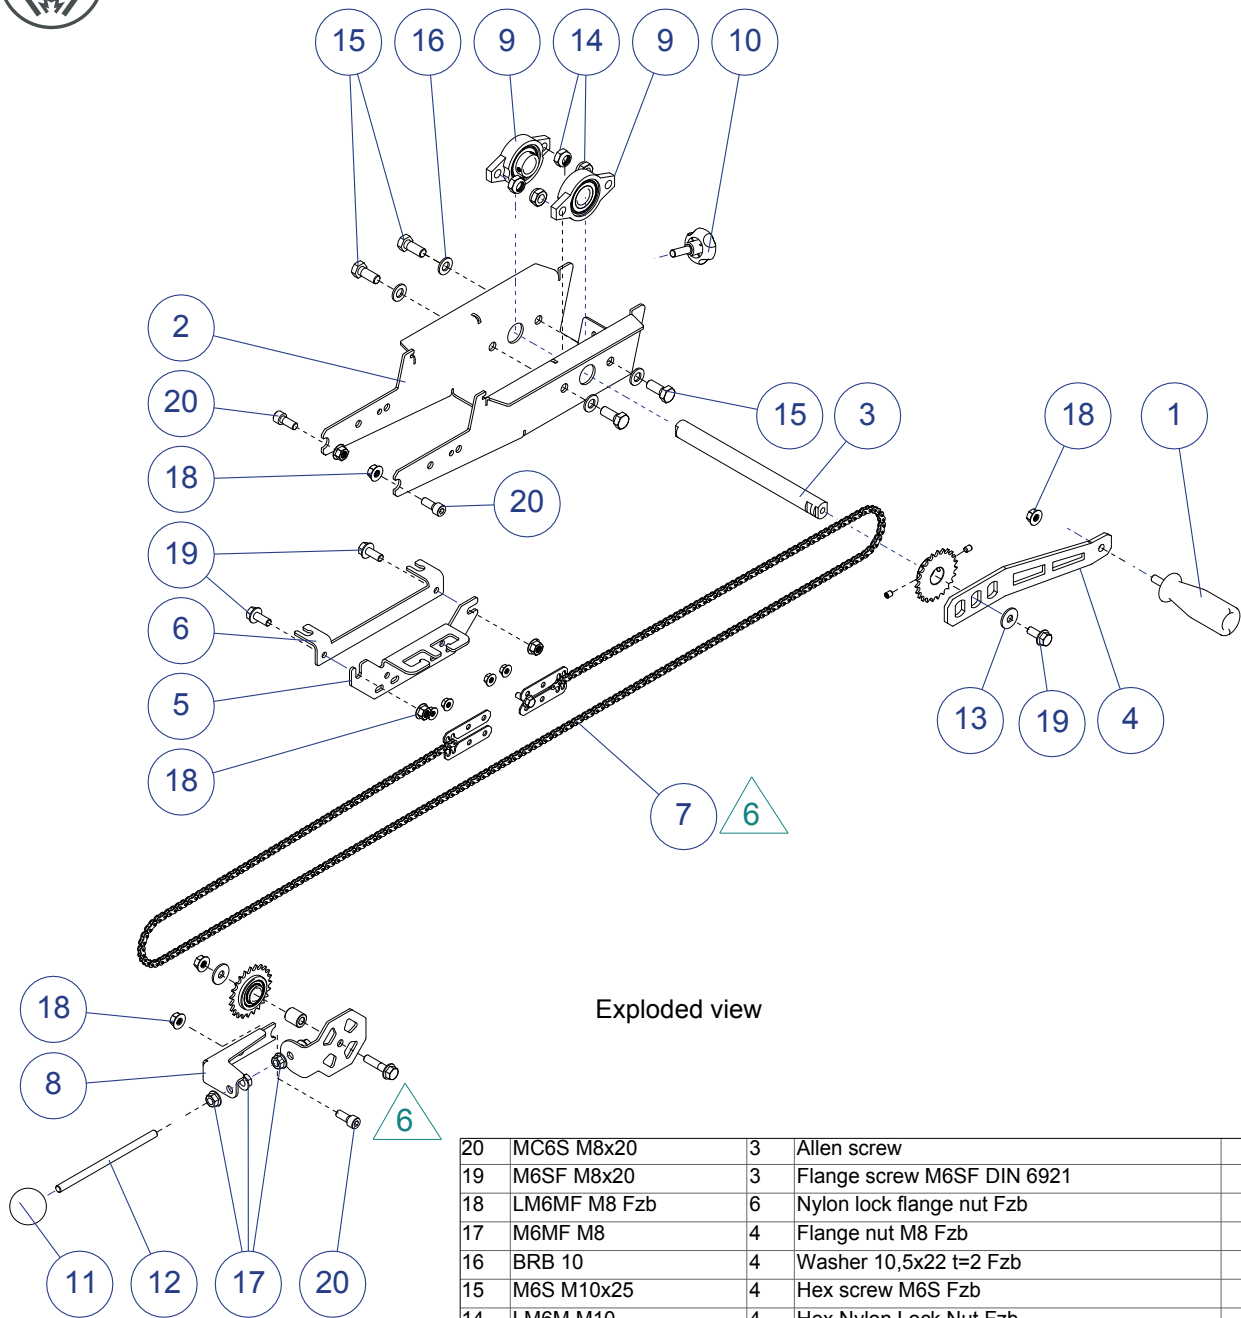


Exploded view

20	MC6S M8x20	3	Allen screw	
19	M6SF M8x20	3	Flange screw M6SF DIN 6921	
18	LM6MF M8 Fzb	6	Nylon lock flange nut Fzb	
17	M6MF M8	4	Flange nut M8 Fzb	
16	BRB 10	4	Washer 10,5x22 t=2 Fzb	
15	M6S M10x25	4	Hex screw M6S Fzb	
14	LM6M M10	4	Hex Nylon Lock Nut Fzb	
13	ISO 4759/3	1	Washer NB 8x22x1,5	
12	03-03239	1	Threaded rod M8x150 8.8 fzb	1
11	DK-00110	1	Endcap WN319 G32-M8	1
10	04-00407	1	Knob M8x25	1
9	04-00409	2	Flanged bearing Ø20 KFL004	1
8	03-02832	1	Turn wheel bracket	1
7	01-00777	1	Manual feed chain kit	4
6	03-02796	1	Bracket	2
5	03-02797	1	Cable & Wire mount	1
4	03-02813	1	Crank handle	1
3	03-02819	1	Crankshaft	1
2	03-02811	1	Chassis	1
1	DS-00169	1	Handle w.out end cap	2
Item no.	Art.no.	Qty.	Description	Issue







 
01-00777

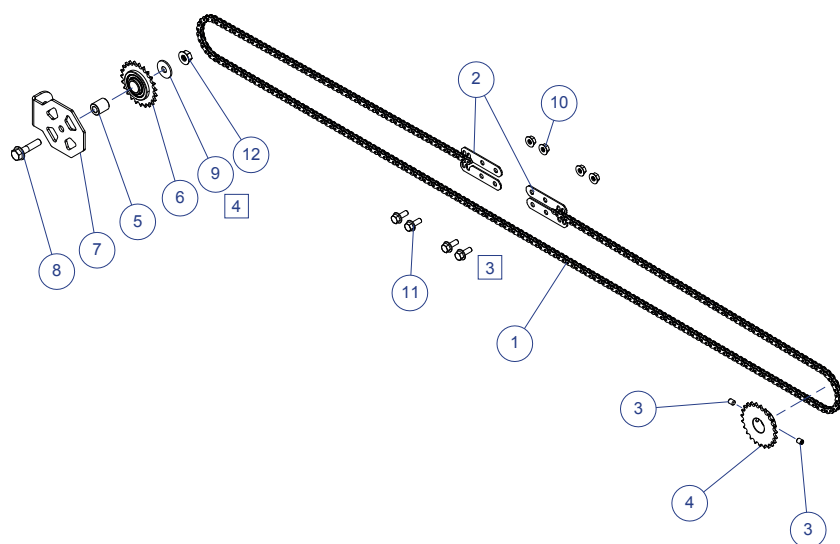

12	LM6MF M8 Fzb	1	Nylon lock flange nut Fzb	
11	M6SF M6x16	4	Flänsskruv M6SF DIN 6921	
10	LM6MF M6	4	Nylon lock flange nut Fzb	
9	ISO 4759/3	1	Washer NB 8x22x1,5	
8	M6SF M8x35	1	Flange screw M6SF DIN 6921	
7	03-03156	1	Turn wheel plate	1
6	04-00561	1	05B-1 Z=23 Tension sprocket	1
5	03-03159	1	Spacer D=15,8x8,1 L=18,5	1
4	03-03158	1	Sprocket 05B-1 z=23 d=20 L=14	1
3	P6SS M6x8	2	Pin screw	
2	03-03157	4	Chainholder	1
1	01-00697	1	Feed Chain (Manual)	1
Item no.	Art.no.	Qty.	Description	Issue

BOLTS/NUTS

     Definition of the fasteners on following pages.

	_____	Shoulder bolt		_____	Allen screw
	_____	Cross screw		_____	Allen screw (partially threaded)
	_____	Slotted screw		_____	Hex bolt
	_____	Locking screw		_____	Hex bolt (partially threaded)
	_____	Hex nut		_____	Flange screw
	_____	Flange nut		_____	Flange screw (partially threaded)
	_____	Flat washer		_____	Carriage bolt

ADDITIONAL SYMBOLS

The following symbols are used as supplements to the symbols above to describe the design of the parts.

			
Low	Tensilock	Lock	Counter-sunk

DIMENSIONS/LENGTH

The dimensions of the fasteners are written as a diameter measurement **(M)** ISO 68-1. For bolts, this is followed by a length measurement. The length of the bolt is measured from below the head to the tip of the bolt.

(Diameter)		(Length)
M8	x	20

 
ASSEMBLY



01-00696


1

-  — 1 x — 8x22x1,5
-  — 1 x — M8x35
-  — 4 x — M8
-  — 1 x — M8
-  — 1 x — 04-00561
-  — 1 x — 03-03159

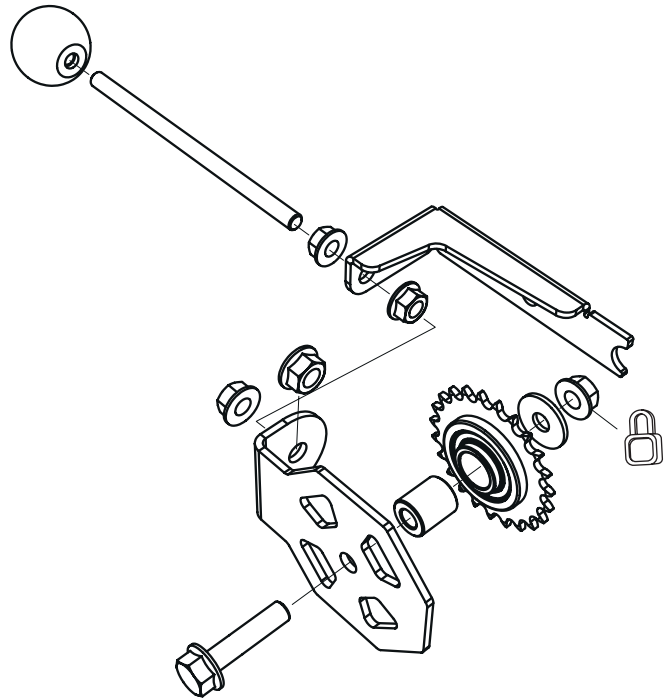


2

 -  — 2 x — 04-00409
-  — 4 x — M10x25
-  — 4 x — M10
-  — 4 x — M10

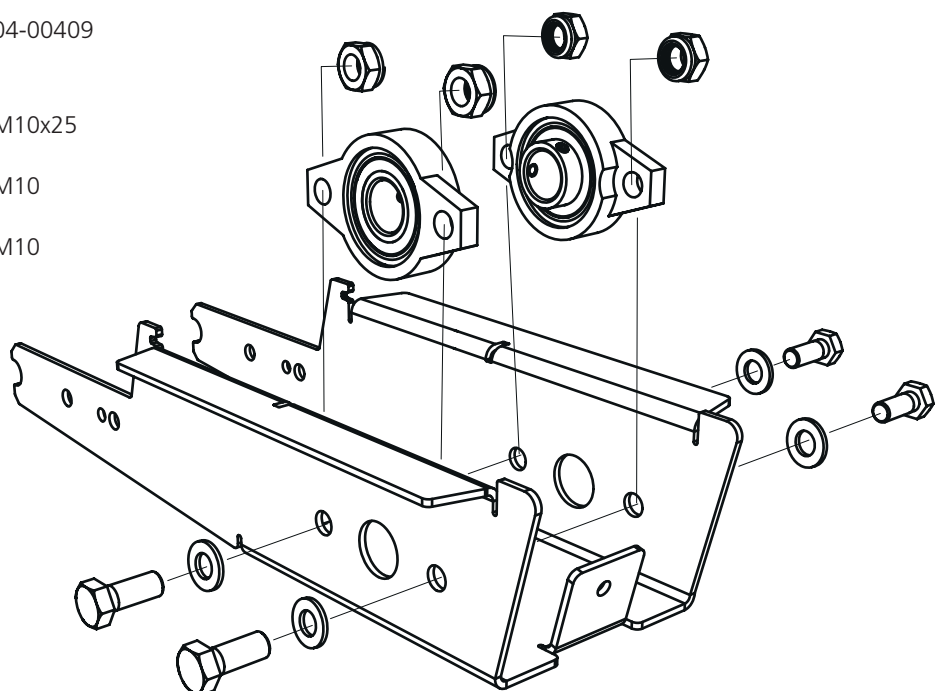


3 Mounting the crank handle


	— 1 x —	8x22x1,5
	— 1 x —	M8x20
	— 1 x —	M8
	— 1 x —	03-03158

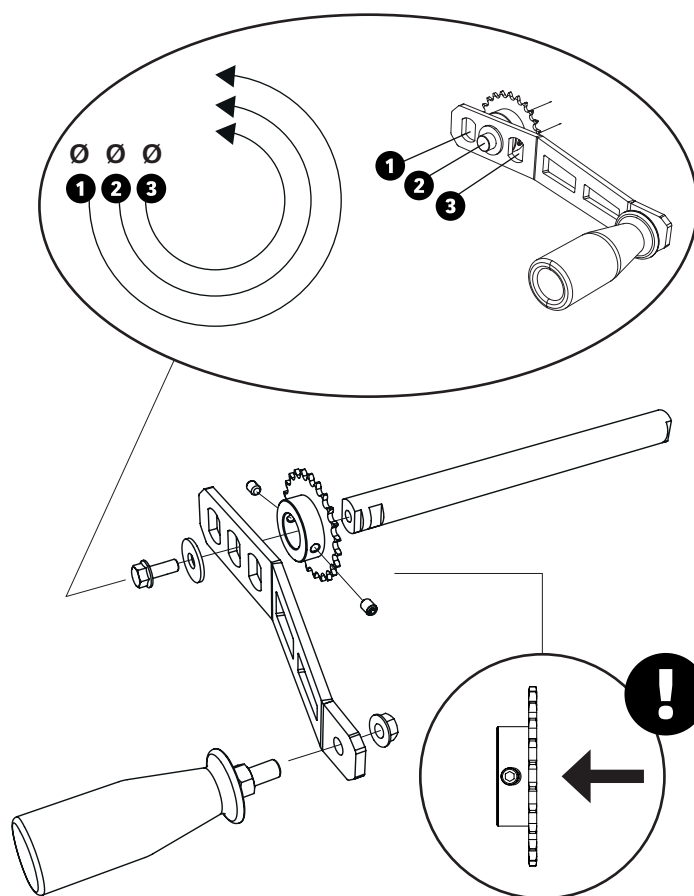 

 
The crank handle can be mounted on either the right or left side.

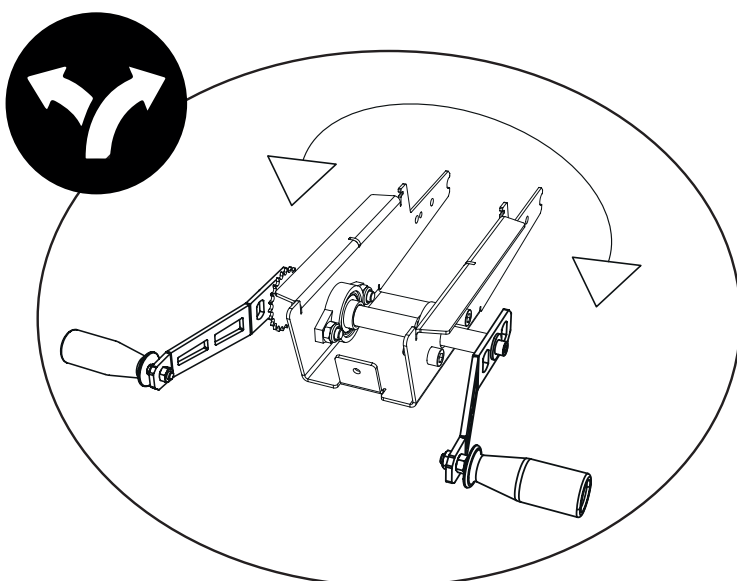

4

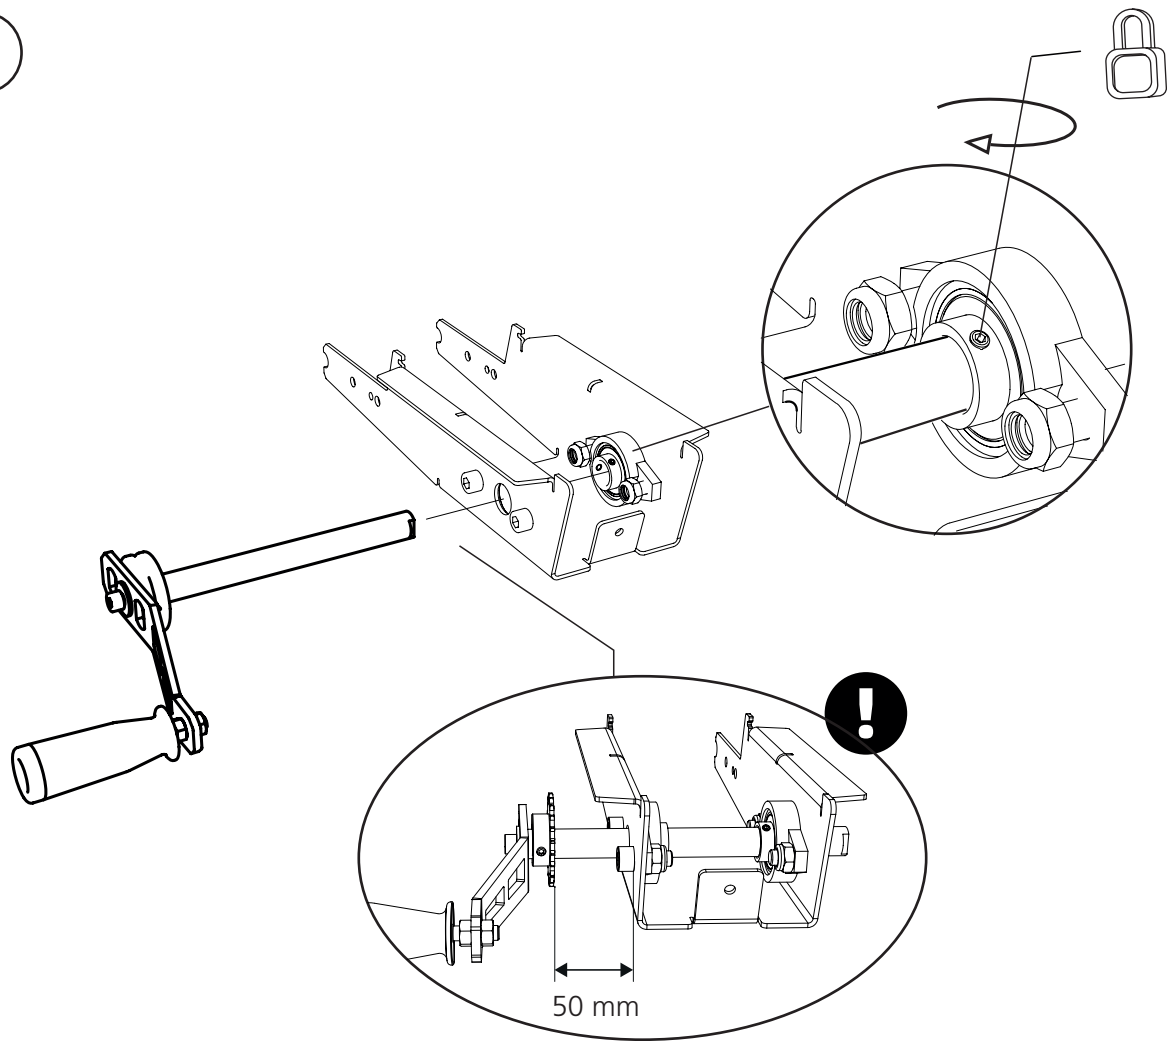 


5

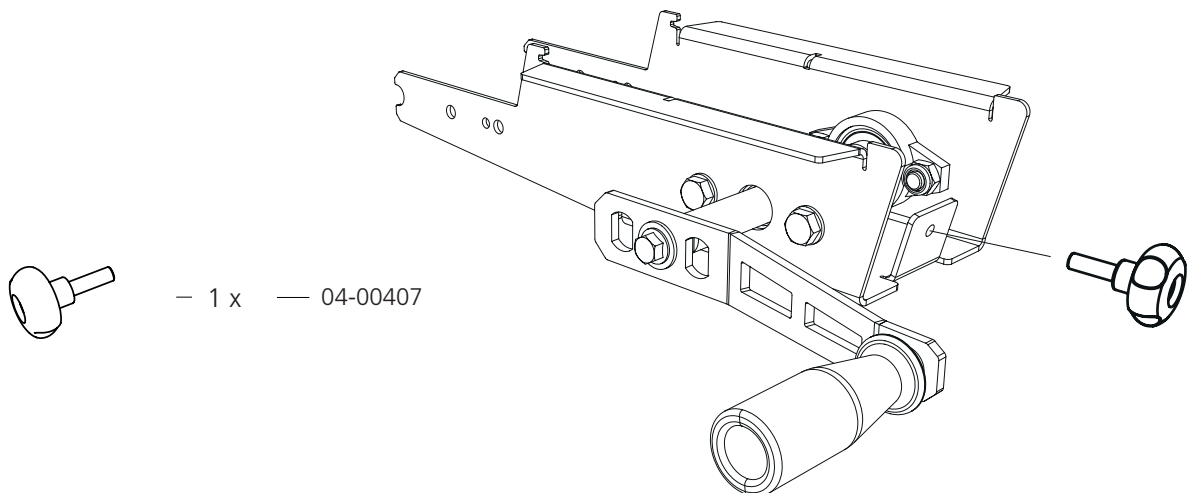 

6

The assembly is partially carried out using the existing screw that connects the strut to the guide rail.

 
-  — 1 x — M8x20
-  — 1 x — M8

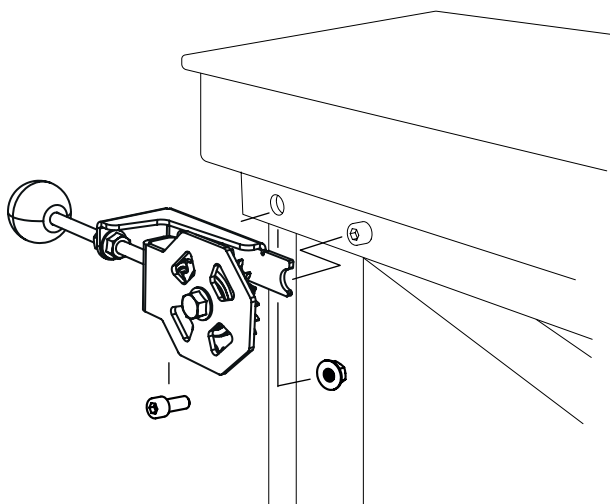



7

The assembly is partially carried out using the existing screw that connects the support leg to the guide rail.

 -  — 2 x — M8x20
-  — 2 x — M8

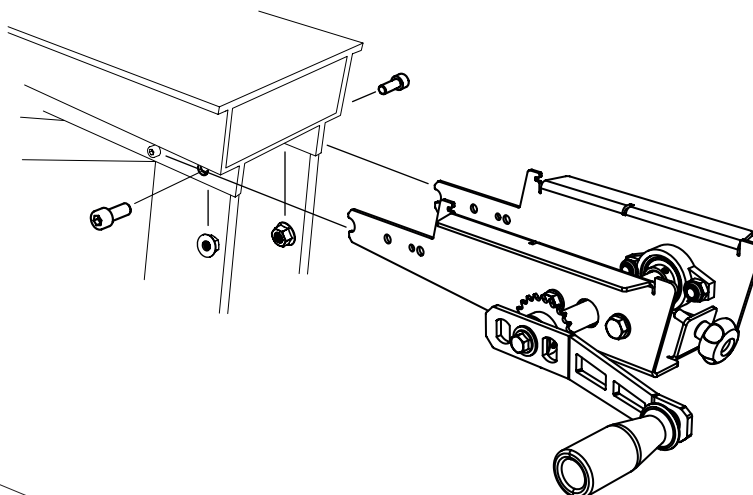


8

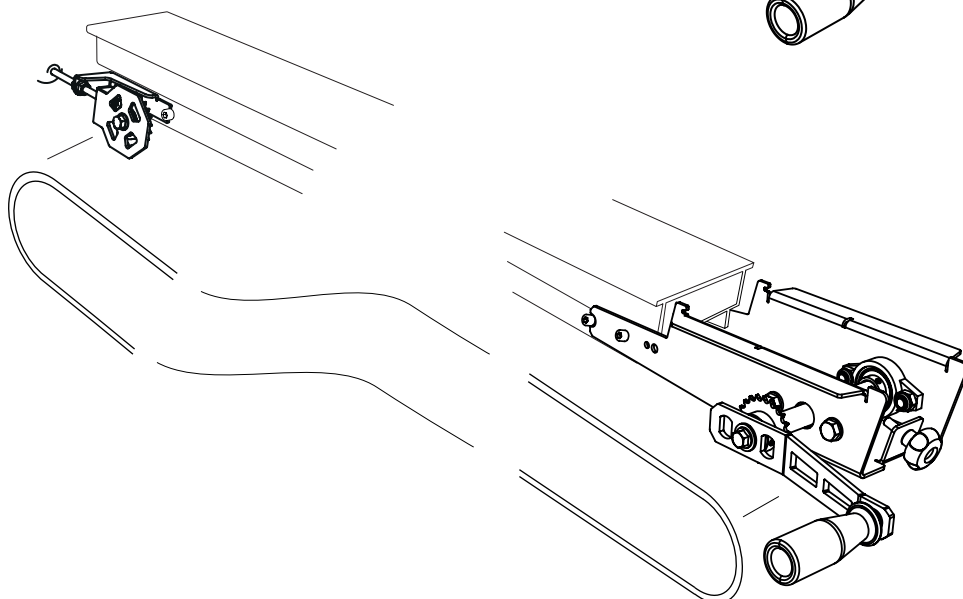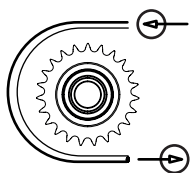  



9

 -  — 2 x — M8x20
 — 2 x — M8

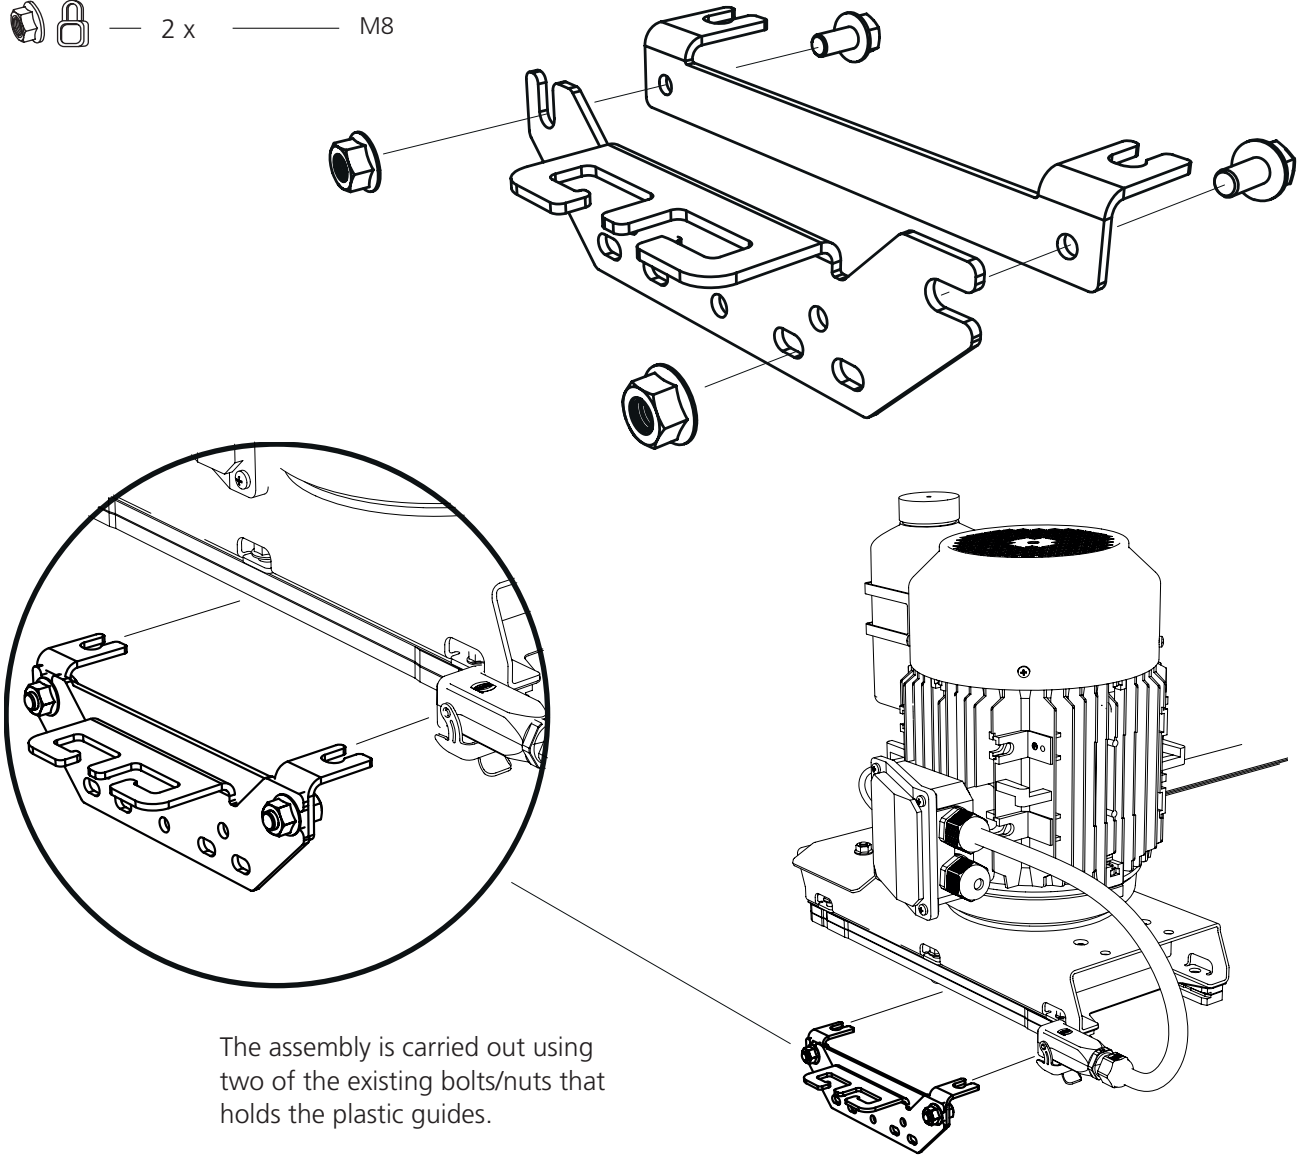

10

  -  — 4 x — M6x16
 -  — 4 x — M6
 -  1 x — 01-00697, 4 m
 -  1 x — 01-00720, 1 m
- Required for each 1 m extension

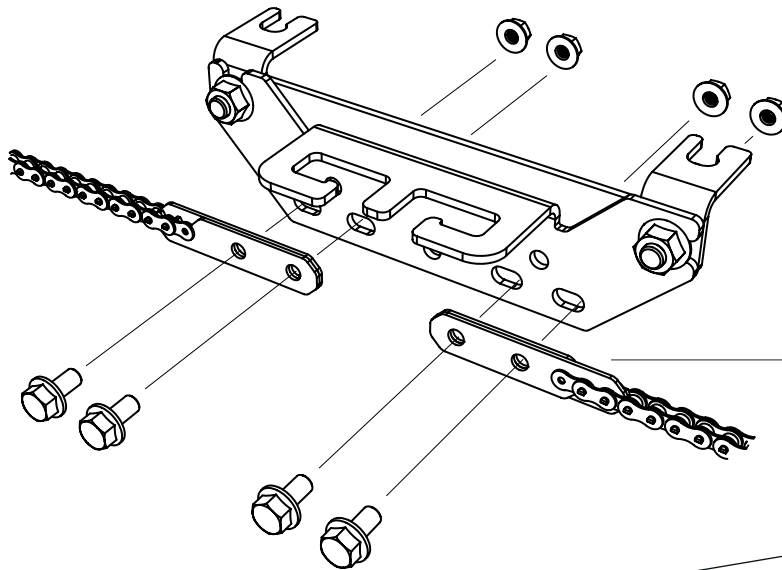
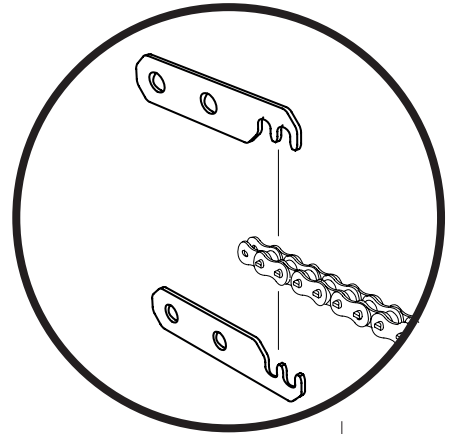


11

Tighten the drive chain so that there is 6-7 cm between the chains.


In order to adjust the tension, you need to loosen the flange nut on the tensioning mechanism's.

  Once the adjustment has been made, be sure to re-tighten the flange nut.

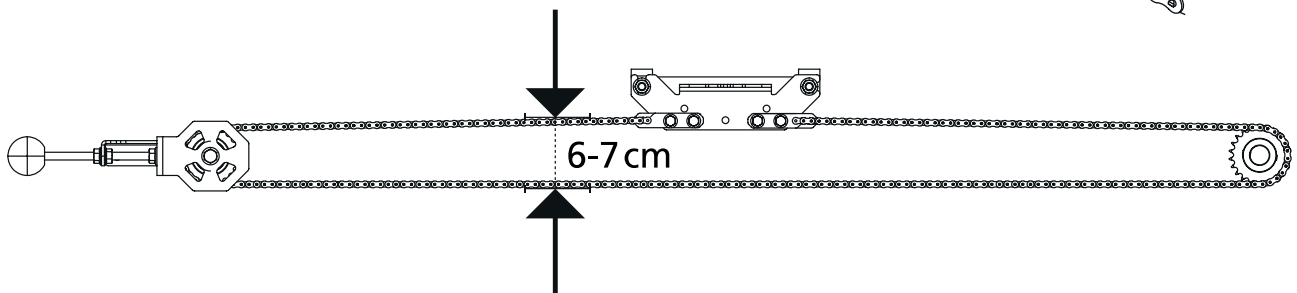
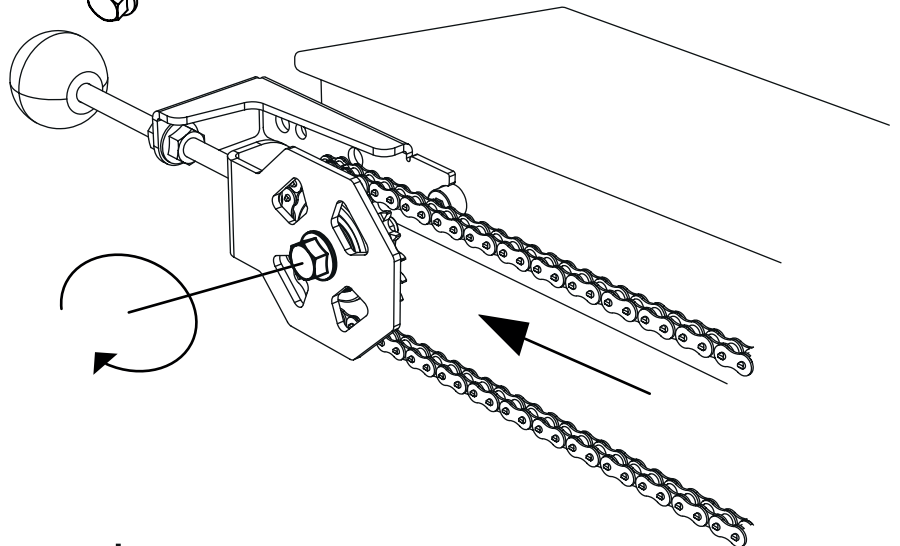


**01-00804****12**

 The top plate of the remote feed can be removed to allow storage of the switch box elsewhere when not in use.

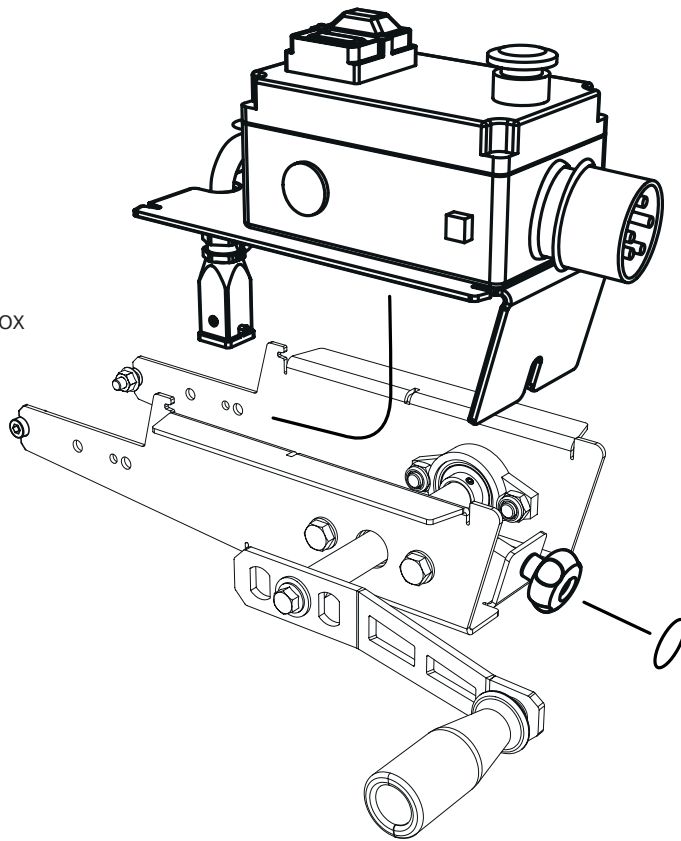**13**

  Attach the power cable for the saw unit using the wire bracket on the wire mount.

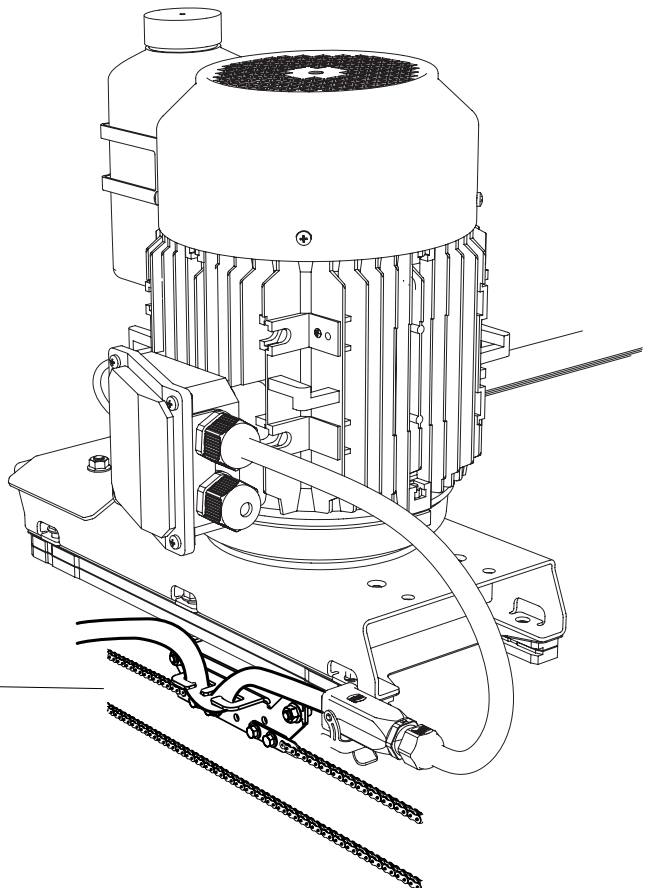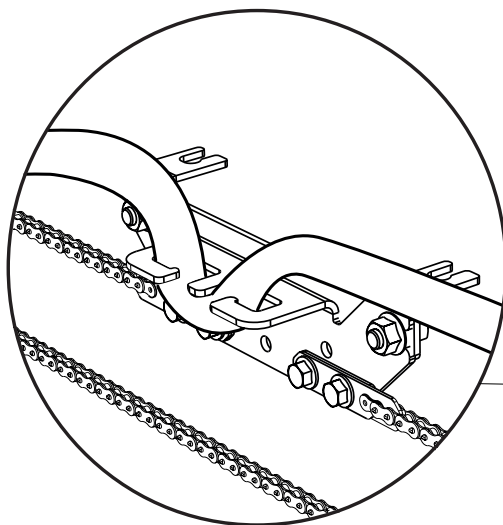



Declaration of Conformity

In accordance with Directive 2006/42/EC, Annex 2A

Logosol AB,
Fiskaregatan 2,
SE-871 33 Härnösand, Sweden
Tel. +46 611 18285

hereby declares that **Logosol manual remote feeding
for electric saw**

has been manufactured in conformity with: the Machinery
Directive 2006/42/EC, the EMC Directive 2014/30/EU

and has been manufactured in conformity with the
following harmonised standards:
EN ISO 12100:2010, EN 60204-1:2018

Fredrik Forssberg, CEO, is responsible for technical
documentation.

Härnösand, 27-10-2022

Fredrik Forssberg, CEO



Declaration of conformity

Logosol AB,
Fiskaregatan 2,
SE-871 33 Härnösand, Sweden
Tel. +46 611 18285

hereby declares that **Logosol manual remote
feeding for electric saw**

has been manufactured in conformity with:
Supply of Machinery (Safety) Regulations 2008
Electromagnetic Compatibility Regulations 2016

and has been manufactured in conformity with
the following harmonised standards:
BS EN ISO 12100:2010, BS EN 60204-2:2018

Fredrik Forssberg, CEO, is responsible for
technical documentatio

Härnösand 2022-10-27

Fredrik Forssberg, CEO



Fiskaregatan 2, S-871 33 Härnösand, SWEDEN
Phone +46 611 18285 | info@logosol.com | www.logosol.com