


## USER MANUAL

ORIGINAL USER MANUAL.

REV: 1

Part no. 0458-395-5431

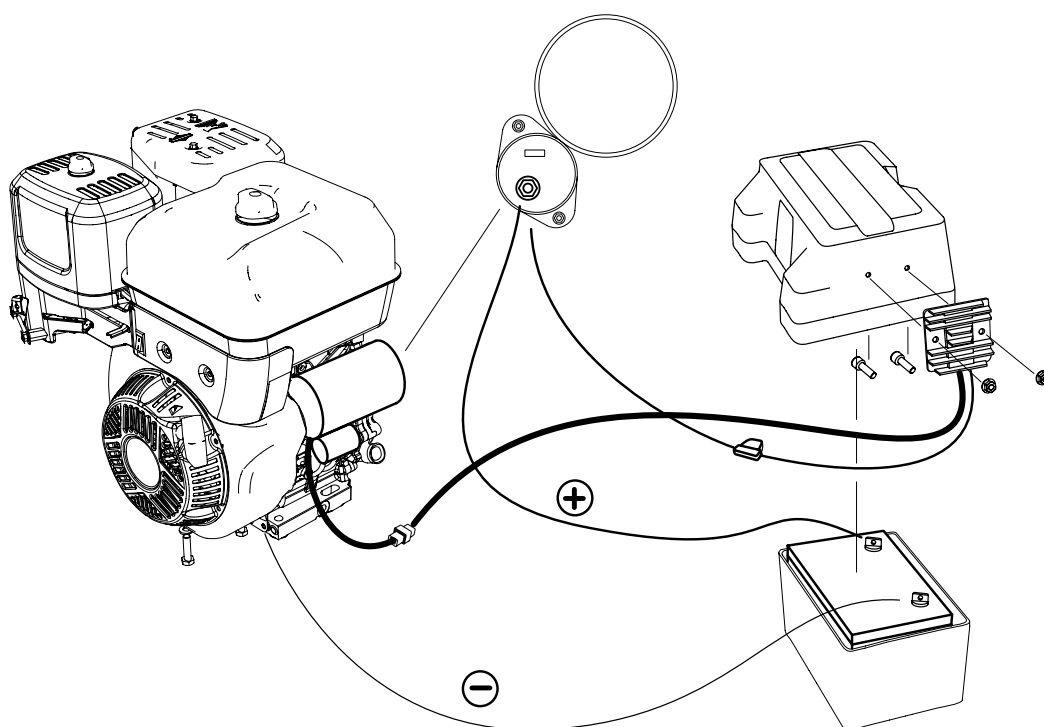

## LONCIN 15HP



Read through the user manual carefully and make sure you understand its contents before using the saw.



This user manual contains important safety instructions.



**WARNING!** Incorrect use can result in serious or fatal injuries to the operator or others.

EN

1




2 x – M6x25



2 x – M6x30



2 x

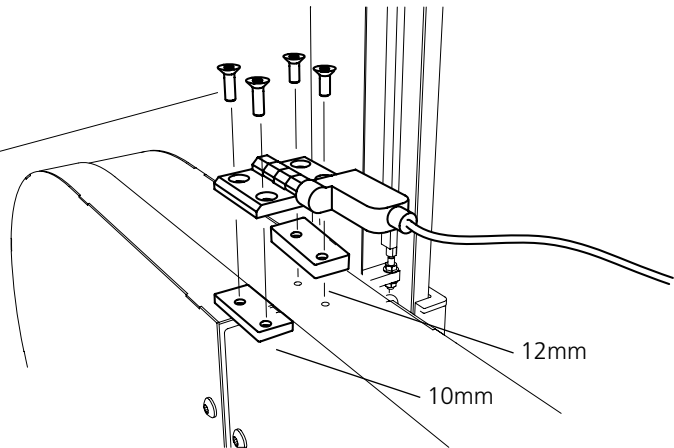


2



– 1st — Throttle wire



– 1st — Sheath


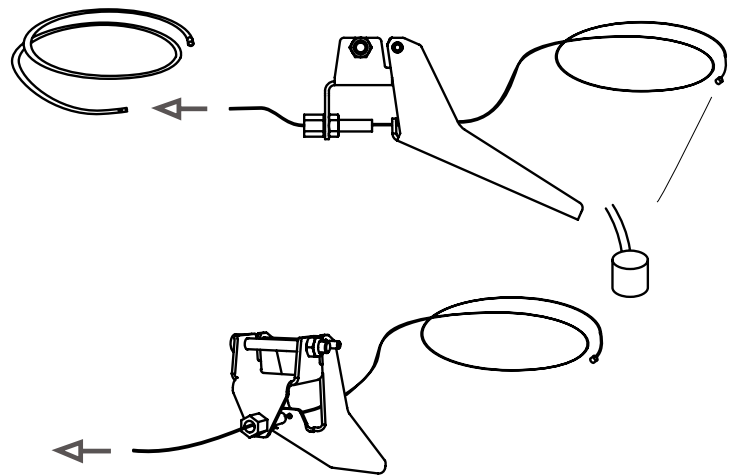


3


Mount the exhaust reflector on the exhaust pipe.



4 x – RXS 4,2x9,5

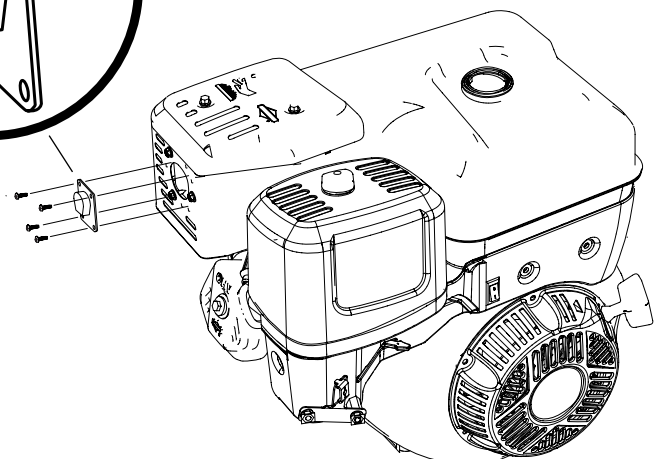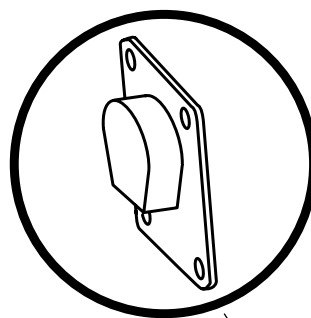

4

 


4 x – M10x40



4 x – M10



4 x – M10

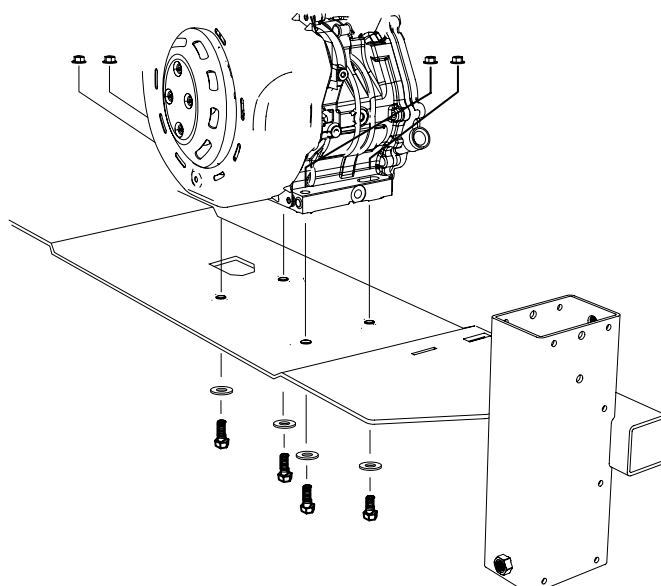

5



1 x



1 x – U6S 3/8-24 x2




1 x – SRKB 12,5x35x2



4 x




1 x – 03-02053

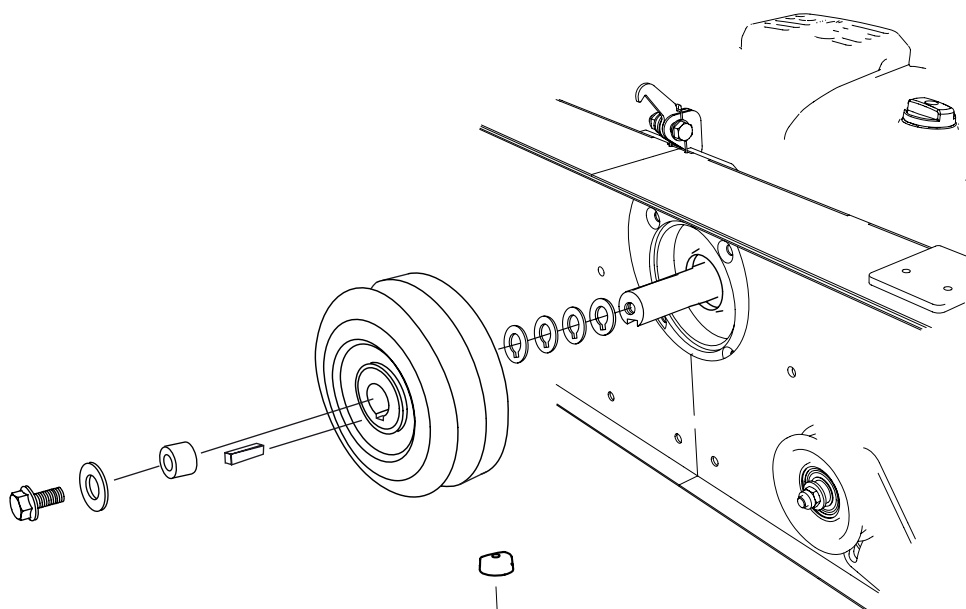



6

Throttle wire assembly: Start by removing the airbox filter and the lower part of the airbox.

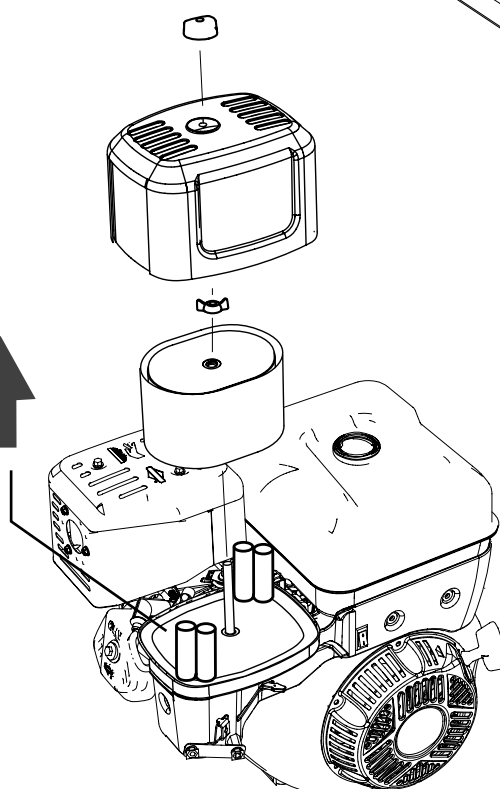


7

Attach the throttle cable in the bracket. ①  
Attach the end of the cable to the throttle control. ② Then, untighten the nut holding the throttle control. ③ Check that the throttle can return easily.

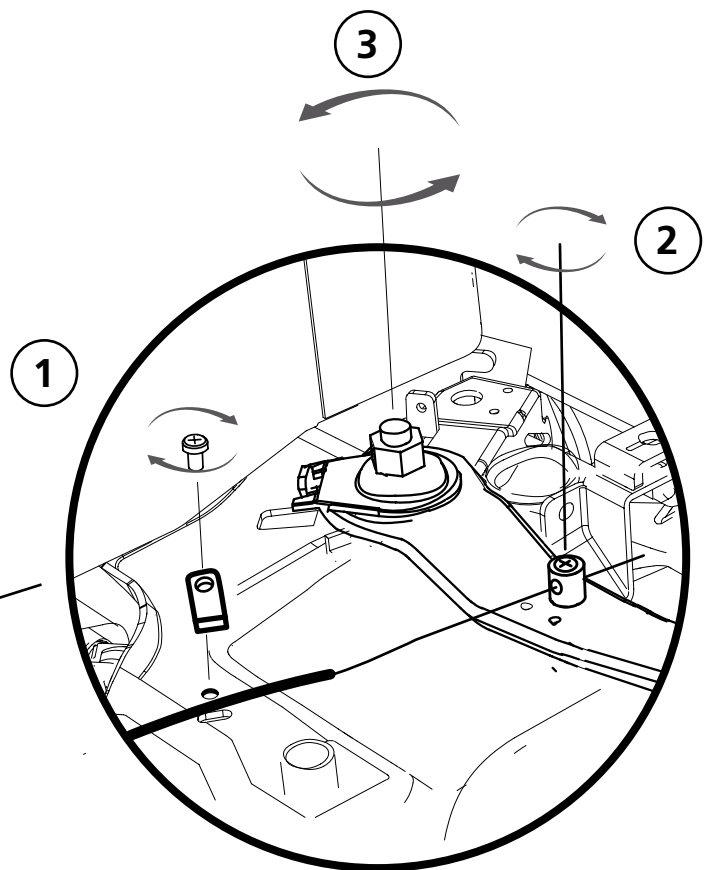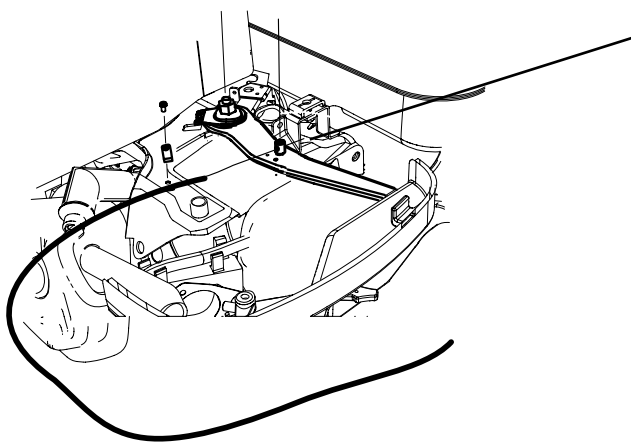

8


Mount the voltage regulator onto the battery box. ①  
Then, connect the red cable with the fuse holder to the solenoid. ② Then, connect the cable between the positive terminal of the battery and the solenoid. ③  
Then, complete the assembly by connecting the cable between the negative terminal of the battery and the engine chassis. ④

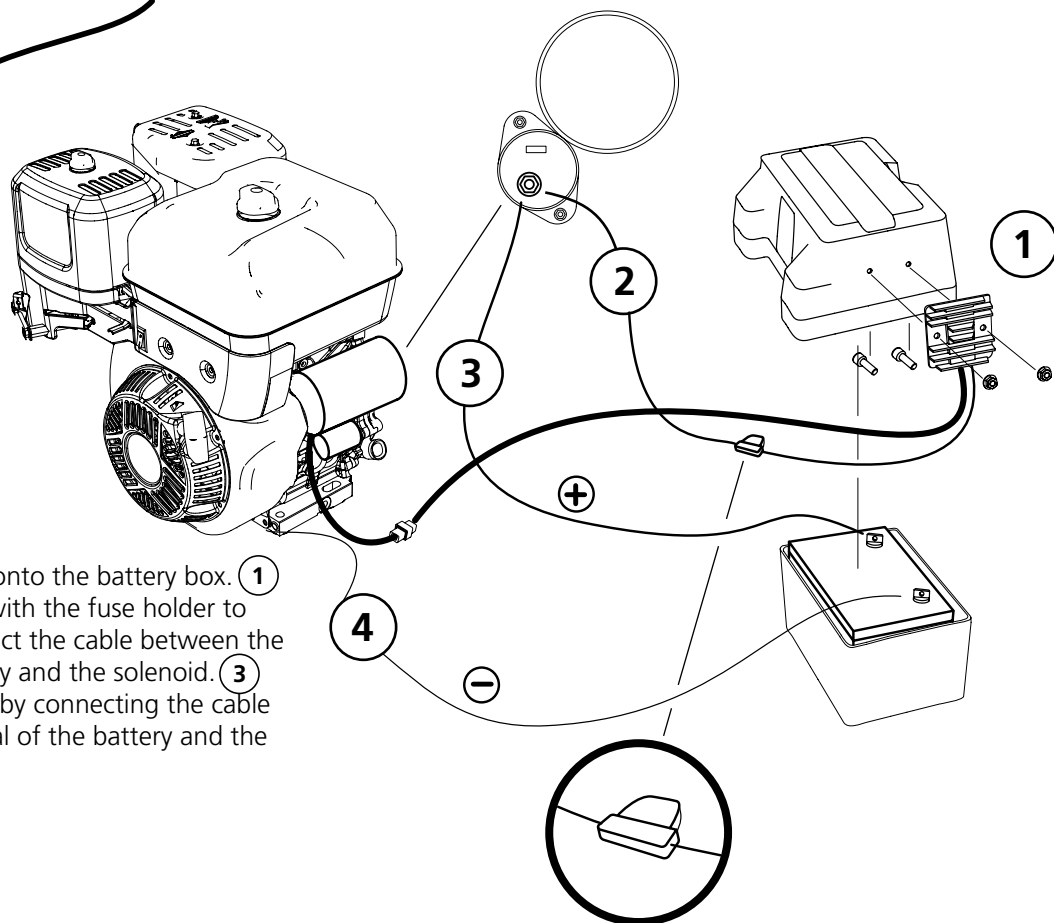

-  2 x – M6x25
-  2 x – M6

9

Connect the safety switch; the connector must be connected to the divisible connector in the cable kit. ① Then, couple the joint piece and connect the switch. Then, couple the ring cable lug to the motor chassis. ②

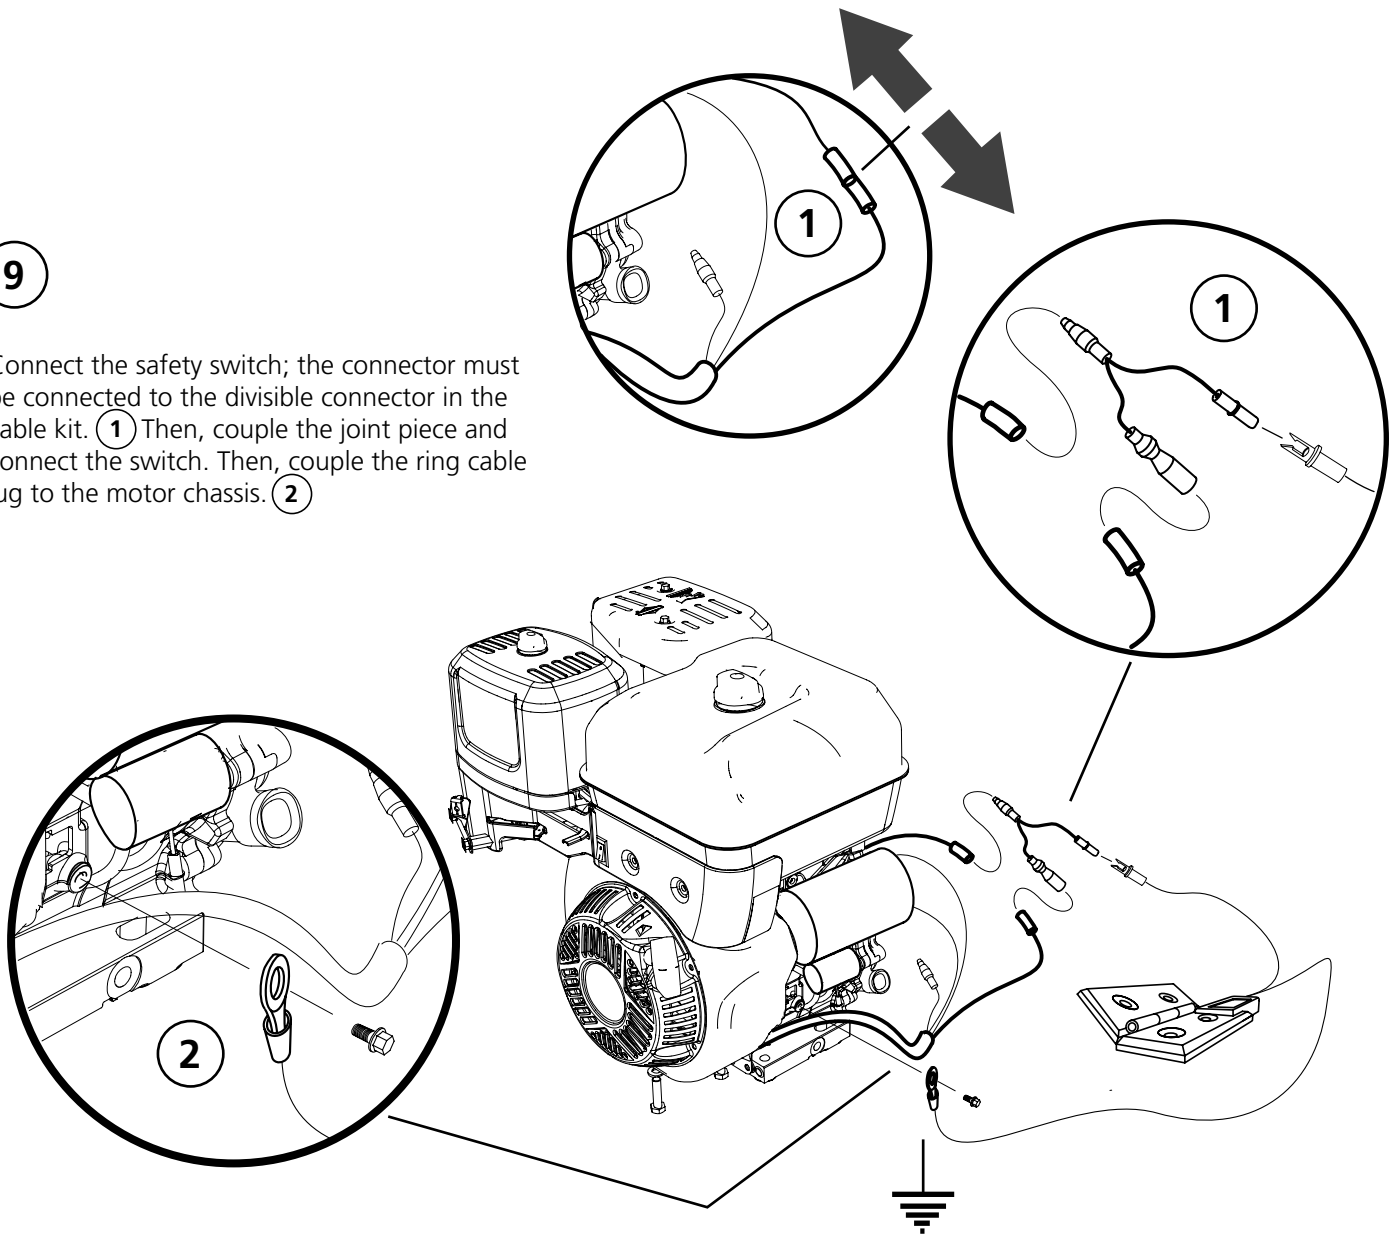

## SAFETY SWITCH WIRING DIAGRAM

