
## **ILOGOSOL**

### **USER MANUAL**

ORIGINAL USER MANUAL.

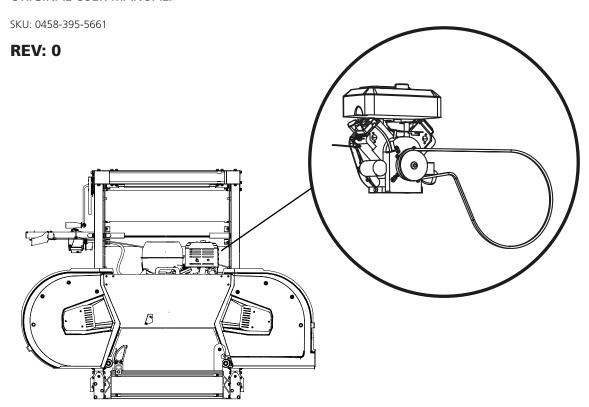

# **13,5 HP**BRIGGS & STRATTON

This manual describes installation of the petrol engine for the Logosol band sawmill.

Please see the user manual for your band sawmill for information on assembly, settings and safety instructions.

#### **ILOGOSOL**




## FINAL SAW HEAD ASSEMBLY, 13 HP BRIGGS & STRATTON



Read through all the set-up instructions before starting to set up, then follow the instructions step by step as you work.



After assembly, follow the instructions under *Setup sequence* in the sawmill manual to complete setup before starting the machine.

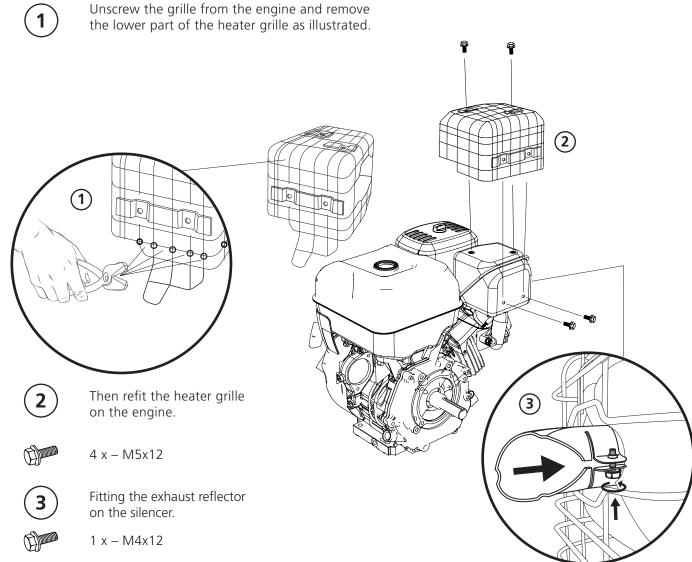



WARNING! Heavy! Risk of injury.



**WARNING!** Risk of entrapment.




Two people are always required to help with heavy lifting.





Wear protective gloves and handle the engine carefully when placing it down on the engine shelf.

#### **INSTALLATION: ENGINE AND THROTTLE CABLE**

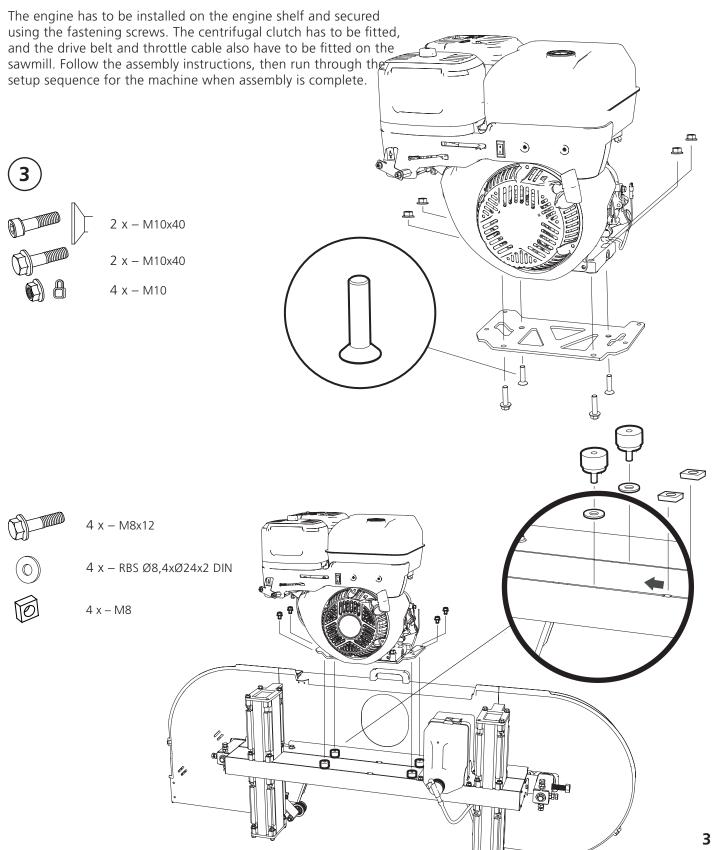

#### 目LOGOSOL

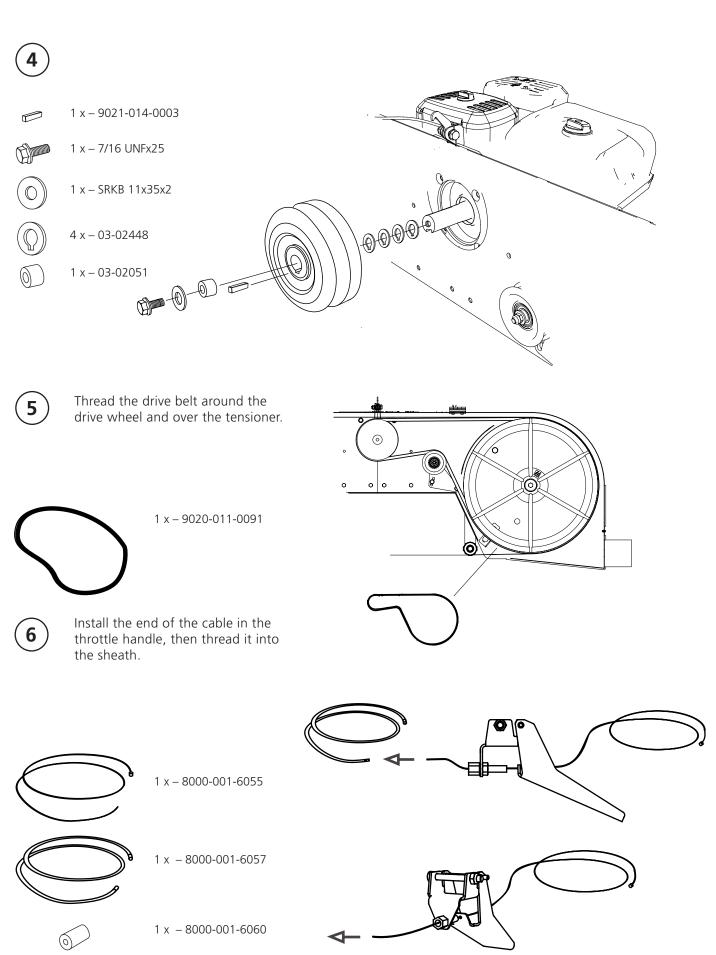


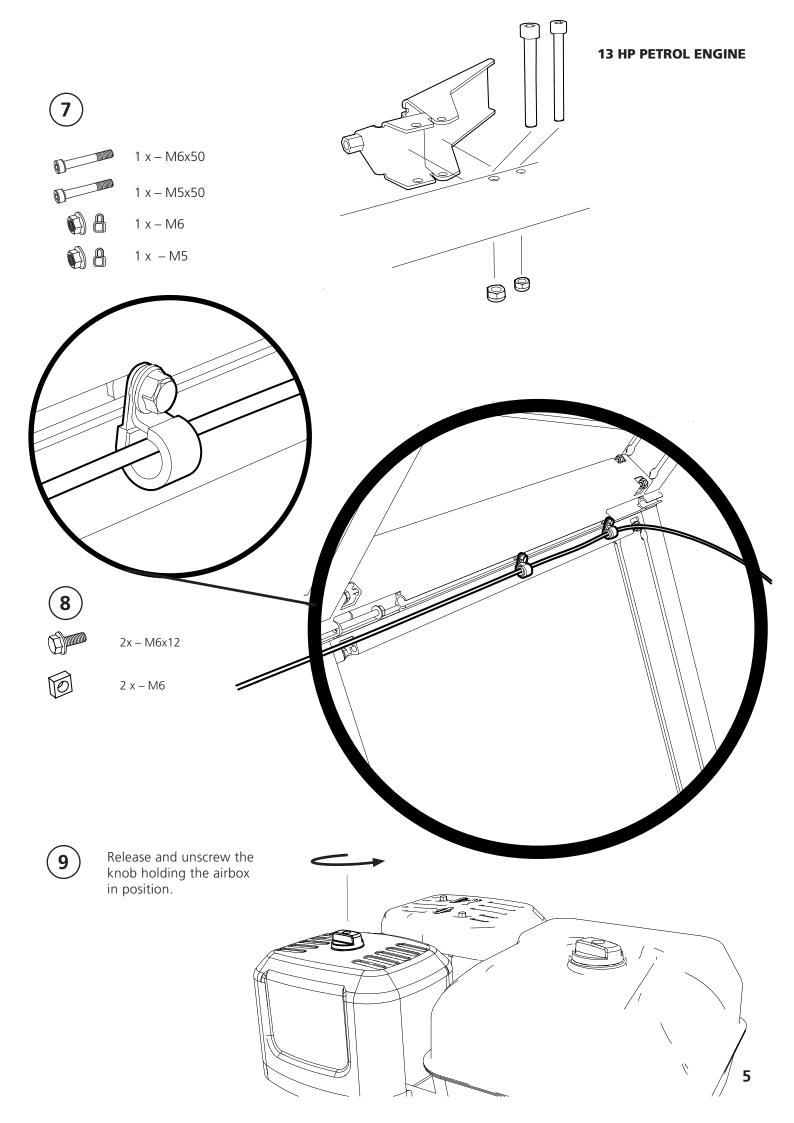

#### **目LOGOSOL**

(10)

Release the wing nut and remove the air filter.

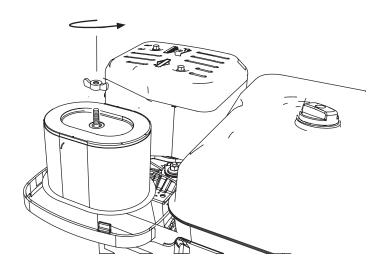

**WARNING!** Risk of serious injury.



Before adjusting the throttle cable tension on the engine: turn the ignition to OFF and close the fuel valve.



Always start the machine from the operator's station. Always switch off the machine before adjusting the throttle cable tension on the engine side.



**WARNING!** Risk of burn injuries. The engine and its muffler get very hot during operation and remain hot for a while after shutdown.




Allow the engine and silencer to cool before servicing or performing maintenance on the machine.



#### **THROTTLE ADJUSTMENT**

- Start by adjusting the throttle cable at the throttle handle so that you have equal adjustment travel in both directions (1)
- Attach the other end of the cable housing to the clamp on the engine **(2)**
- Screw the cable into the nipple (3). Make sure that the throttle is in the neutral/unaffected position when doing this.
- Check that you have 1 to 3 mm of clearance in the throttle handle, and that the cable moves freely. Adjust the cable tension at the throttle handle (1), if necessary
- Start the engine and check that it is idling and that the saw blade does not move while the throttle handle is in idle position. Adjust the cable tension at the throttle handle (1), if necessary
- Secure the adjustment using the locking nuts (4)

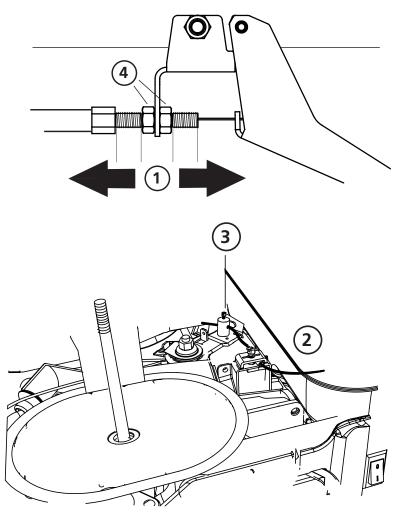



**WARNING!** Risk of serious injury.



The hinge switch for the machine has to be fitted before commissioning the machine



Always switch off the machine from the operator's position before working on the saw head.





2 x - M4x35





2 x - M4

10mm


12mm



**WARNING!** Risk of burn injuries. The engine and its muffler get very hot during operation and remain hot for a while after shutdown.



Allow the engine and silencer to cool before servicing or performing maintenance on the machine.

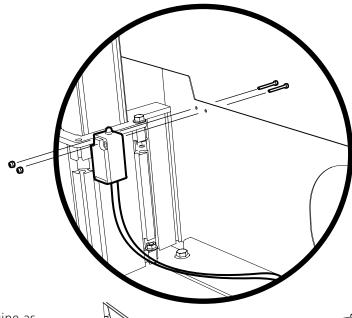




Now connect the safety switch to the engine as illustrated.

- Connect **(1)** to the lower engine connector.
- Then secure (2) to the top screw.

How to check the safety function: Start by opening the cover. Turn the ignition key from the operator's station to start the engine. The installation is correct if the engine does not start when the key is turned. Switch off the engine from the operator's station if the engine starts with the cover open. Then double-check the connection and contact Logosol for support.

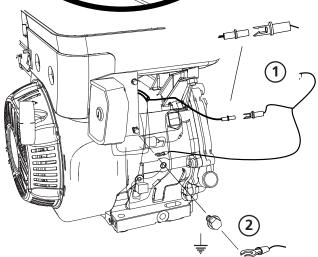

WIRING DIAGRAM FOR SAFETY SWITCH

Safety switch

Black

Grey

Blue

Svart

Ignition off

Ignition off



Now you have finished installing the engine, go back to the manual for your band sawmill and carry on with the setup sequence, starting at the point as indicated in the instructions below.

#### **SETUP SEQUENCE**



Read through all the set-up instructions before starting to set up, then follow the instructions step by step as you work.



#### **IMPORTANT!**

It is important to adjust the saw head before starting to ensure satisfactory sawing and the correct functioning of the sawmill. Follow the setup sequence carefully! Certain adjustments affect other machine settings.

## **ILOGOSOL**

Arkivvägen 6, SE-871 53 Härnösand, Sweden +46 611-182 85 | info@logosol.com | www.logosol.com