








# ASSEMBLY INSTRUCTIONS

Ref. No: 0458-395-0591

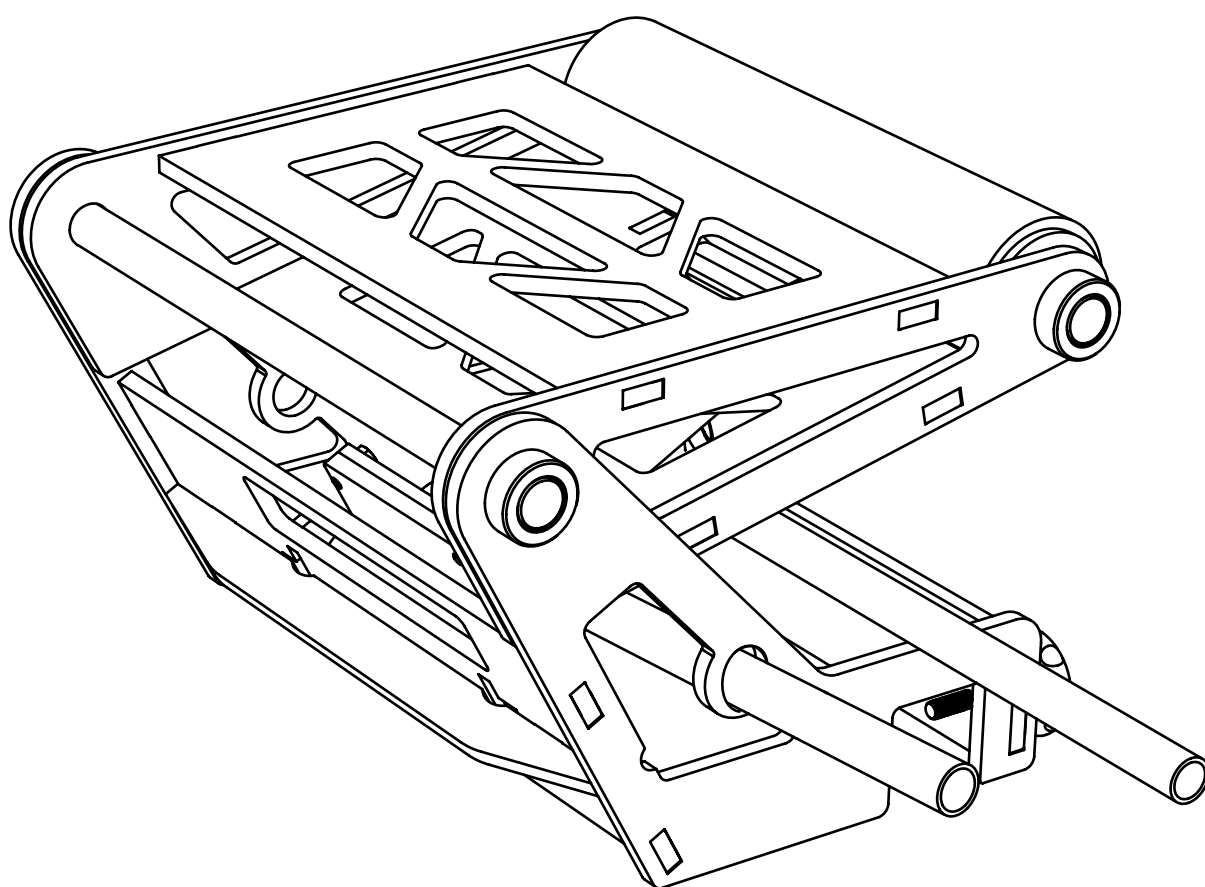

## HYDRAULIC TOE BOARD

     
## COMPONENTS
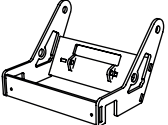
|                                                                                                 |                                                                                     |       |   |                   |          |
|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------|---|-------------------|----------|
|                | _____                                                                               | 1 x   | — | Link arm          | SR-00004 |
|                | _____                                                                               | 1 x   | — | Lower bracket     | 02-00356 |
|                | _____                                                                               | 1 x   | — | Roller            | 02-00377 |
|                | _____                                                                               | 1 x   | — | Lock plate        | DR-00055 |
|                | _____                                                                               | 1 x   | — | Bottom mount      | SR-00006 |
|               | _____                                                                               | 1 x   | — | Top mount         | SR-00007 |
|              | _____                                                                               | 2 x   | — | Knob              | DK-00006 |
|              | _____                                                                               | 1 x   | — | Attachment frame  | DR-00060 |
|              | _____                                                                               | 1 x   | — | Top roller axle   | DR-00071 |
|              | _____                                                                               | 1 x   | — | Link arm axle     | DR-00070 |
|              | _____                                                                               | 1 x   | — | Top mount axle    | DR-00074 |
|              | _____                                                                               | 1 x   | — | Bottom mount axle | DR-00073 |
|              | _____                                                                               | 8 x   | — | Lock ring         | DK-00004 |
|              | _____                                                                               | 1 x   | — | Lock plate        | DR-00059 |
|              | _____                                                                               | 1 x   | — | Jack              | DS-00008 |
|              | _____                                                                               | 1 x   | — | Toe board holder  | 02-00357 |
| <br>Bolt bag |  | — 4 x | — | Hex bolt M6x12    |          |
|                                                                                                 |  | — 2 x | — | Hex bolt M6x16    |          |
|                                                                                                 |  | — 2 x | — | Hex bolt M6x20    |          |
|                                                                                                 |  | — 2 x | — | Flat washer M6    |          |


## ASSEMBLY

**1**


Fit the roller to the link arm. Secure the axle with lock rings.

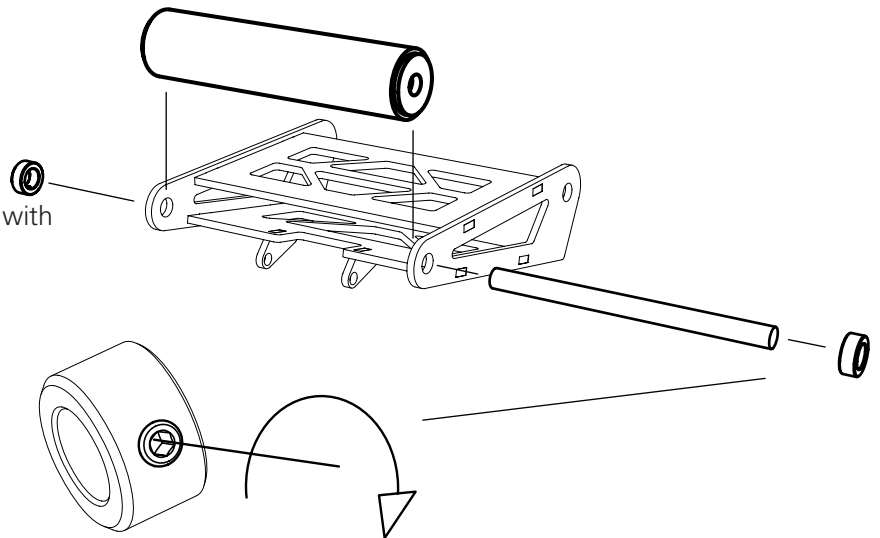**2**

Fit the top mount to the link arm. Secure the axle with lock rings.

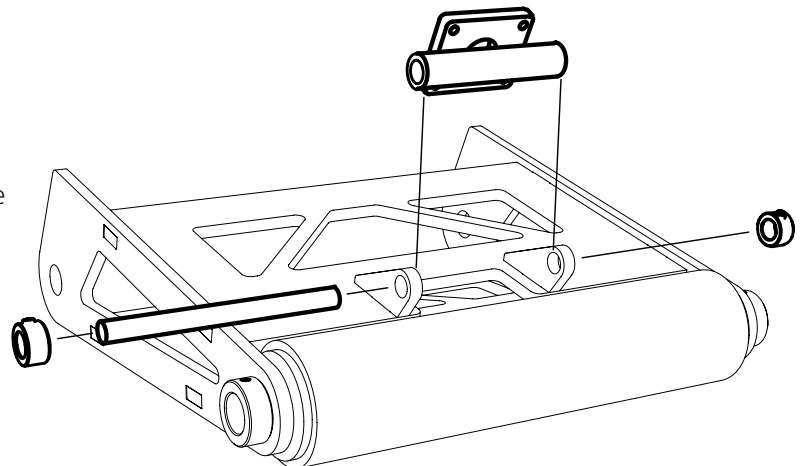**3**


Fit the knobs to the lower bracket.

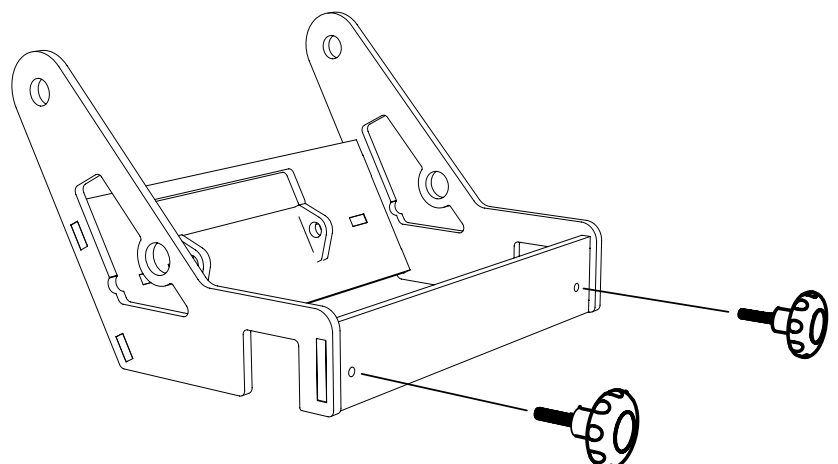

## ASSEMBLY

4

Fit the bottom mount to the lower bracket.  
Secure the axle with lock rings.

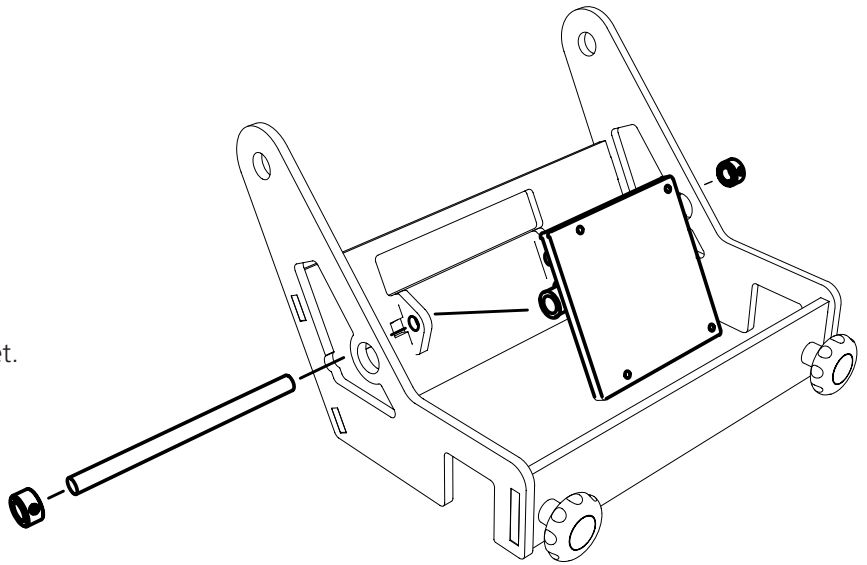


5

Fit the attachment frame to the  
bottom mount.



— 2 x — Hex bolt M6x16

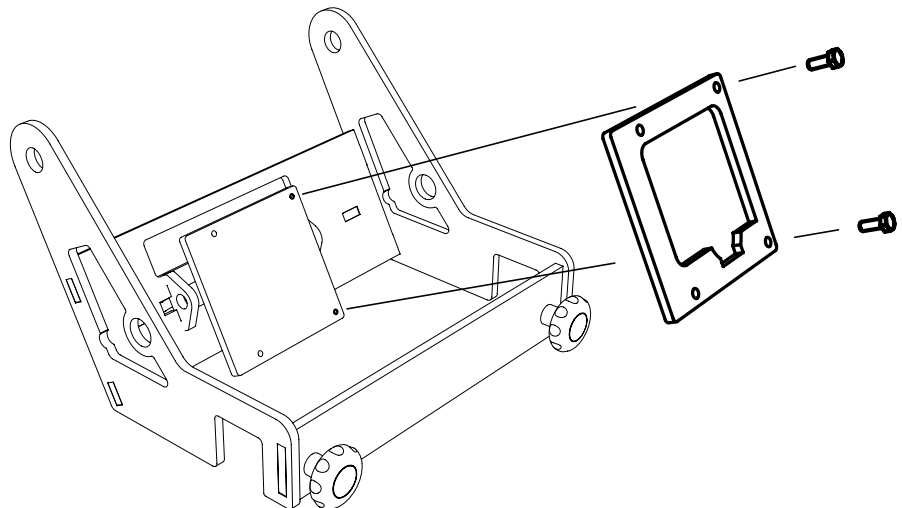

6


Install the jack and secure it with the  
lower lock plate. Note that you should  
use flat washers as spacers between the  
bottom mount and the lock plate.



— 2 x — Hex bolt M6x20




— 2 x — Flat washer M6

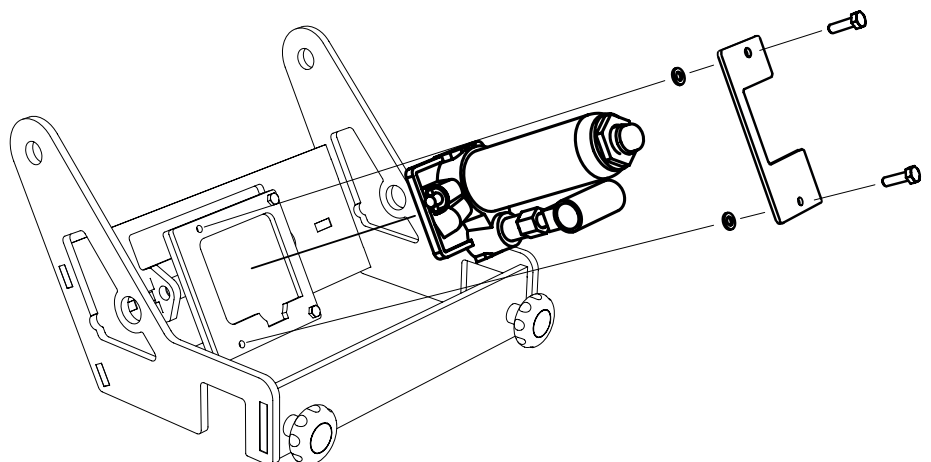

## ASSEMBLY


7

Fit the link arm to the lower bracket. Secure the axle with lock rings.

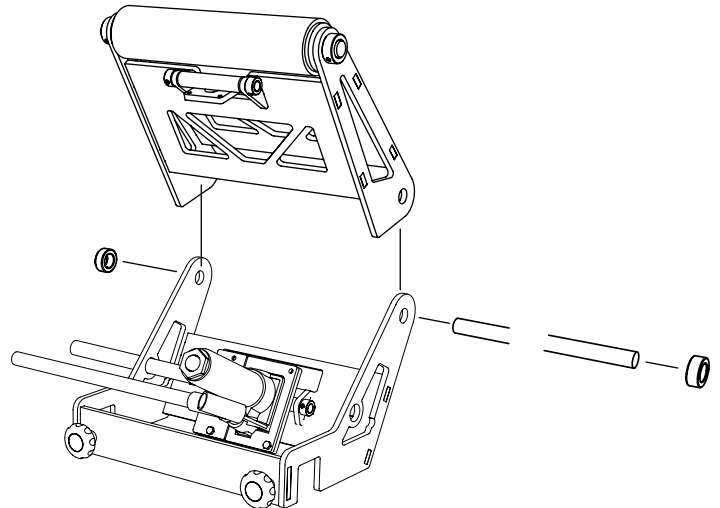


8

Insert the lever pipe in the jack.

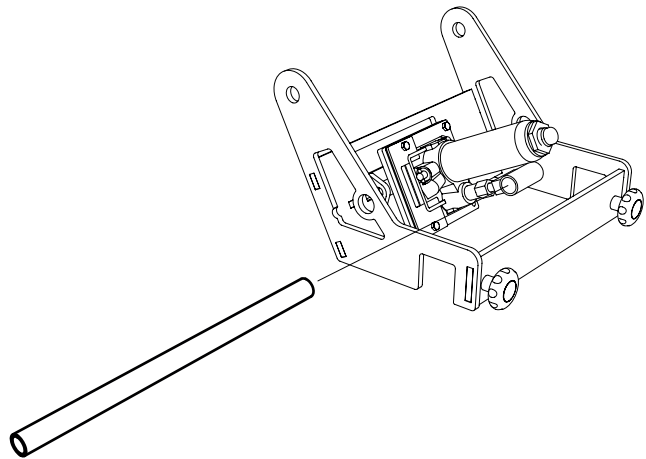

9


Insert the release bolt pipe in the jack, to enable it to be lowered.

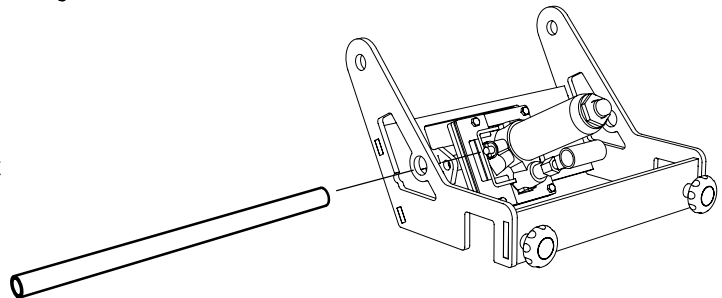

10

Secure the jack to the top mount, using the lock plate.


 — 4 x — Hex bolt M6x12

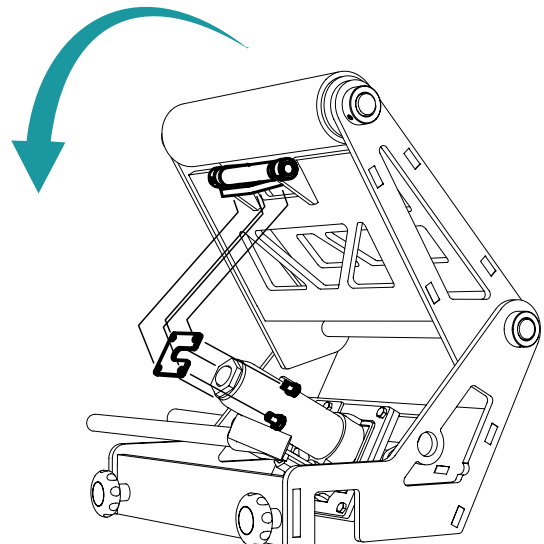

## ASSEMBLY

11

 
Prepare the bolt joints for the attachment of the toe board holder to the rails. Screw the nuts onto the bolts until 20 mm threading is visible.



— 4 x — Hex bolt M12x 90




— 4 x — Hex nut M12

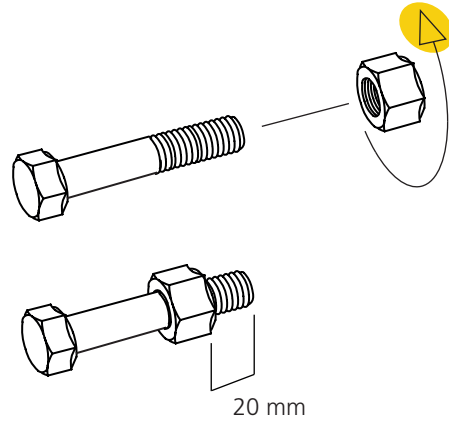

12

 
Fit the toe board holder to the rails. We recommend you to position it before the last cross bunk at the end of the rail frame.



— 4 x — Bolt joint




— 4 x — Flange nut M12

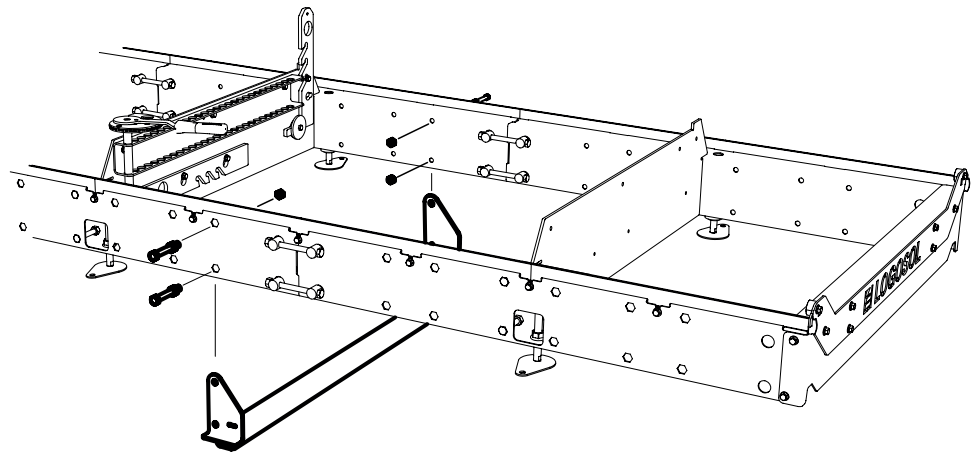

13


Install the toe board on the toe board holder. Secure the position of the toe board with the knobs.

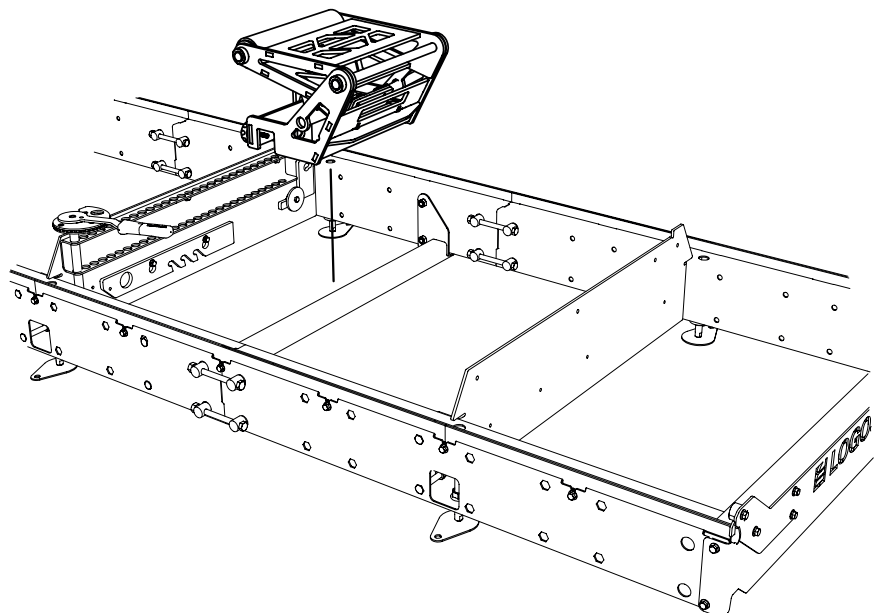

# FUNCTIONS


## THE POSITION OF THE TOE BOARD

The lateral position of the toe board is adjustable along the toe board holder. Always try to position the toe board so that it is centred under the log that is to be lifted. Lock the toe board with the knobs on its front.

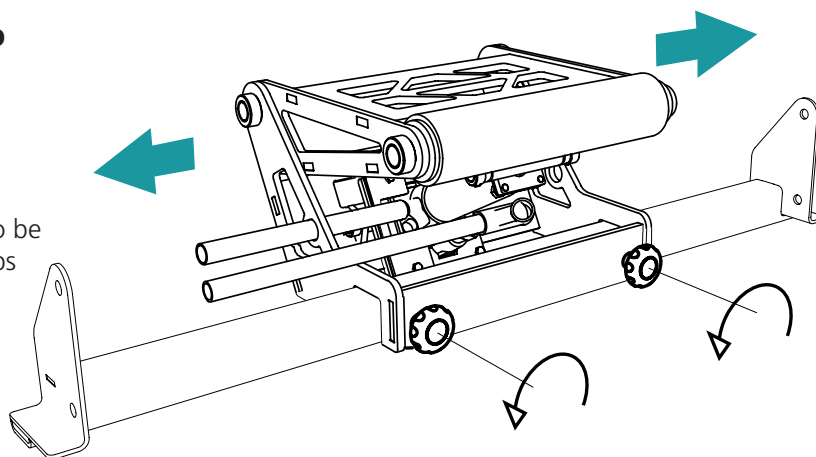


## RAISING THE TOE BOARD

The toe board is adjustable in height. Pump the jack lever to raise the toe board.

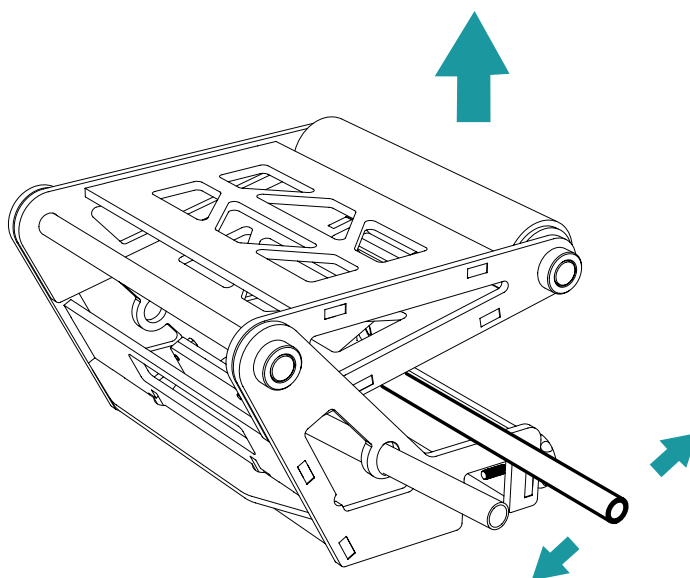

## LOWERING THE TOE BOARD

To lower the toe board, you turn the release bolt on the jack by using the release bolt pipe. Note that you have to retighten the release bolt to be able to raise the toe board again.

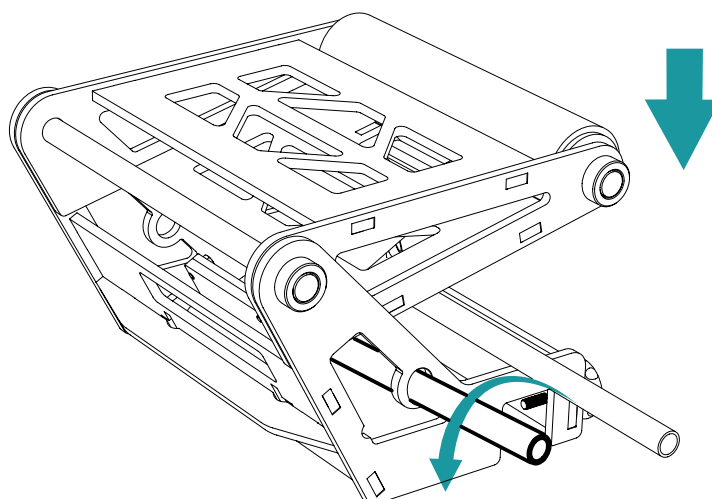



Fiskaregatan 2, 871 33 Härnösand, SWEDEN  
+46 611 182 85 | [info@logosol.com](mailto:info@logosol.com) | [www.logosol.com](http://www.logosol.com)