


ASSEMBLY INSTRUCTIONS

Ref. no. 0458-395-0211 **REV:2**

COMPONENTS


6600-00-7025

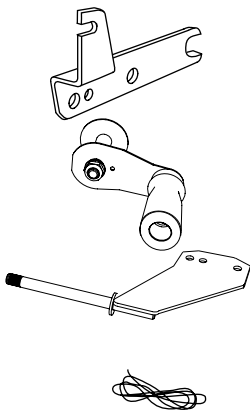

_____	1 x	_____	03-02788
_____	1 x	_____	01-00286
_____	1 x	_____	02-00444
_____	1 x	_____	999-000-6011

(Only included for electric saws)

01-00609-400V
01-00609-230V


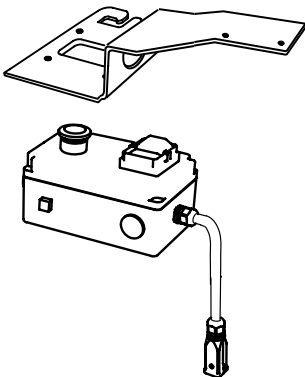


_____	1 x	_____	03-02887
_____	1 x	_____	01-00588 (1) 400V
		_____	01-00588 (2) 230V



BASIC CRANK FEEDING

FOR SAW UNITS




ASSEMBLY: CRANK

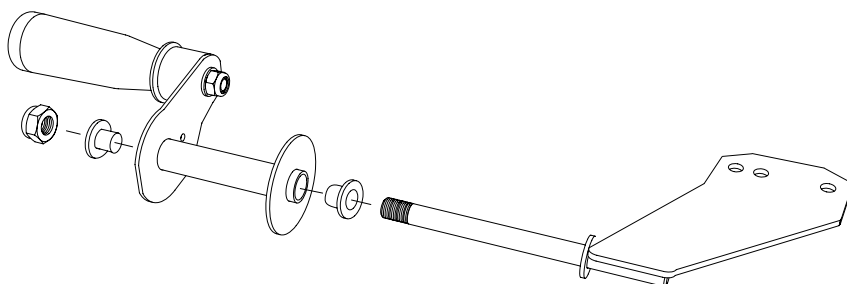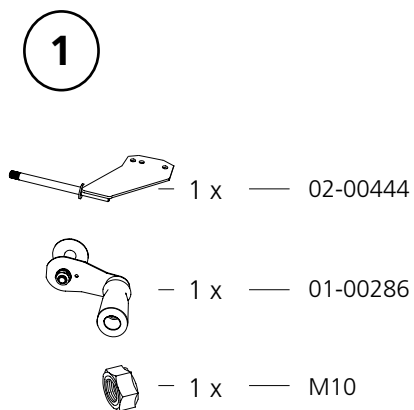


ASSEMBLY: CRANK ON CHAINSAW CARRIAGE

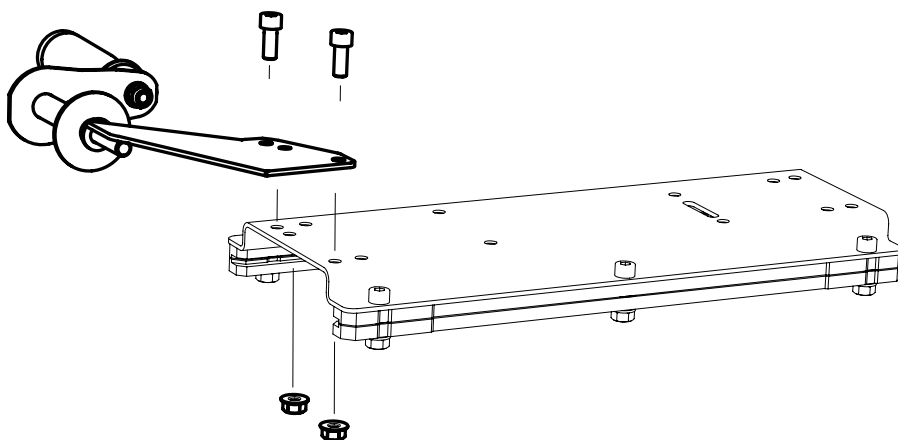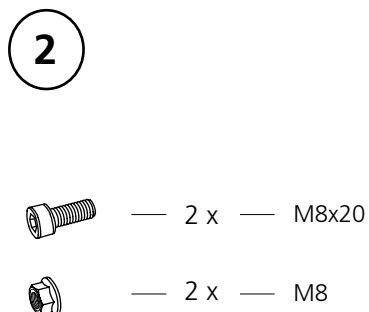

  ASSEMBLY: CRANK ON ELECTRIC SAW CARRIAGE

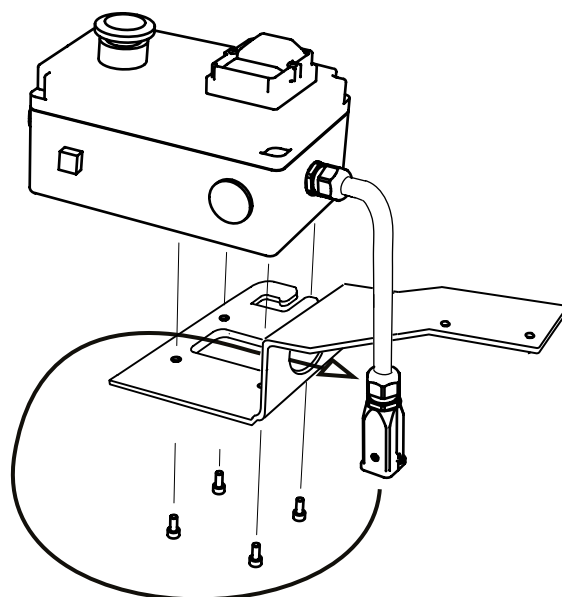

To install the crank handle on the electric saw, you first remove the existing handle and then fit the crank handle using the existing hole pattern and the original bolts. Assemble in the following order: handle, mount+electrical box, saw carriage and the crank under the saw carriage.

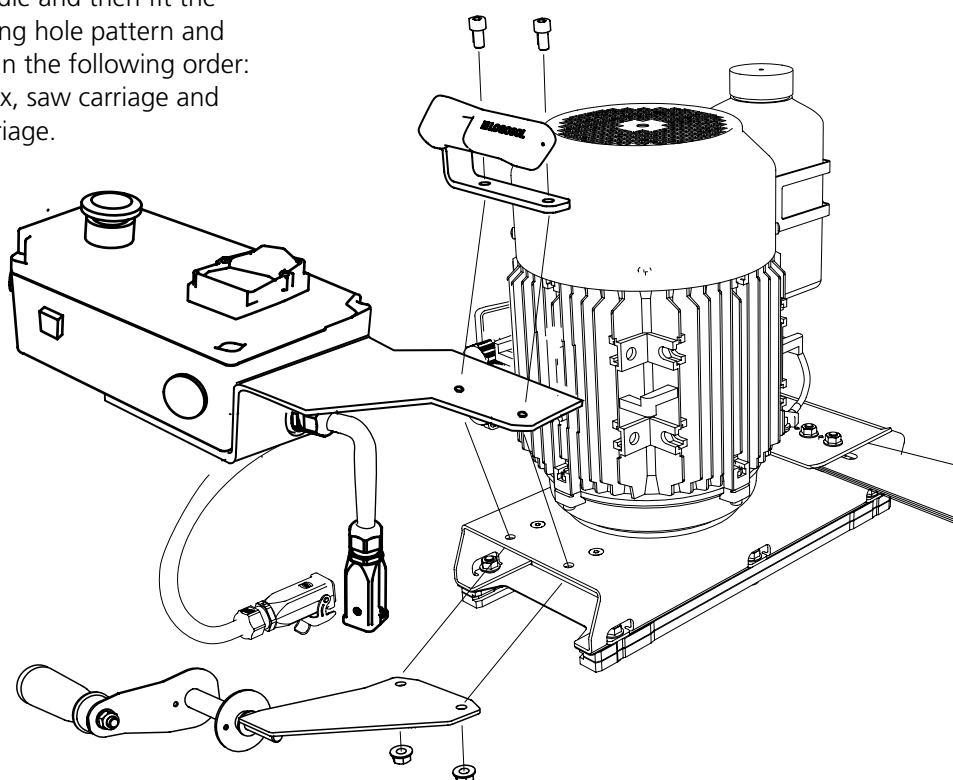

ASSEMBLY: LINE ATTACHMENT


1



— 2 x ————— M8x20




— 2 x ————— M8

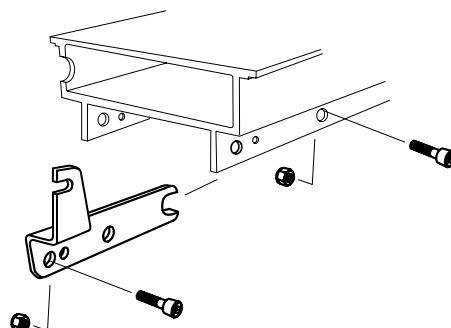

If the sawmill is equipped with a support leg, the smaller hole has to be used together with an Allen bolt M6X20.

2

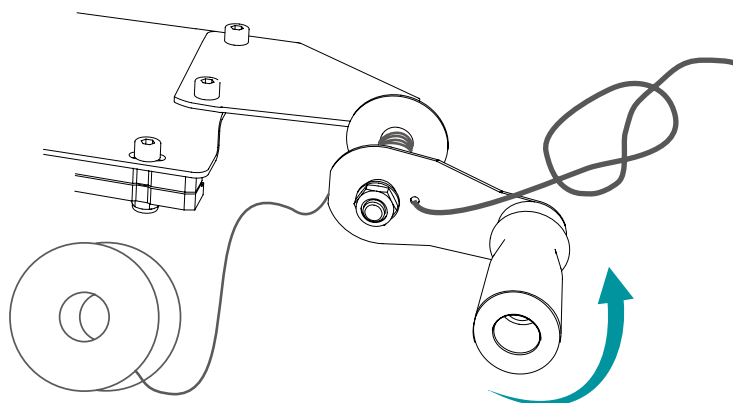

3

