


USER MANUAL

Part no. 0458-395-0691

REV: 3

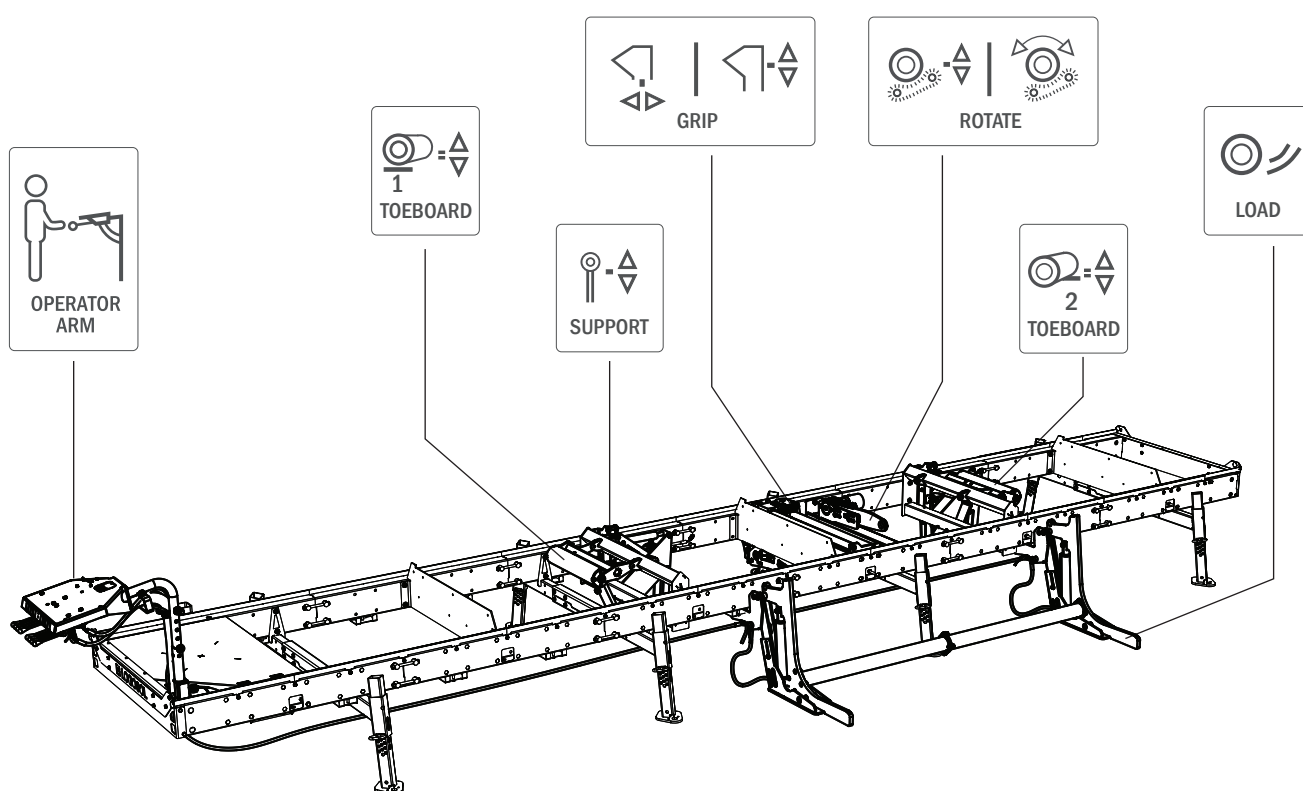

LOGOSOL

B1001 HYDRAULIC

THANK YOU FOR CHOOSING A LOGOSOL MACHINE!

We are very pleased that you have demonstrated your confidence in us by purchasing this machine and we will do our utmost to meet your expectations.

LOGOSOL has been manufacturing sawmills since 1989, and in that time we have supplied approximately 50,000 machines to satisfied customers the world over.

We are concerned with your safety and ensuring that you achieve the best possible results with your machine. We therefore recommend that you take the time to carefully read this user manual before using the machine. Remember that the machine itself is only a part of the value of the product. Much of the value is also to be found in the expertise we pass on to you in the user manual. It would be a pity if that was not utilised.

We hope you will be thoroughly satisfied with your new machine.



Bengt-Olov Byström
Founder,
Logosol in Härnösand



Read through the user manual carefully and make sure you understand its contents before using the saw.



This user manual contains important safety instructions.



WARNING! Incorrect use can result in serious or fatal injuries to the operator or others.


LOGOSOL continuously develops its products. For this reason, we must reserve the right to modify the configuration and design of our products.
Document: LOGOSOL B1001 Hydraulic User Manual
Manual, part no.: 458-395-0690
Text: Martin Söderberg, Martin Melin
Illustrations: Martin Söderberg, Anna Fossane
© 2026 LOGOSOL, Härnösand, Sweden

TABLE OF CONTENTS

Description of machine	4
Safety instructions	5
Maintenance	7
Technical data	9
Delivery: Component parts	10
Assembly	18
Connecting the unit and pairing the valve	40
Hydraulic hose	47
Adjustment	49
First start-up	50
Use	51
Transport	53
Exploded views	54
Hydraulic diagram	65
Troubleshooting	66
CE declaration	68

DESCRIPTION OF THE MACHINE

LOGOSOL B1001 HYDRAULIC

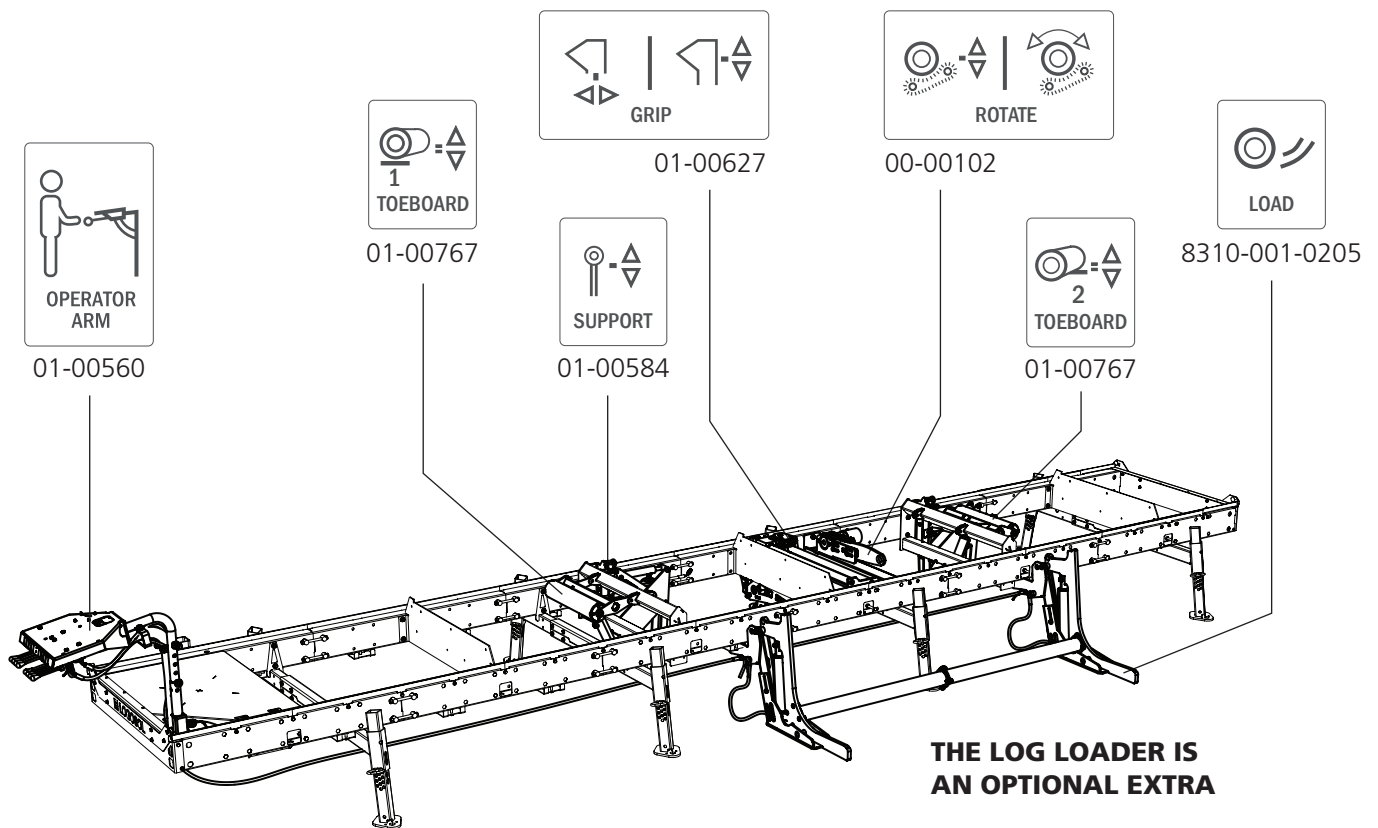

SAFETY INSTRUCTIONS

- Read carefully through the entire manual before putting the machine into operation. Failure to observe these safety instructions may result in fatal injuries.
- Make sure that everyone who uses the machine is well informed of the dangers and has read the manual. The manual must be available at all times for those working with the machine.
- Minors under the age of 18 are not allowed to use the machine.
- Make sure that children and animals are not in the vicinity when the machine is being operated.
- Anyone working with the machine should be in good physical shape, healthy and well-rested. Take regular breaks. Do not work under the influence of alcohol, drugs or medicines that may cause drowsiness or inattentiveness.
- The machine should only be used where there is good visibility. Do not work in the dark or where visibility is poor.
- Make sure there are other people within earshot in case you need help.
- Use only LOGOSOL manufactured products or those expressly approved for the purpose when adding extra equipment. Other equipment may result in risk of accident and must not be used. Logosol will not accept liability for personal injury or material damage incurred while using non-approved attachments on the sawmill.
- Always wear personal protective equipment: Appropriate clothing is, for example, a tight-fitting work overall. Never work with loose clothing, jacket or similar.
- Wear steel cap shoes with deep-tread soles for good grip. Do not wear a scarf, tie, jewellery or the like that can catch in the equipment.
- Wear heavy duty protective gloves. Risk of cuts when handling the equipment.

KEY TO SYMBOLS



WARNING! This symbol means that you have to take particular care. It is always accompanied by information on the specific risk.



ATTENTION. A warning comes after this symbol. Pay particular attention where this symbol appears in the manual text.



For your own safety and that of others, do not use the bandsaw mill or handle bandsaw blades without first reading through and understanding the contents of this user manual in its entirety.



WARNING! Cutting tools: Incorrect use of the machine can lead to life-threatening injuries. Band blades are extremely sharp and dangerous.



Always use protective gloves (class 1) when working with the band sawmill or handling bandsaw blades. Risk of sustaining cuts when handling band blades. Bandsaw blades and motor parts can be hot after sawing.



Always use approved hearing protection when working with the machine. Even brief exposure to high frequency noise can damage your hearing. Always use close-fitting safety goggles when working with the machine or handling bandsaw blades. Under certain circumstances the use of a protective mask may also be advisable. This would primarily apply if you are sawing dry wood or sawing indoors.



Always wear approved protective footwear with saw protection, steel toe-caps and non-slip soles when working with the machine or handling bandsaw blades.



Always wear full-length protective trousers when working with the machine or handling bandsaw blades. Never wear loose-fitting clothing, scarves, necklaces, etc. that may fasten in the machine when working. Tie up long hair before working with the machine.

SAFETY INSTRUCTIONS

Safety distance



Warning! Fire risk. Hydraulic oil is flammable, do not perform hot work in the vicinity of hydraulic components and equipment.



Warning! Do not exceed the maximum weights specified for the equipment. Overload can entail sudden breakdowns making the work area dangerous



Warning! Pinch risk. Do not remain within the work area when the hydraulic cylinders are loaded.



Warning! Cuts. Never handle pressurized hydraulic hoses, oil from a pressurized hose can penetrate the skin and cause serious injury.



Warning! Burn injuries. Allow the equipment to cool down before working with hydraulic units and hoses. The hydraulic oil can reach high temperatures during use.



Handle hydraulic hoses and couplings carefully during assembly and maintenance work. Avoid sharp bends on hydraulic hoses. Sharp bends damage the hoses and increase the risk of breakdown.



Do not lift or handle hydraulic equipment connected to the hoses or couplings.



Always use hydraulic oil prescribed by Logosol when working with the equipment.



Always wipe up any spillage of hydraulic oil from the product and the working area. Residual hydraulic oil constitutes a slip hazard to users.



Always use absorbent cloths beneath the equipment when working with the machine.

Before each shift:

Check hydraulic hoses, couplings and cables for visible damage.



Warning! Do not exceed the maximum weights specified for the equipment. Overload can entail sudden breakdowns making the work area dangerous

Always check that the specified amount of hydraulic oil is in the tank before starting the machine.

During operation



The sawmill is not to be in any other position than level when in operation. Risk of tipping!

- Keep the worksite free of tools, pieces of wood, sawdust and other items that present trip hazards.




In the event of problems of any kind, stop work immediately and turn off the machine until it has been resolved. Always keep this in mind. Most accidents involving dangerous machines occur when something malfunctions and the operator has to correct this during operation. A stop seldom shows up on the finished product.

SAFETY INSTRUCTIONS

Safety distance:

Make sure that nobody is within the safety distance when working with the machine.

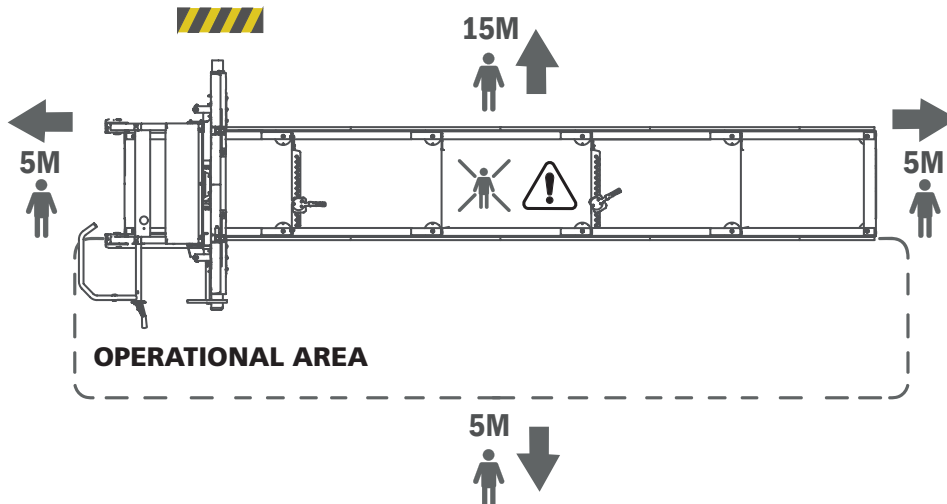

MAINTENANCE

MAINTENANCE

Periodic maintenance of the machine expected to be performed by the operator is described in this section. Be sure to follow the specified maintenance intervals, as this is the basis for good function of the machine.

WARNING! Risk of serious injury:

! Make sure that the machine is turned off before servicing and maintenance. Always wear work gloves (Class 1) when undertaking maintenance on the machine

WARNING! Cuts:

! Be careful when working with the machine as it has sharp edges.

WARNING! Fire risk:

BEFORE WORKING ON THE MACHINE

Always unplug the power cable at the mains before starting service or adjustment. Check that the power cable, plugs and switches are in good condition and undamaged. Clean all parts of the machine with a brush and dry cloths. Store the machine in a dry, clean and non-corrosive environment, out of reach of children. Check that all screw joints are tightened.

! Do not smoke or perform any work (welding, grinding, etc.) on the machine that can generate ignition sparks in the vicinity of fuel or combustible materials.

! If you spill oil on the machine during refuelling, this should be wiped up immediately. If you get oil on your clothes, change them at once.

! Never run the engine if there is an oil leak. Always turn the engine off before refuelling.

MAINTENANCE

CLEANING THE MACHINE

Clean the bandsaw mill after each shift. Sweep away shavings and sawdust around the functions and on and around the rails.

EVERY START-UP

Check scraper rings:

Make sure that dirt and shavings do not accumulate on the scraper rings.

Check for oil leaks:

Check all connections for oil leaks

Check the oil level:

Check the oil level in the hydraulic tank before each shift. Follow the maintenance schedule in the engine instruction manual.

Check safety features:

Before each shift, check the function of the following safety features:
Make sure that the valve levers return when the handle is released.

Check screw joints:


Check that there are no loose screw joints on the machine.

OIL CHANGE

Change the oil for the first time after about 30 hours of work. With normal operation, the second change is not needed until about 4-500 hours of work. Hydraulic oil: (ISO VG 32).


If a petrol unit is used, the hydraulic oil filter must be changed at 300 hours of use, see the hydraulic unit instruction.

Power unit

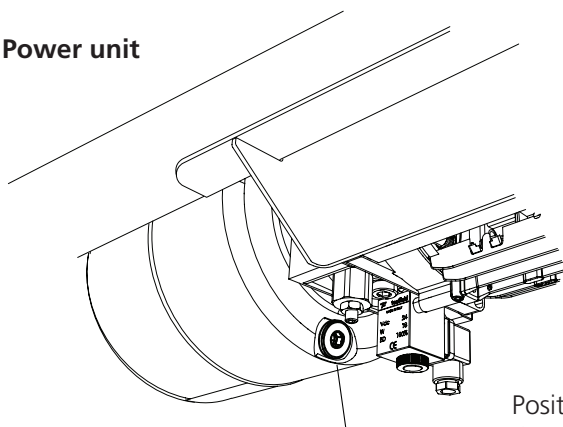

Position of the oil plug on the underside of the electric hydraulic unit.

Petrol unit


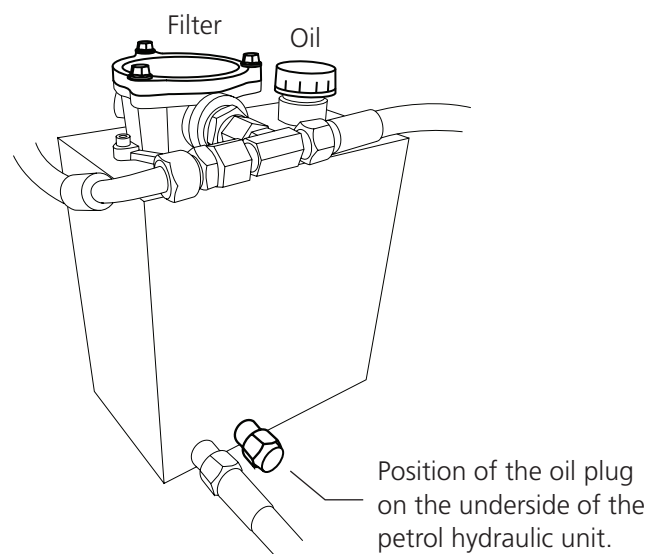


TECHNICAL DATA

LOGOSOL HYDRAULIC B1001/B751	
01-00684 LOG BED HD	
Quantity	2 pcs
Function	Sturdy tubular structure that the log rests on, with the option of connecting the toeboard and log support functions.
01-00556 TOEBOARD	
Stroke length toeboard	70 mm
Diameter roller	100 mm
Quantity	2 pcs
Function	To increase the top diameter regardless of the orientation of the log. Facilitates longitudinal movement of logs, if both are activated.
01-00627 LOG CLAMP	
Double horizontal guides, profile 2 x 40 mm	
Vertical stroke	300 mm
Minimum clamp width	20 mm
Maximum clamp width	700 mm
Bearing	Double bushes and dust seals for all linear log holder movements.
Control	A double-acting hydraulic cylinder with 300 mm stroke, connected to a 40 mm rod for vertical movement. A double-acting hydraulic cylinder with 200 mm stroke, connected to linkage for horizontal movement.
01-00584 LOG SUPPORT	
Vertical stroke	305 mm
Cylinder	150 mm
Quantity	2 pcs
Diameter of the support	40 mm
Bearing	Double sets of bushes and dust seals on each log support.
Control	A double-acting hydraulic cylinder with 150 mm stroke, connected to linkage.
00-00102 LOG ROTATOR	
Control	Robust hydraulic cylinder for raising/lowering. Hydraulic motor for chain drive. Hydraulic motor for chain drive.
00-00604 LOG LOADER	
Lifting capacity	2,000 kg
Maximum log diameter	1,000 mm
Minimum log length	2,100 mm
POWER PACK	
Power unit	3 kW, 400 V CEE 16A, Hydraulic tank 4 l, Max. pressure 175 bar Max. flow 9 l/min. Compatible with the 01-00770 work platform
Petrol unit	Honda GX200 6 hp, Hydraulic tank 5 l, Max. pressure 175 bar Max. flow 12 l/min. Not compatible with the 01-00770 work platform
Oil volume	There is approximately 10 l of oil in the system with all functions connected
01-00560 CONTROL PANEL	
Manually operated valves	7+1 functions (log loader is optional)
Control	Can be raised, lowered and rotated to improve visibility. Can be locked for transportation.
	Work platform [680 x 950 mm] to protect the power unit.

BOLTS/NUTS

Definition of fasteners.

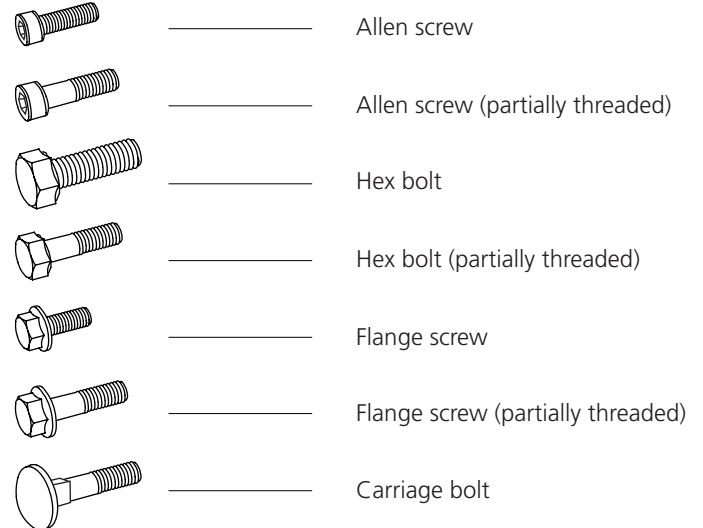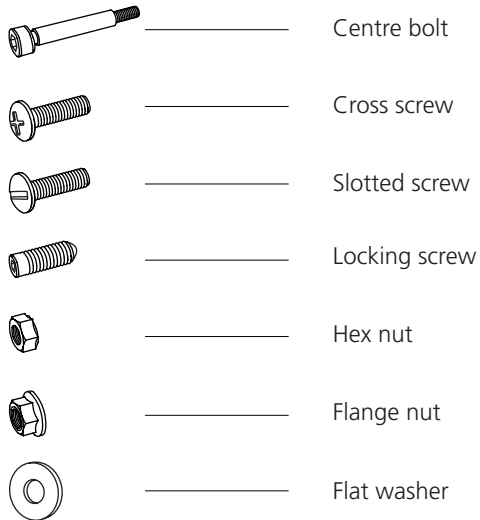

ADDITIONAL SYMBOLS

The following symbols are used in addition to those shown above to describe part design.




DIMENSIONS/LENGTH

The dimensions of the fasteners are printed as a diameter dimension (M) ISO 68-1. This is followed by a length dimensions for bolts/screws; the dimension of a bolt/screw is the part of the bolt/screw that disappears into the material in which it is mounted.

(Diameter)		(Length)
M8	x	20



The symbol describes the sawing direction and reappears during assembly.

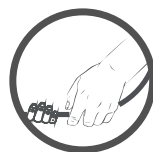


The symbol describes the recommended lifting point for heavy lifts.



When this symbol appears during assembly, parts must be lubricated before installation. Lubricate affected parts with universal grease.



Make the joint finger-tight.

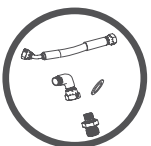

The symbol plus a number that refers to packages of hose and nipples.

DELIVERY: COMPONENT PARTS

The hydraulics are delivered in several different packages. The different functions are packed as shown in the illustration below. Arrange the component parts according to each function before starting the assembly.


01-00771-neu


99-00771-Box


04-00539


04-00441

00-00102-div


04-00442

04-00440


04-00477

04-00478


01-00766

01-00474


01-00771-skp
 01-00584-skp
 01-00767-skp
 01-00627-skp
 00-00102-skp
 01-00766-skp


01-00771-div
 01-00627-div
 01-00584-div
 01-00767-div

Power:


01-00718 Petrol



04-00574


01-00771-1001


Optional
8310-001-0205


8310-302-0205
 01-00663-skp
 01-00663-div


01-00624-Neu
230v
01-00702

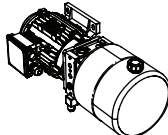
400v
01-00703



01-00770

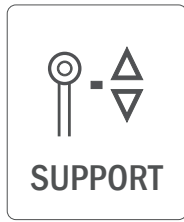
01-00617
Operator-arm



01-00771-neu
01-00584



01-00584-skp


- 2 x – M8x75
- 6x – M10x110
- 2x – M10x130
- 1x – M10x90
- 4 x – M8x16
- 12 x – M8x20
- 8 x – M10x50
- 4 x – M10x20
- 6 x – M12x25
- 2 x – M8
- 17 x – M10
- 12 x – M8
- 8 x – M8




01-00584-div

- 4x – 03-02814
- 3x – 03-02820 (61mm)
- 6x – 03-02822 (83mm)
- 4x – 03-02830
- 4x – 03-02834 (23,5mm)
- 4x – 03-02839
- 4x – 03-02842 (29,5mm)
- 2x – 03-02843 (100mm)
- 1x – 03-02971 (59,5mm)
- 2x – 03-03293
- 4x – (8,5x12x11)


02-00445 — 2 x

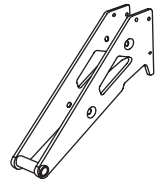


03-02815 — 2 x




03-02816 — 2 x




03-02838 — 2 x

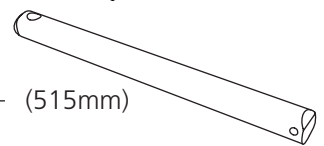


04-00488 — 1 x

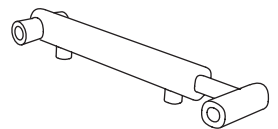

03-03036 — 2 x

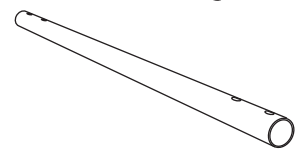

03-03038 — 3 x



04-00539

04-00538

04-00537

4x (1/4)

4 x (1/4- 1/4)


2x (1/4- 1/4)



01-00769

2 x

99-00771-Box







01-00771-neu 01-00627




8 x – M12x100




1 x – M10x100




2 x – M10x110



2 x – M10x140



1 x – M16x100



01-00627-skp



5 x – M12x30



8 x – M12



1 x – M16




5 x – M10



10 x – M12




2 x – M8




01-00627-div



2x – 03-02868 (105mm)



3x – 03-02878 (77mm)



2x – 03-02879 (35mm)




01-00771-1001

04-00365

03-02730

2 x

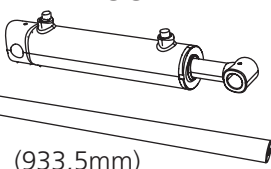


(933,5mm)



99-00771-Box

01-00628




02-00468




03-02925



02-00447

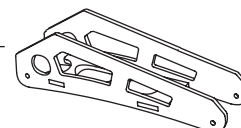


02-00448

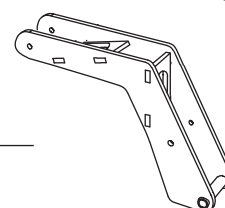


02-00469



02-00460



03-02871




(450mm)




1x 04-00535



1x 04-00536



2x (1/4- 3/8)




2x (1/4- 1/4)



2x (1/4)



2x (3/8)



2x (1/4- 1/4)



04-00442




04-00441



1x 04-00532




1x 04-00531




4x (1/4- 1/4)









4x (1/4)



2x (1/4- 1/4)

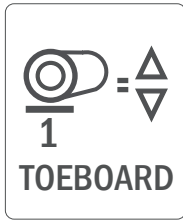

01-00771-neu
01-00767

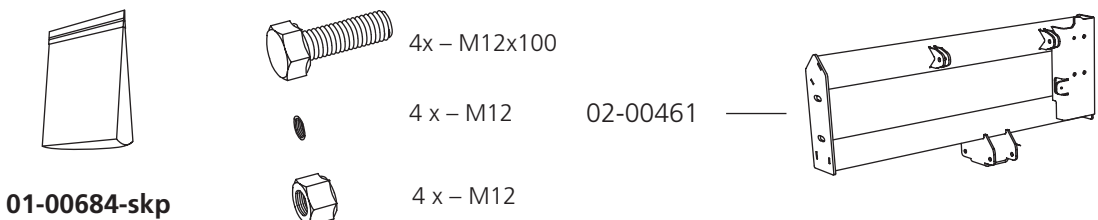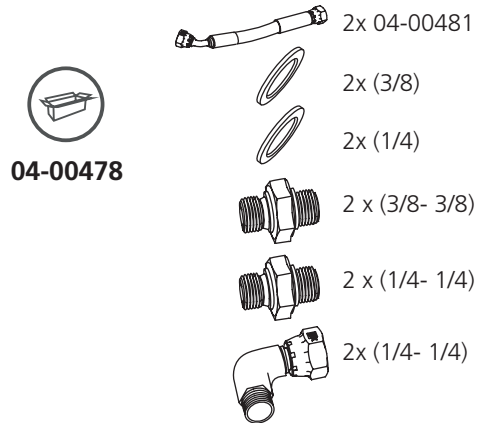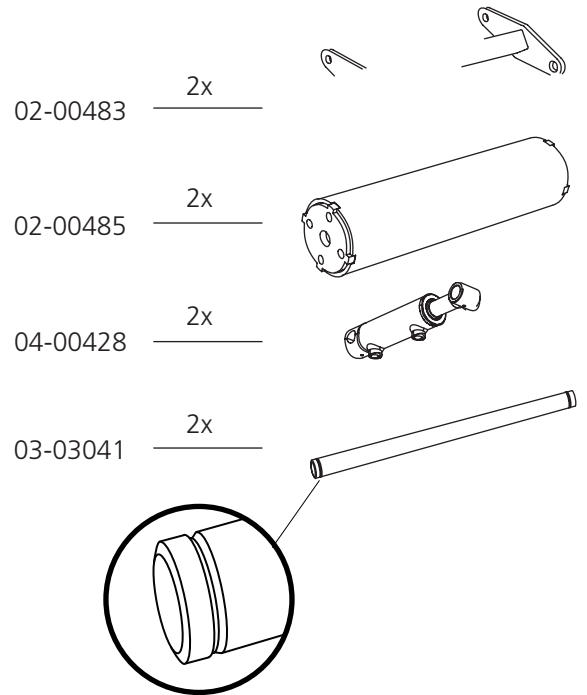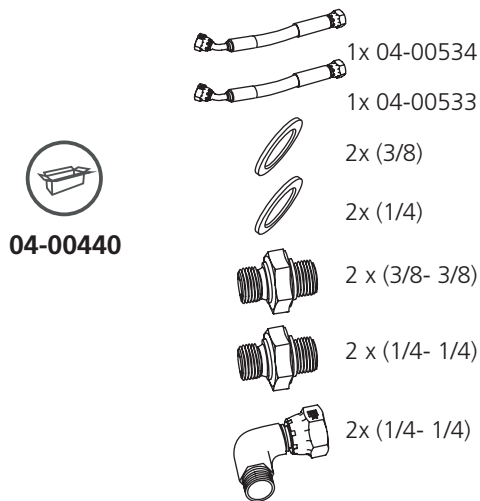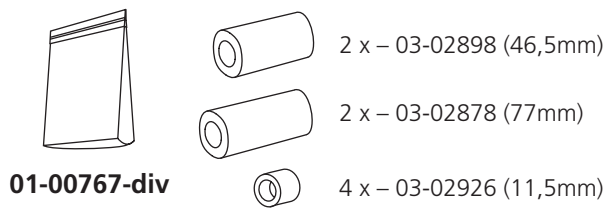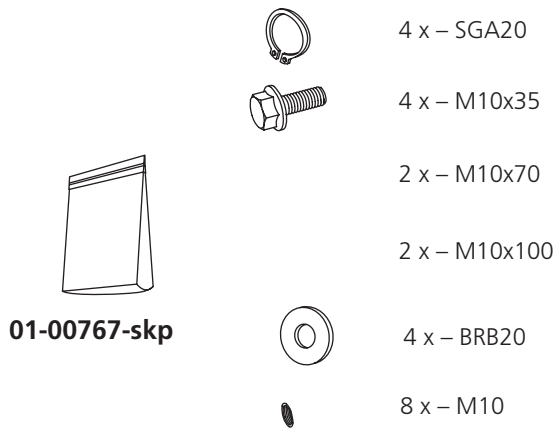




01-00771-neu 01-00560




OPERATOR
ARM



01-00624-Neu



01-00624-skp SKP powerpack

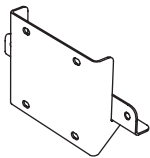

- 4 x - M10x25
- 4 x - M10
- 2x - M12x100
- 4 x - M12
- 4 x - M4
- 4 x - M4
- 02-00462

- 2x 04-00530



04-00439

- 2x (1/4- 1/4)
- 2x (1/4- 3/8)
- 2x (1/4)
- 2x (3/8)



01-00718

- 03-03154
- 03-03181
- 04-00547
- 3x - M12x100
- 6 x - M12
- 1 x - M8x20
- 1 x - M8

01-00718-skp



04-00574

- 2x 04-00575
- 4x (1/4- 3/8)
- 2x (3/8)



01-00617

- 02-00465
- 02-00487
- 02-00449
- 03-02857
- 04-00521 2x
-
- 2 x - M8x20
- 1x - M12x100
- 2 x - M12
- 4 x - M6x16
- 4 x - M6

01-00617-skp SKP operation arm



01-00766

- 04-00420 2 x
- 03-03106 2 x
- 03-02957 10 x
- 04-00528 1 x
- 04-00591 2 x
- 080-828-021-0070 1 x
-
- 1 x 04-00482
- 1 x 04-00483
- 4 x (1/4- 3/8)
- 4 x (3/8)
- 6 x - M8x14
- 6 x - M12
- 2 x - M12x90
- 2 x - M12x25
- 10 x - M10x80
- 10 x - M10



04-00444

- 6 x - M8x14
- 6 x - M12
- 2 x - M12x90
- 2 x - M12x25
- 10 x - M10x80
- 10 x - M10


01-00766-skp









01-00770

- 02-00458
-
- 4 x - M12x100
- 8 x - M12
- 3 x - M6x12
- 3 x - M6

01-00770-skp

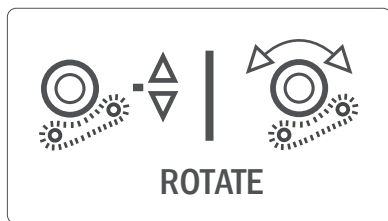

01-00771-neu
00-00102

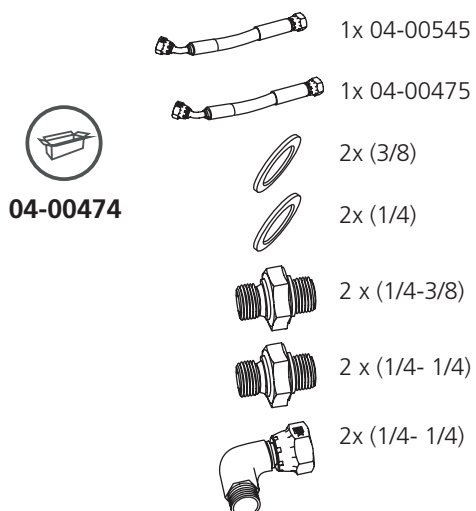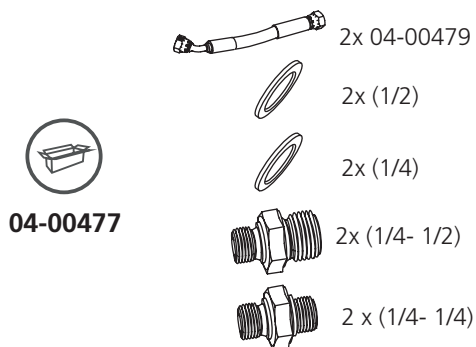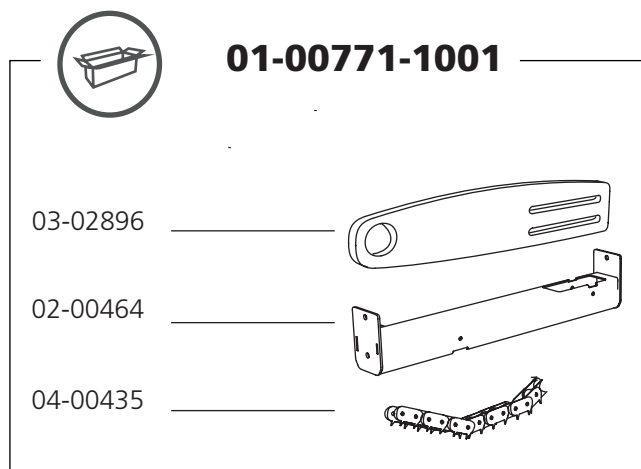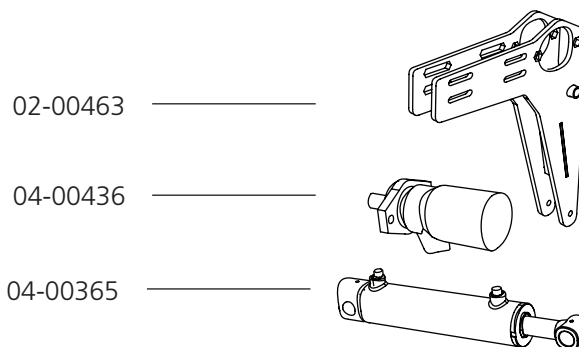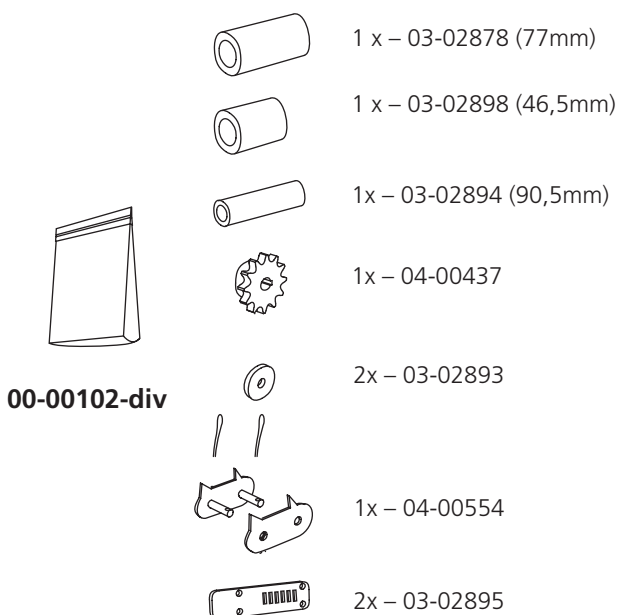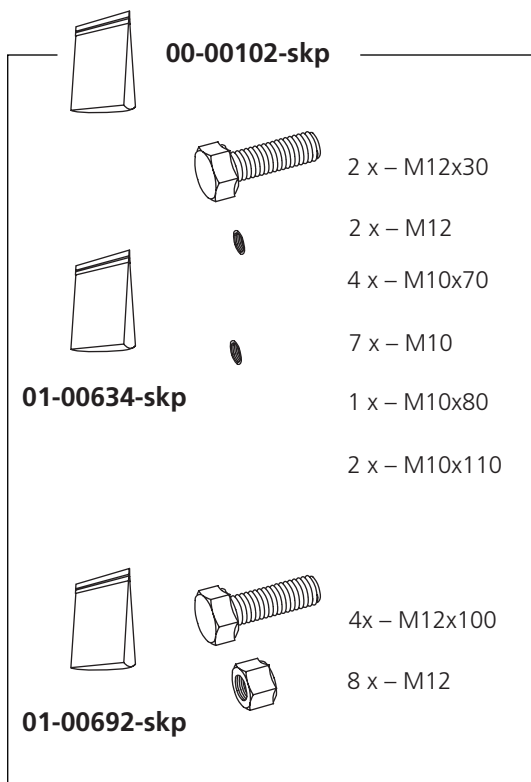



LOAD



8310-001-0205



8310-302-0205

01-00663-skp

01-00663-div

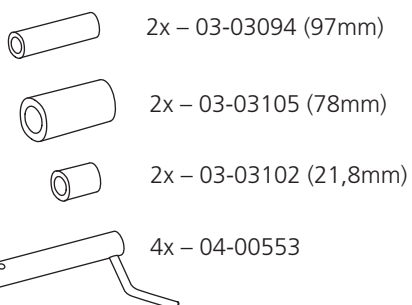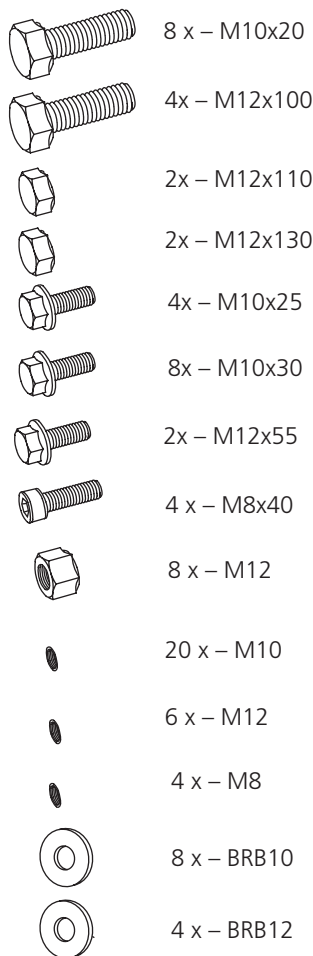

03-02902 — 2 x

02-00481 — 2 x

02-00472 — 2 x


04-00552 — 2 x

02-00482 — 2 x

02-00470 — 2 x

03-03001 — 2 x

04-00468

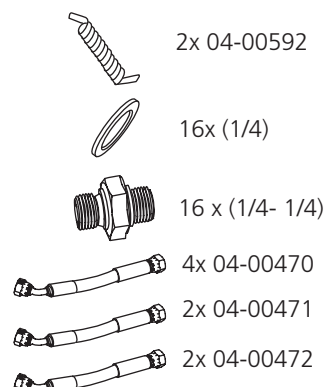




Let's get started!

We recommend laying out all fasteners on a tray or similar to make it easier to find screws.



Symbol: Assembly

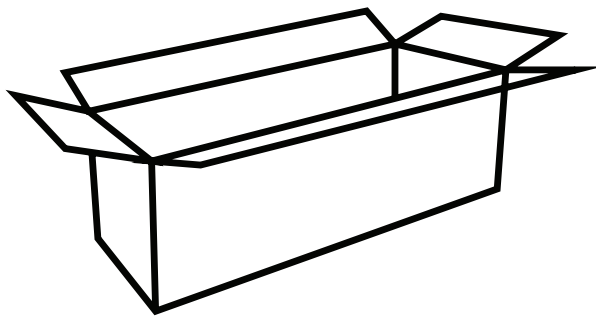

ASSEMBLY

The position is important so that all functions fit on the rails. We start from the joints on the rail pipes and then count the hole pattern from the relevant joints to find the correct position.

The assembly assumes that the saw rails have an extension. If a second extension is fitted, it shall be mounted on the far end of the rails.



To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.



This symbol describes the sawing direction and reappears during assembly.




When this symbol appears during assembly, parts must be lubricated before installation. Lubricate affected parts with universal grease.




01-00627

03-01976

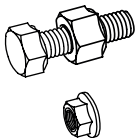


4 x – M12x100 +M12


4 x – M12

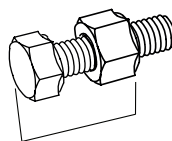

78,5mm

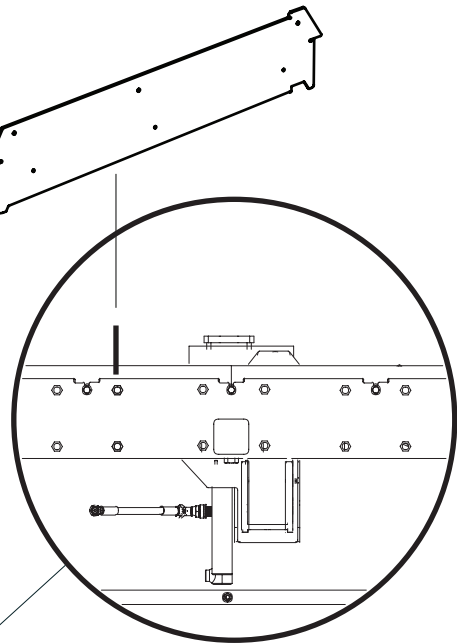

Suggested position of support legs and standard log beds when installing hydraulics:

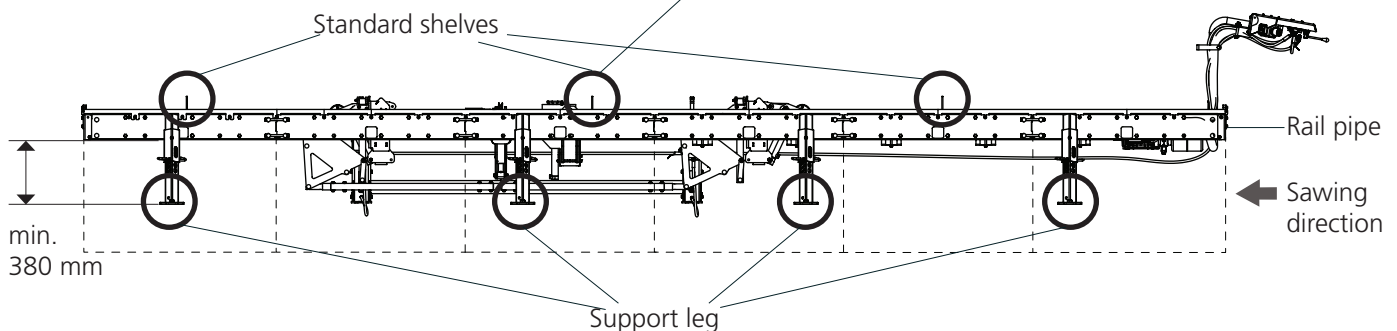



01-00767



POSITION


The parts from package **01-00767** are needed to start assembly work.

Position 01-00767


The log beds are positioned on pipes number **3** and **5** viewed in the sawing direction.
The log beds are then placed on hole pattern 3 counted from the joint of the pipe in the sawing direction.

Count the hole patterns from the pipe joint, the log beds should be placed on the third hole pattern from the relevant pipe joint.

Hole pattern

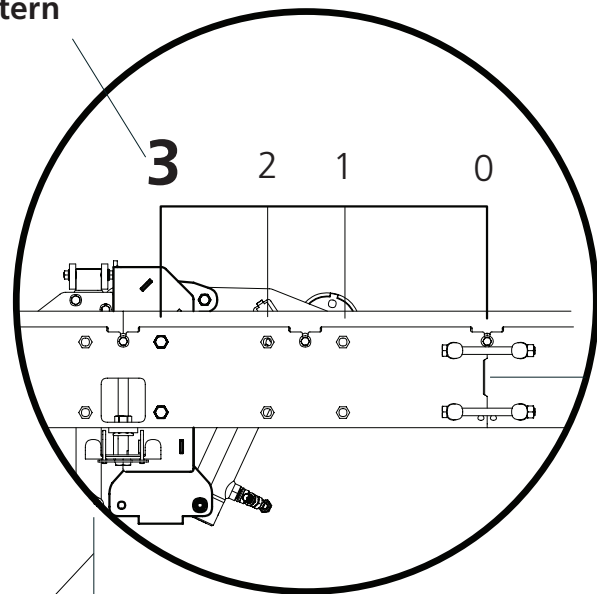


Pipe joint

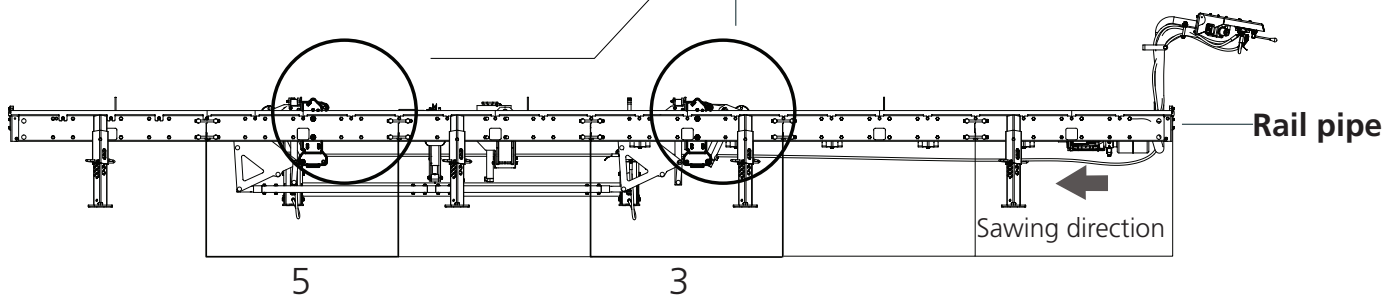




01-00767

1

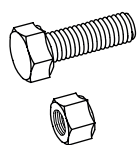


4 x – M12x100

4 x – M12

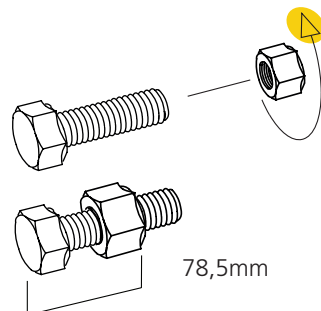



78,5mm

2

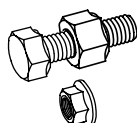


4 x – M12x100 + M12

4 x – M12

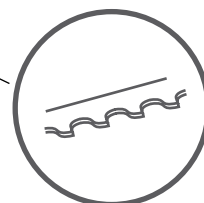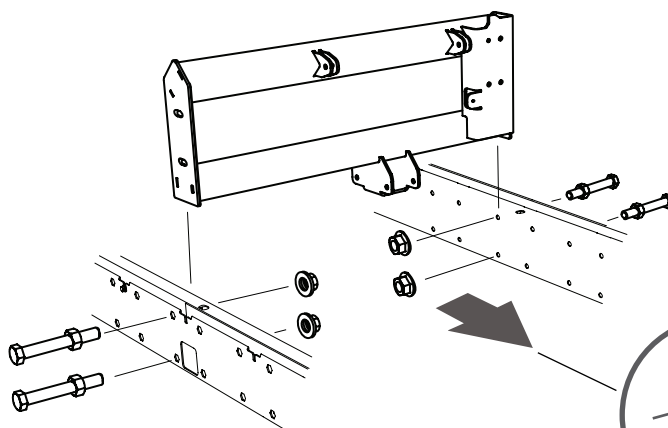


3

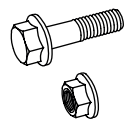


1 x – M10x100

1 x – M10



1 x – 03-02878 (77mm)

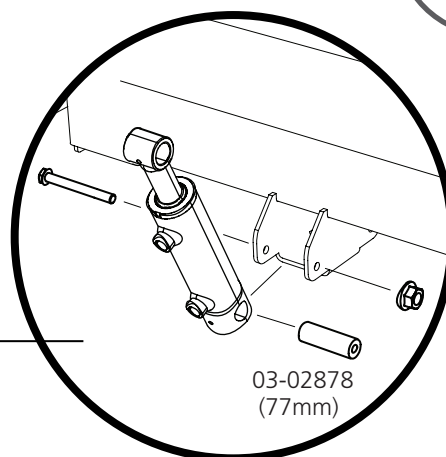

03-02878
(77mm)


4



2 x – BRB20




2 x – SGA20

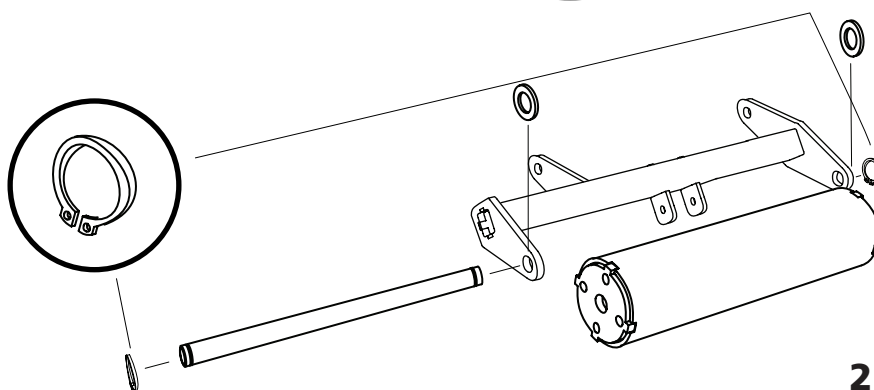





01-00767

5

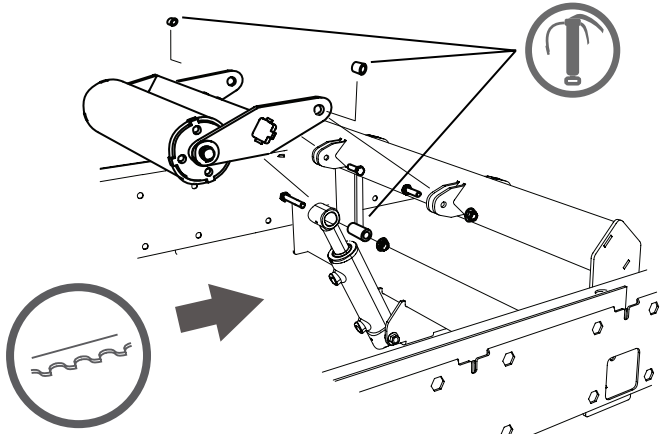

Note that the two toeboards should be mounted on each side of their respective bed. Toeboard (1) shall be mounted closest to the operating position.

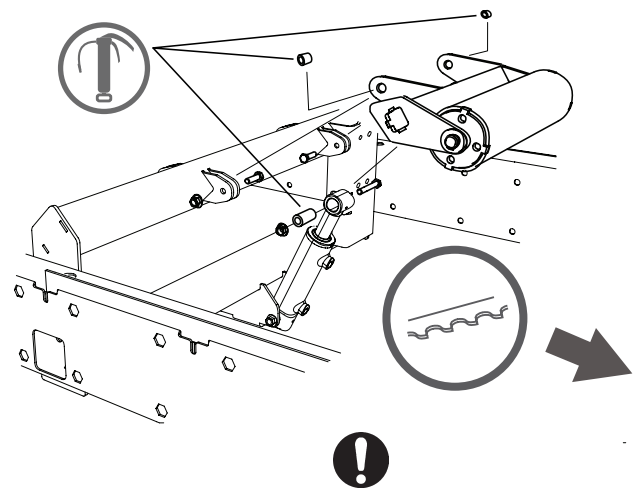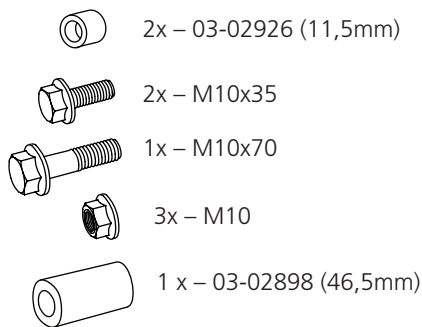

We recommend laying out all fasteners on a tray or similar to make the task easier.



To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.

WARNING PINCH RISK! In this section of the assembly there is a risk of injury through crushing, so be careful and wear work gloves.




01-00584

1

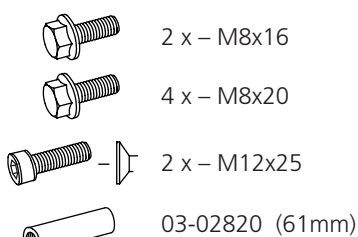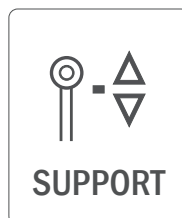


M8x16

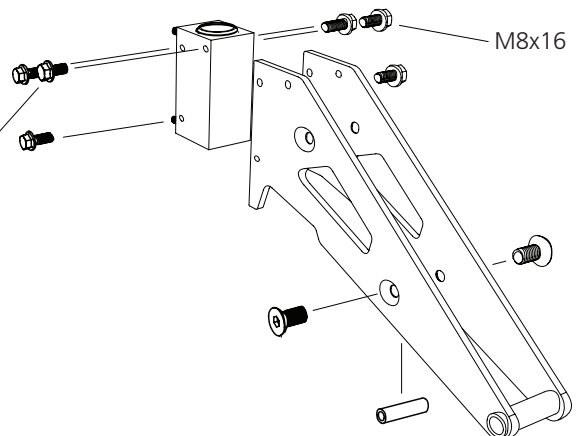




01-00584

2

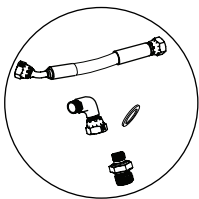

04-00539

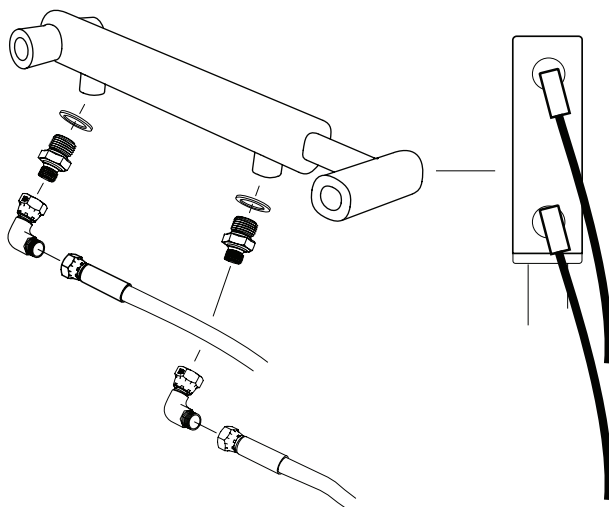


3



2 x – M12x25



1x – 03-02820 (61mm)

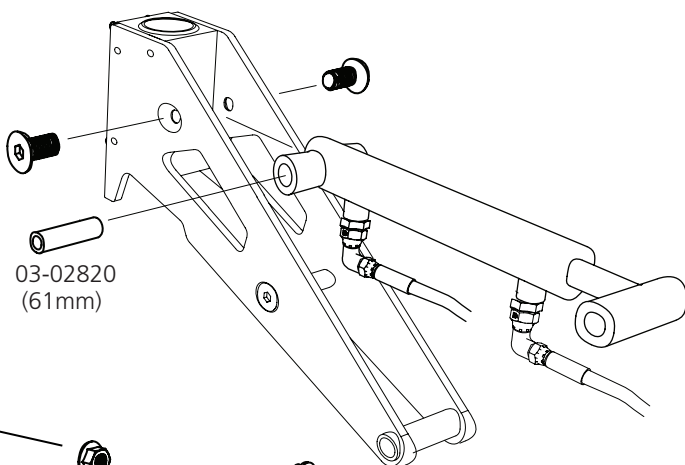

03-02820
(61mm)

4





5 x – M8



1 x – M8




1 x – M8x20

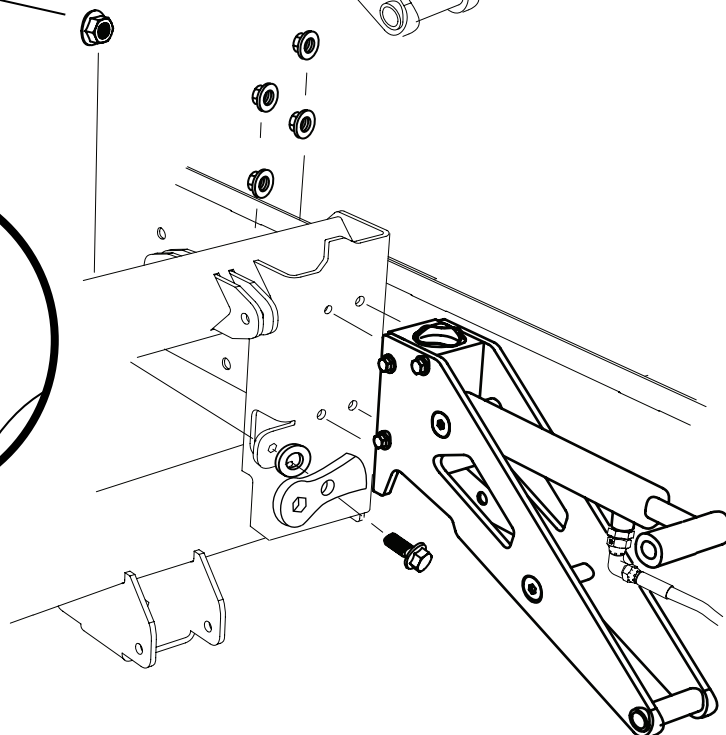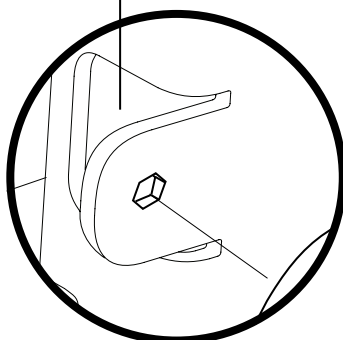



01-00584

5



1 x – M8x75



1 x – M8



2 x – M8



2x – DR-01467




2x – 03-02839

6




2 x – M10x20



1 x – M10x110



1 x – M10



1x – 03-02822 (83mm)




2x – 03-02830




2x – 03-02814

7



1 x – M10x90



1 x – M10x110






2 x – M10



1x – 03-02971 (59,5mm)



1x – 03-02822 (83mm)

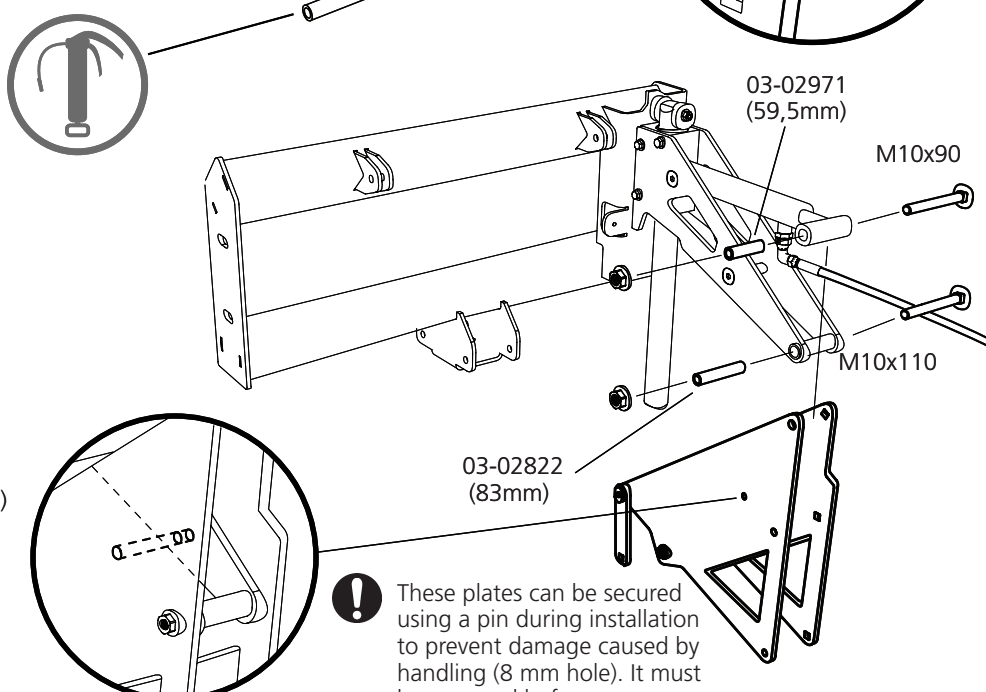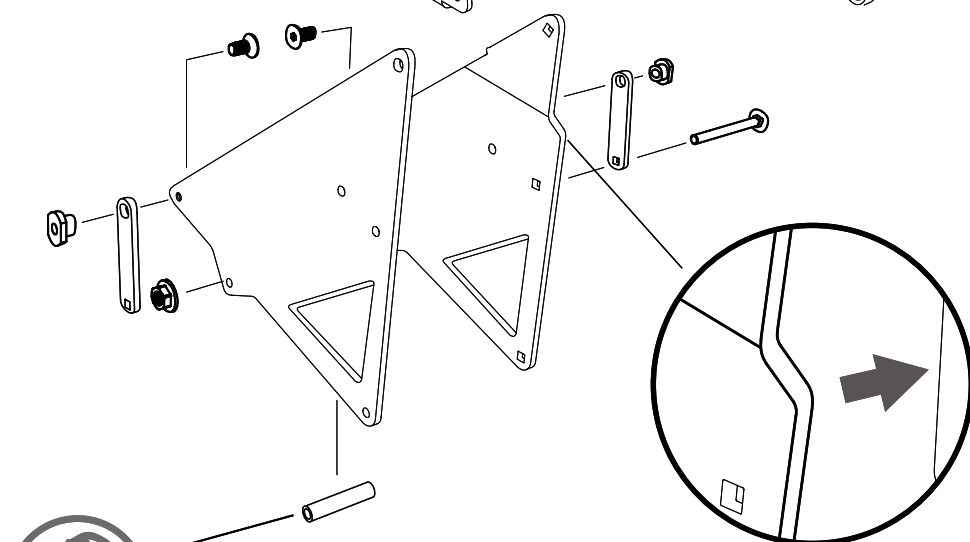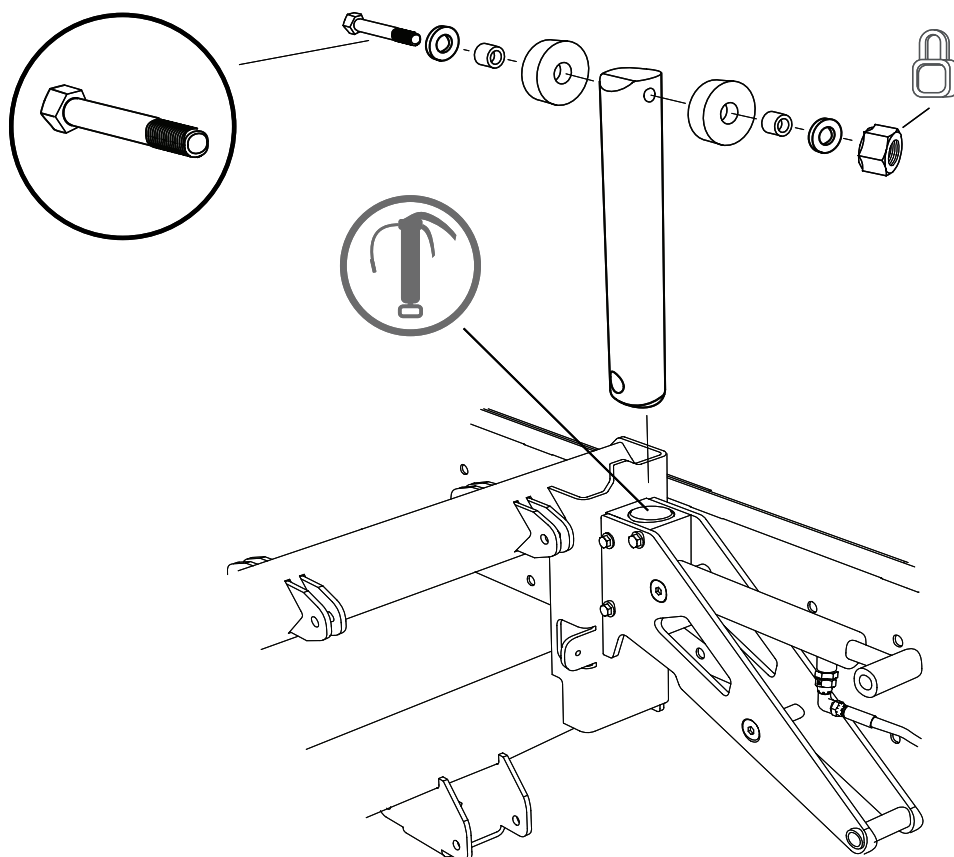


! These plates can be secured using a pin during installation to prevent damage caused by handling (8 mm hole). It must be removed before use.



01-00584



8




8 x – M10x50




8 x – M10

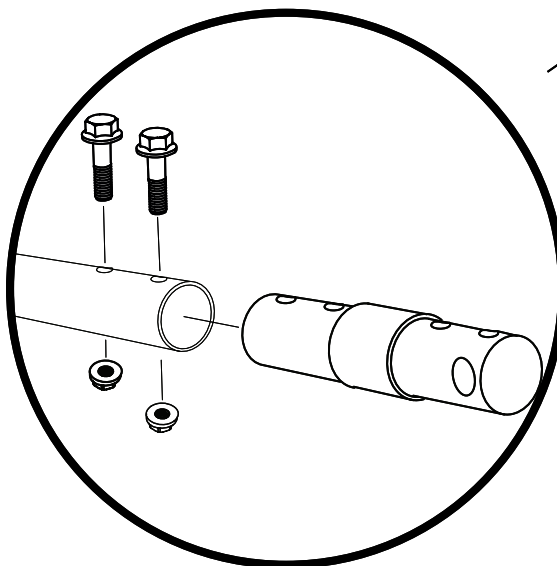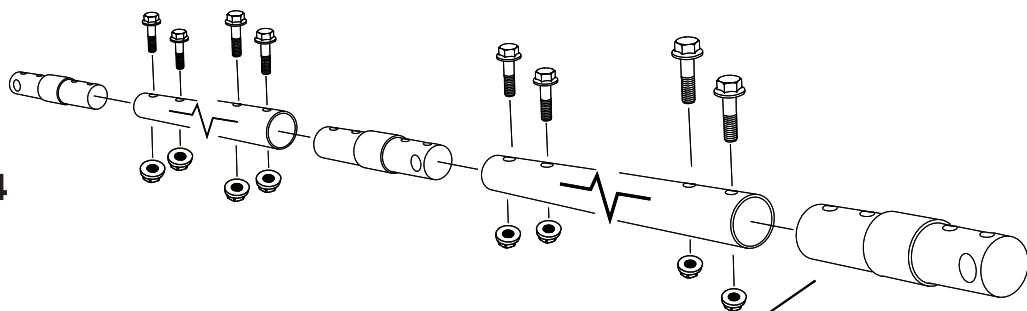

9



1 x – M10x130



1 x – M10x110



2 x – M10



1x – 03-02843 (100mm)





2x – 03-02834 (23,5mm)



2x – 03-02842 (29,5mm)



1x – 03-02822 (83)mm

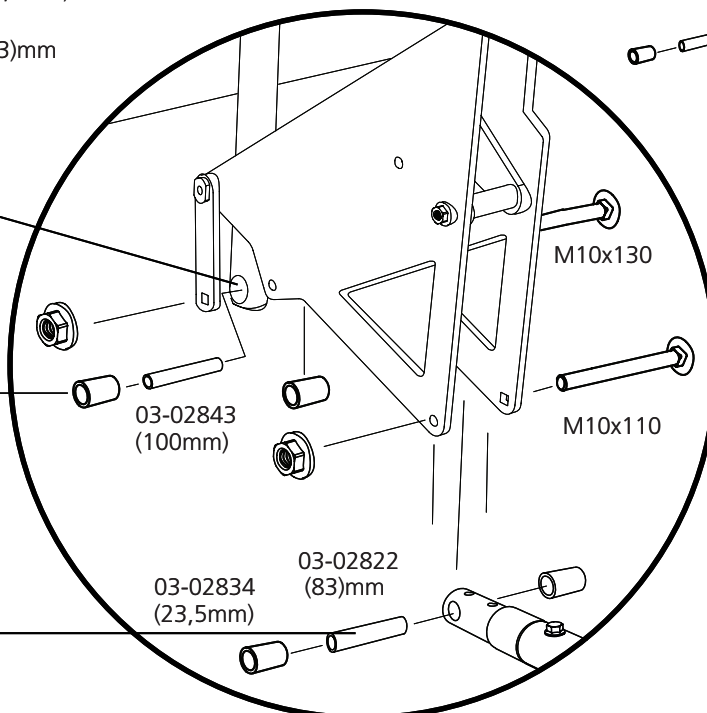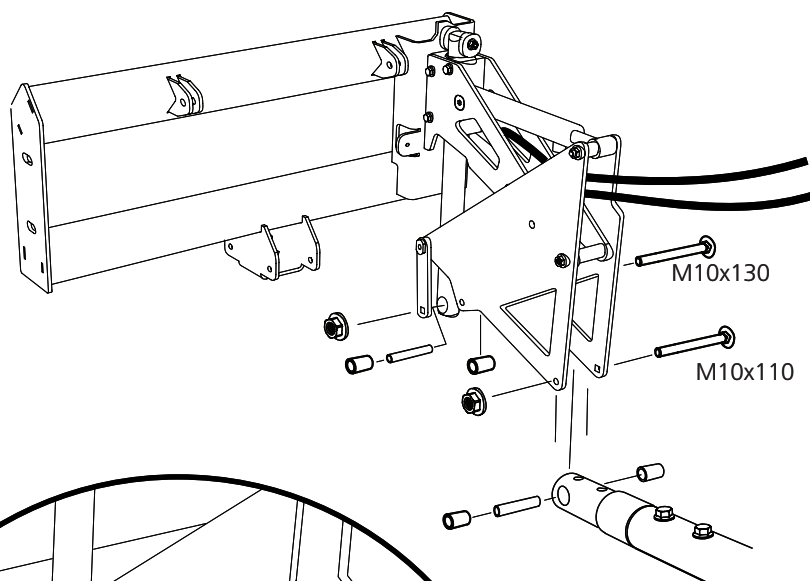

03-02842
(29,5mm)

03-02843
(100mm)

03-02834
(23,5mm)


03-02822
(83)mm

M10x130

M10x110



01-00627

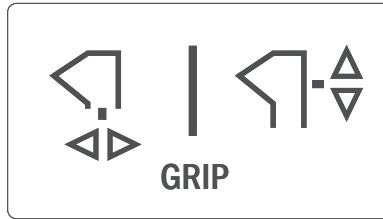


We recommend laying out all fasteners on a tray or similar to make the task easier.

To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.


Position 01-00627

The log beds are positioned on pipe number **4** viewed in the sawing direction. The log clamp is then placed on hole patterns **3** and **4** counted from the joint on the pipe in the sawing direction.


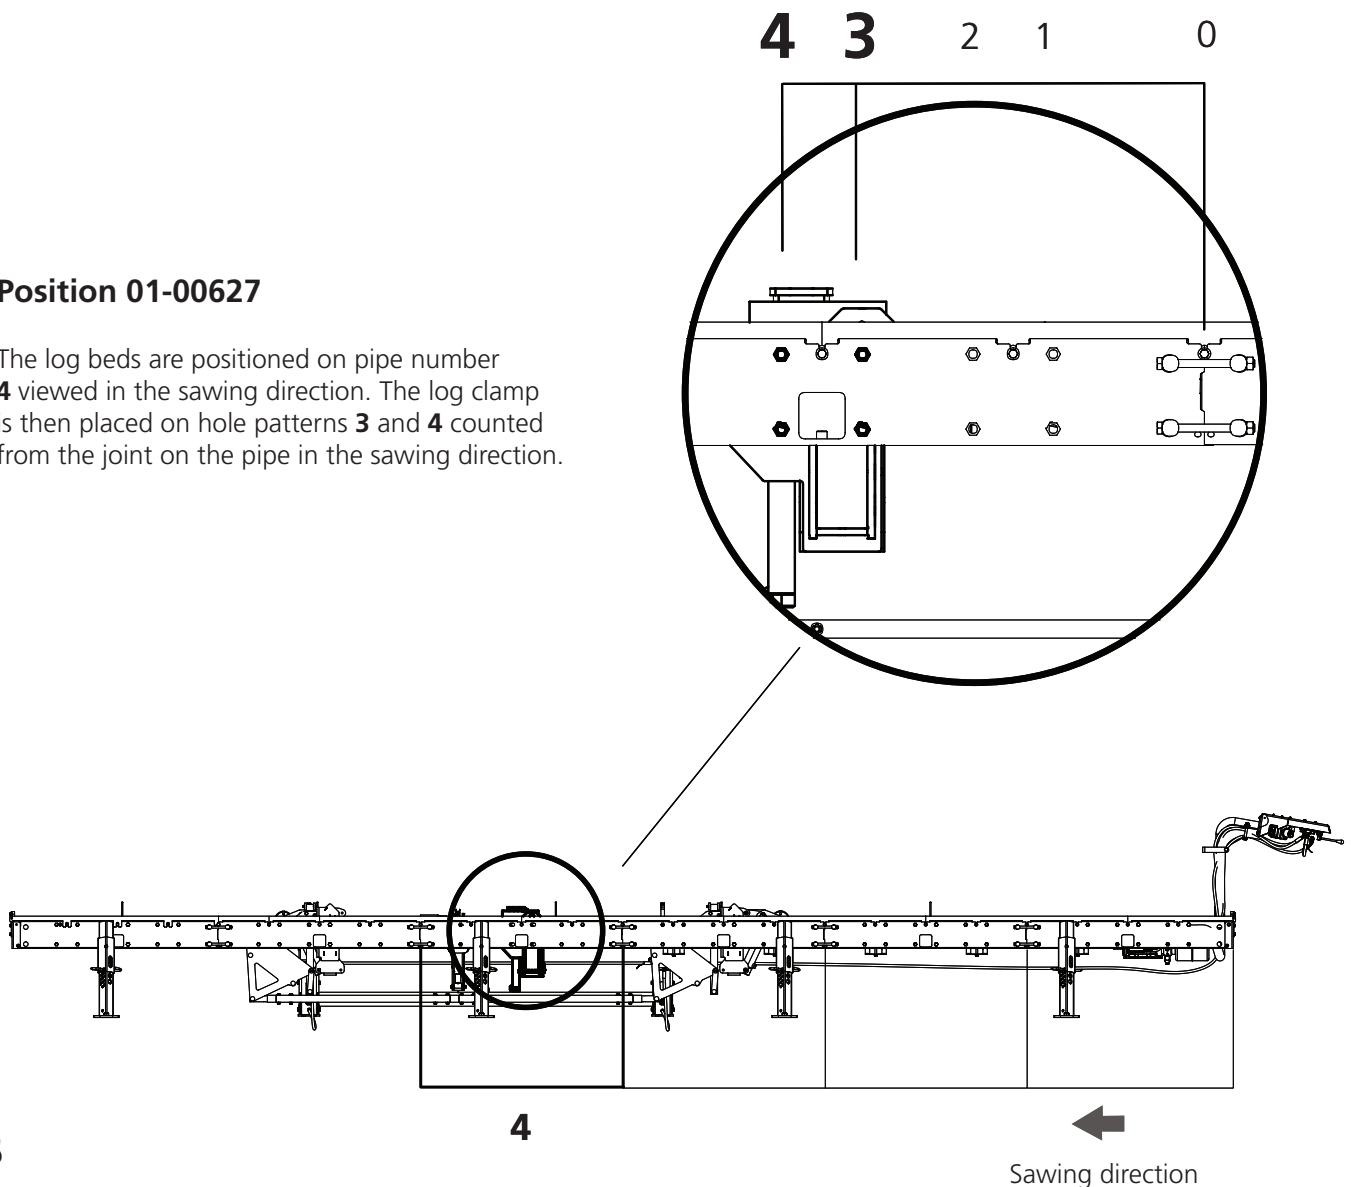


1

2 x – M12x30

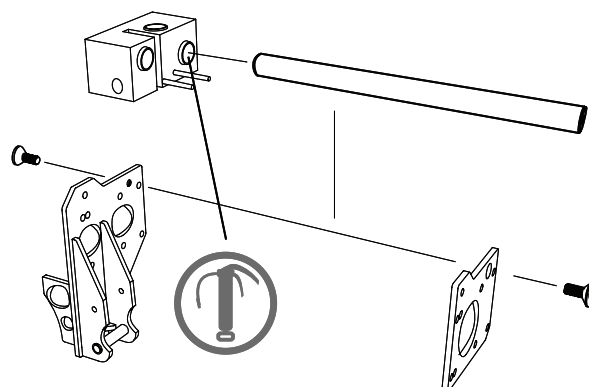


2

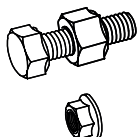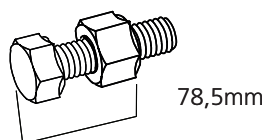


8 x – M12x100 +M12

8 x – M12

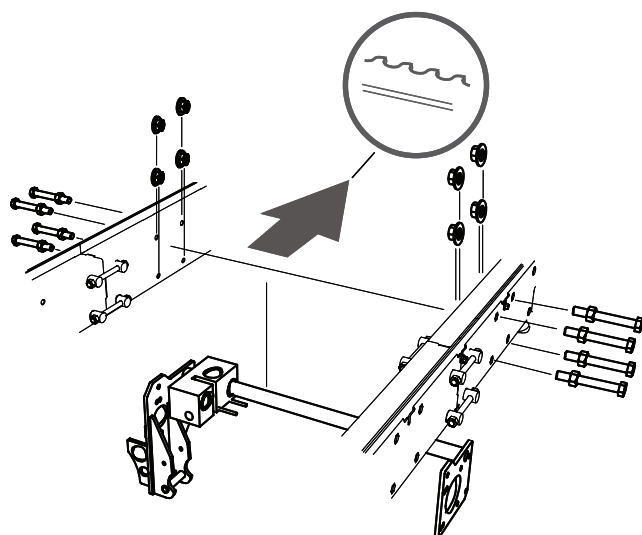

3



2 x – M12x30

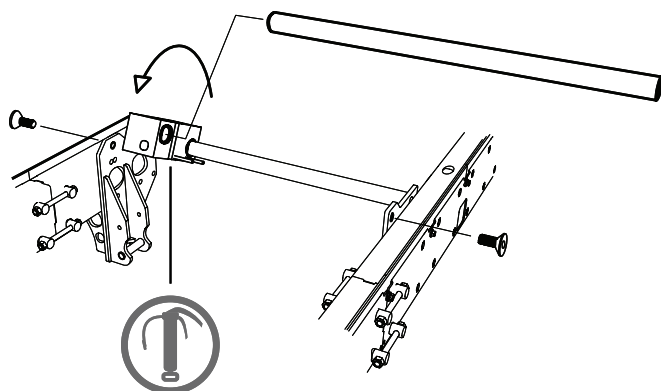







01-00627



4

-  1 x – M10x110
-  1 x – M10x140
-  2 x – M10
-  1x – 03-02868 (105mm)
-  1x – 03-02878 (77mm)

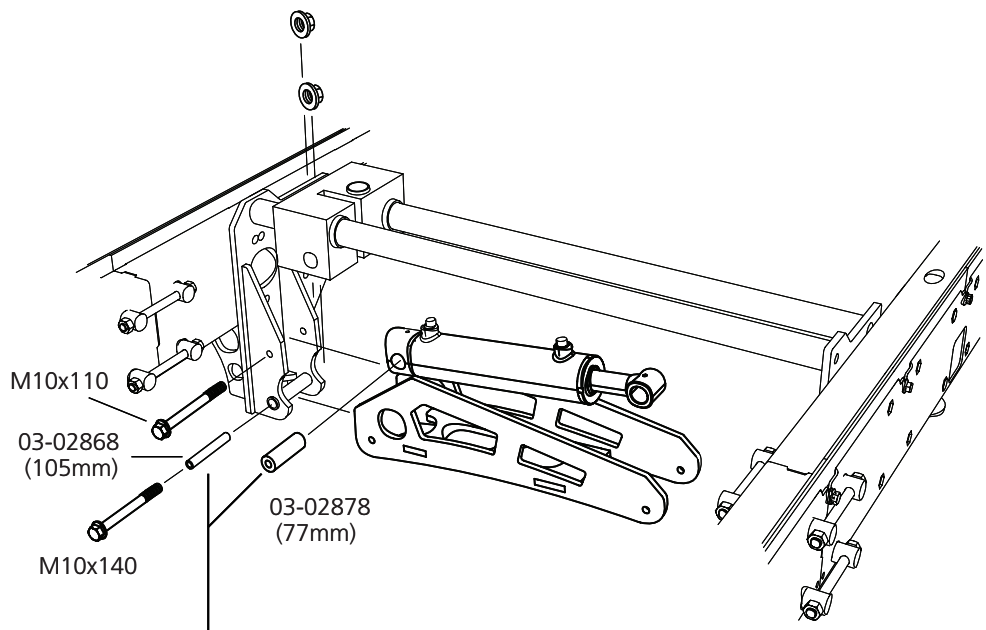

5

-  1 x – M10x100
-  1 x – M10x110
-  1 x – M10x140
-  3 x – M10
-  2x – 03-02878 (77mm)
-  2x – 03-02879 (35mm)
-  1x – 03-02868 (105mm)

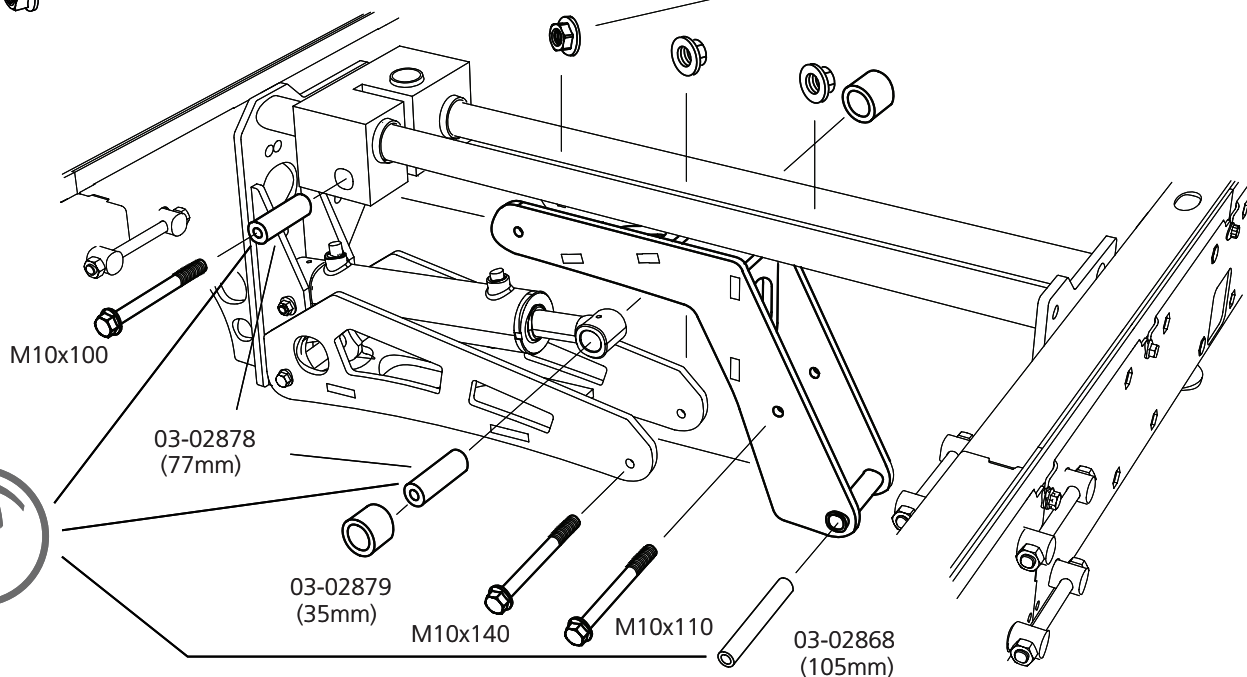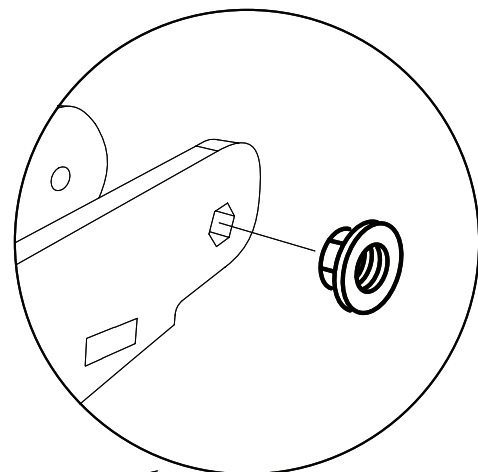




01-00627

6




2 x – M8

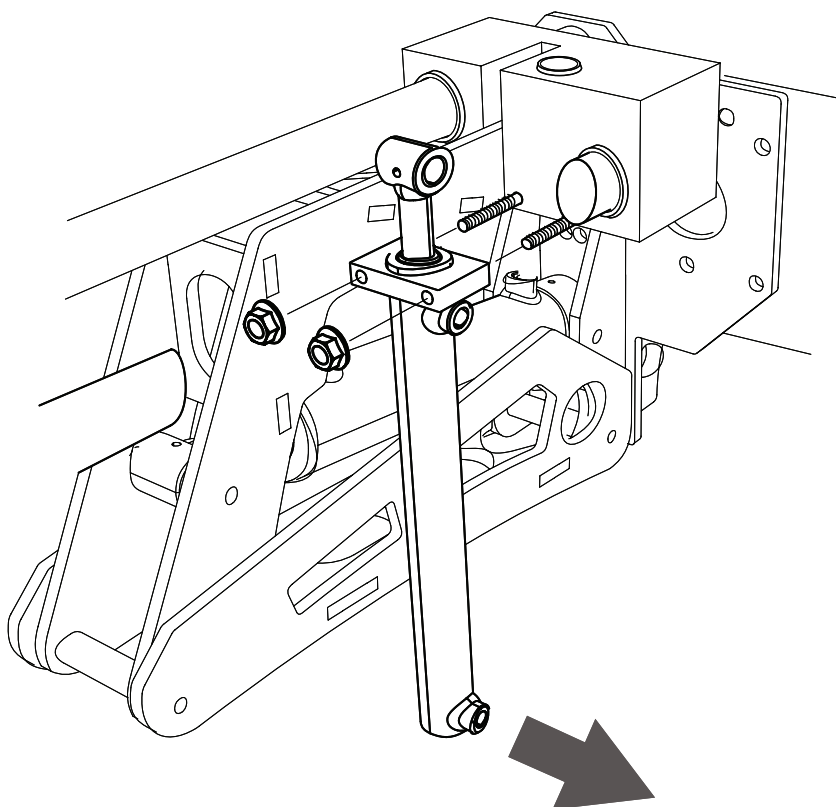

7




1 x – M12x30



1 x – M16x100




1 x – M16

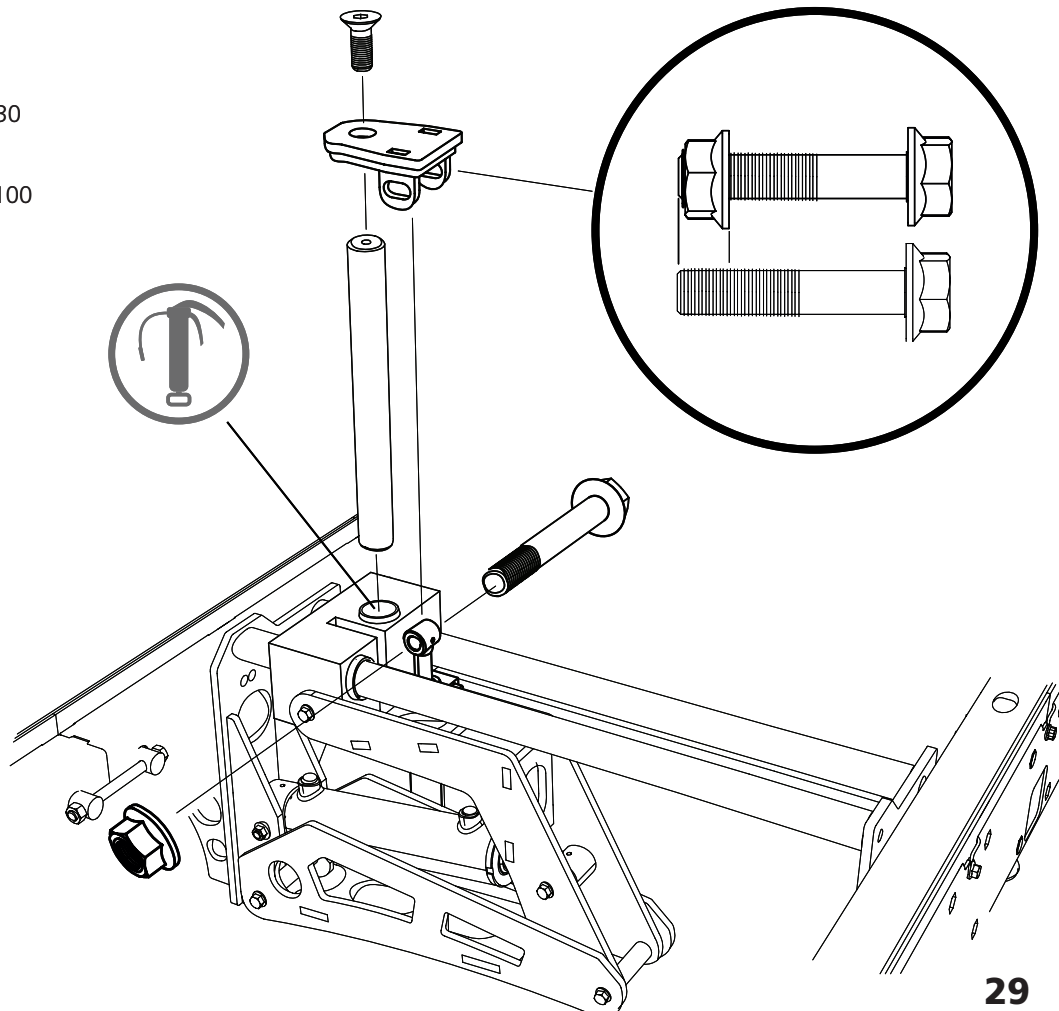



00-00102

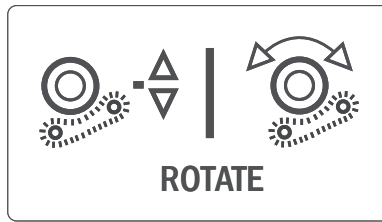


We recommend laying out all fasteners on a tray or similar to make the task easier.

To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.


Position 00-00102

The log beds are positioned on pipe number **4** viewed in the sawing direction. The log beds are then placed on hole pattern **6** counted from the joint on the pipe in the sawing direction.

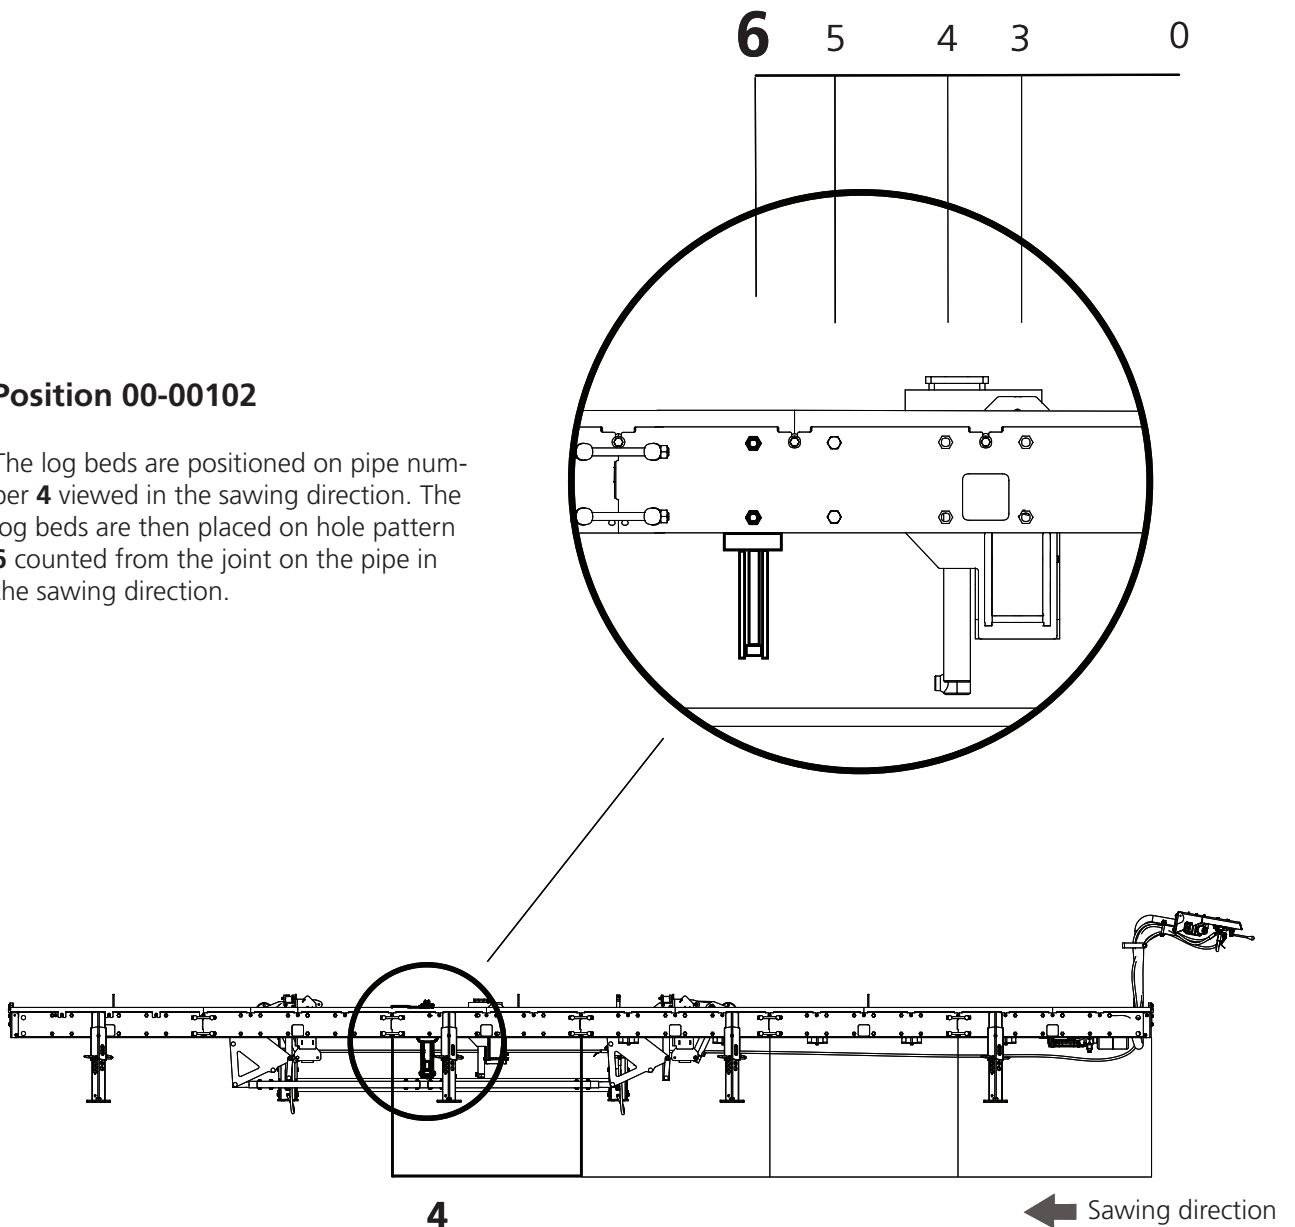





00-00102

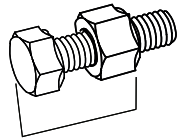

78,5mm

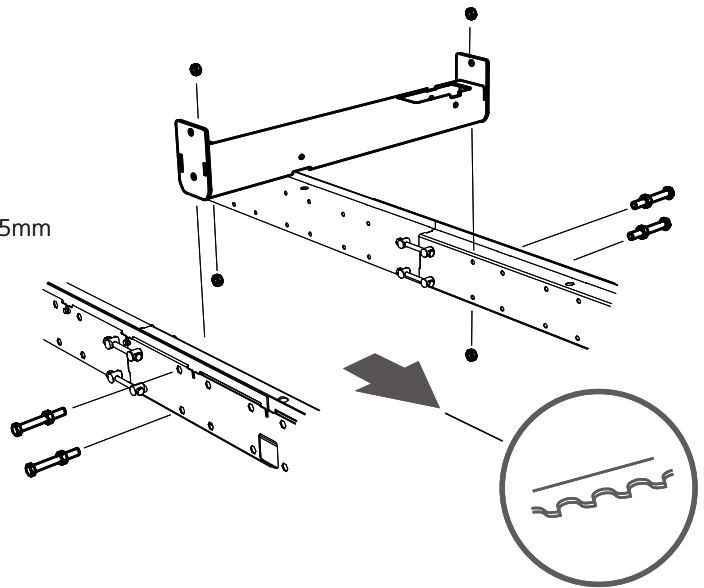

1




4 x – M12x100 +M12



4 x – M12



2




4 x – M10x70



4 x – M10

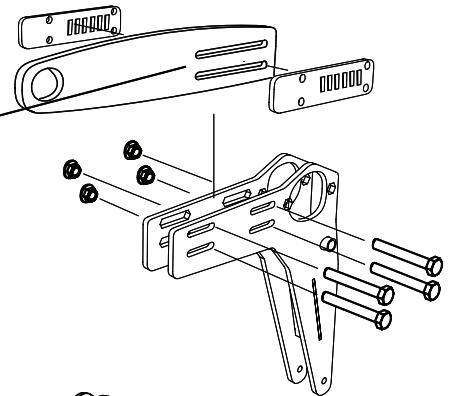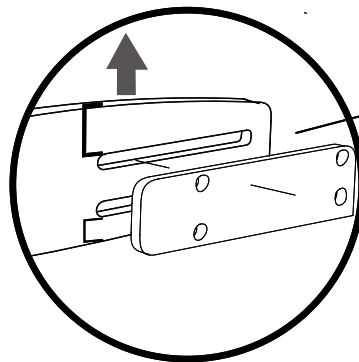


3




1 x – M10x110



1 x – M10




1x – 03-02894 (90,5mm)

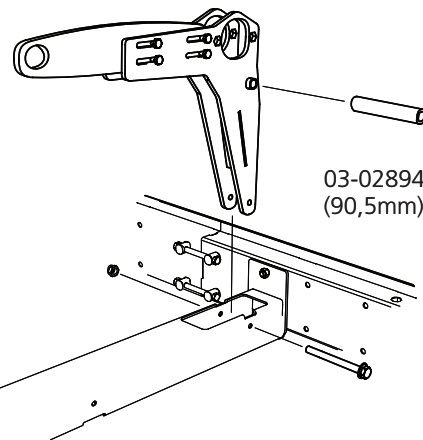


03-02894
(90,5mm)



4



1 x – M10x110



1 x – M10x75



2 x – M10




1x – 03-02878 (77mm)



1x – 03-02898 (46,5mm)



2x – 03-02898

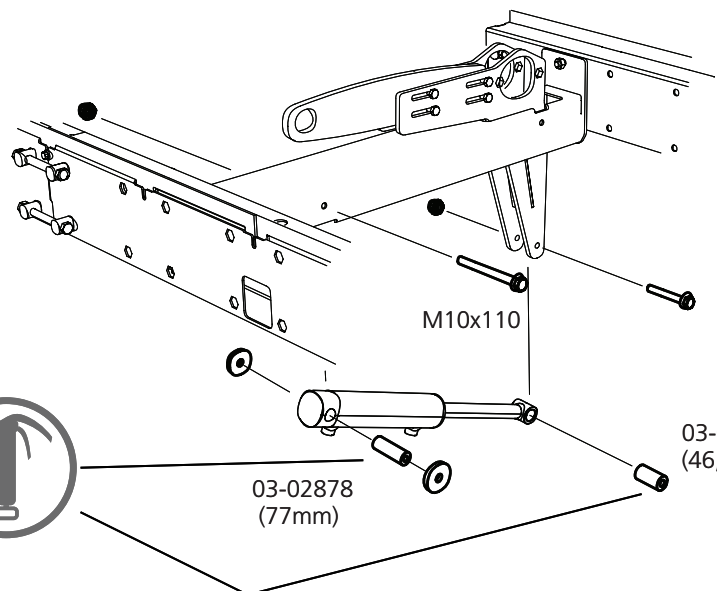


M10x110

03-02878
(77mm)

03-02898
(46,5mm)



00-00102

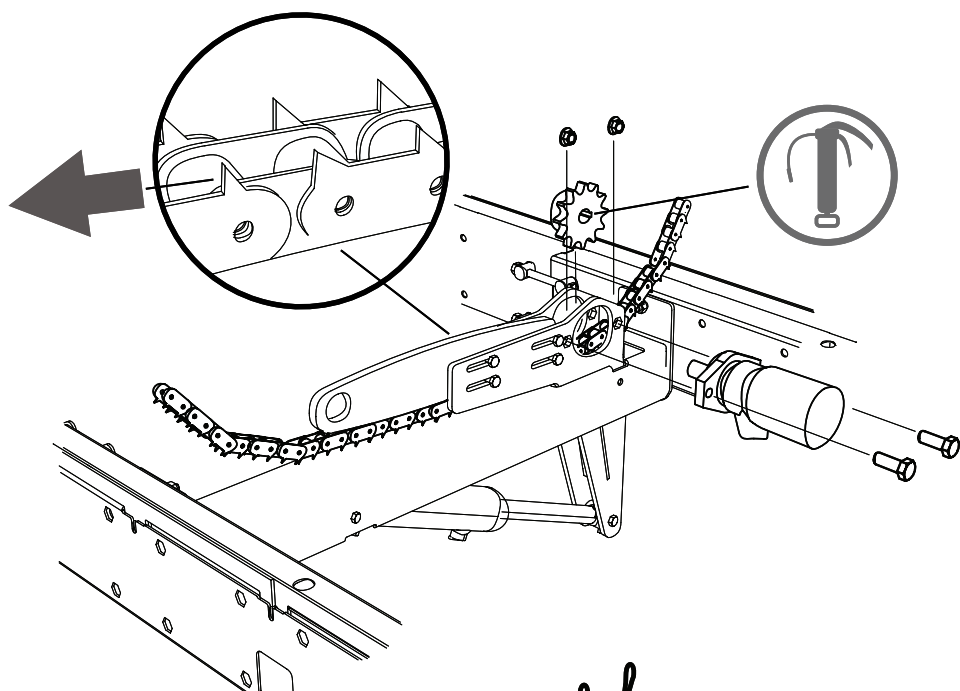

5



2 x – M12x30




2 x – M12




1x – 04-00437



04-00550 B751pro
04-00435

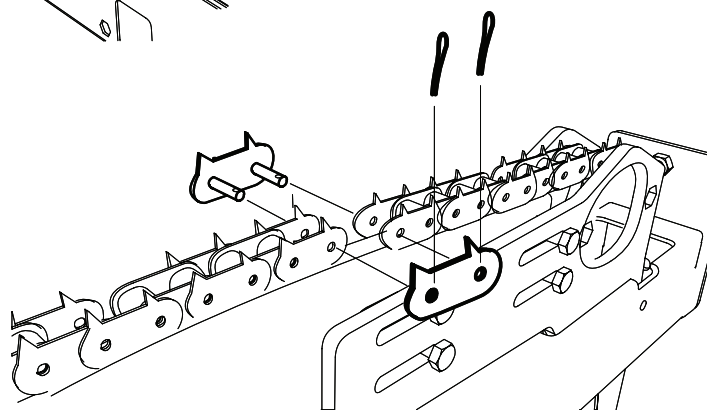

6


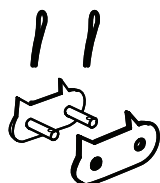


1x - 04-00554

7

Adjusting chain tension

Adjust the chain tension by releasing the screws holding the guide bar, then tighten the chain using a chisel or a breaking bar. Then re-tighten the screws.

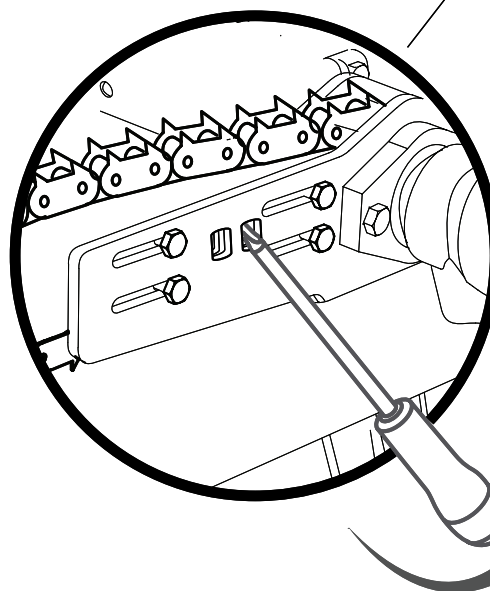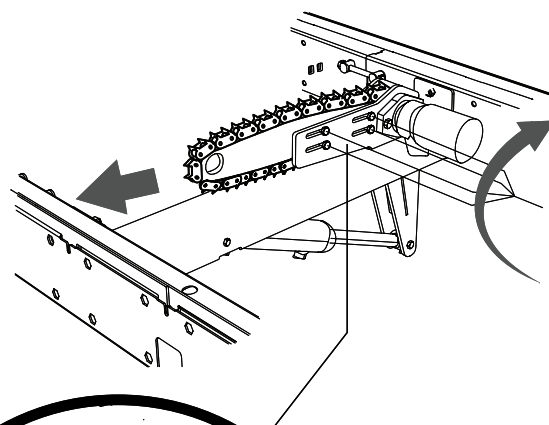



8310-001-0205



LOAD

Position 8310-001-0205


The log loaders are positioned on pipes number **3** and **5** viewed in the sawing direction.

Count the hole patterns from the pipe joint.



We recommend laying out all fasteners on a tray or similar to make the task easier.

To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.

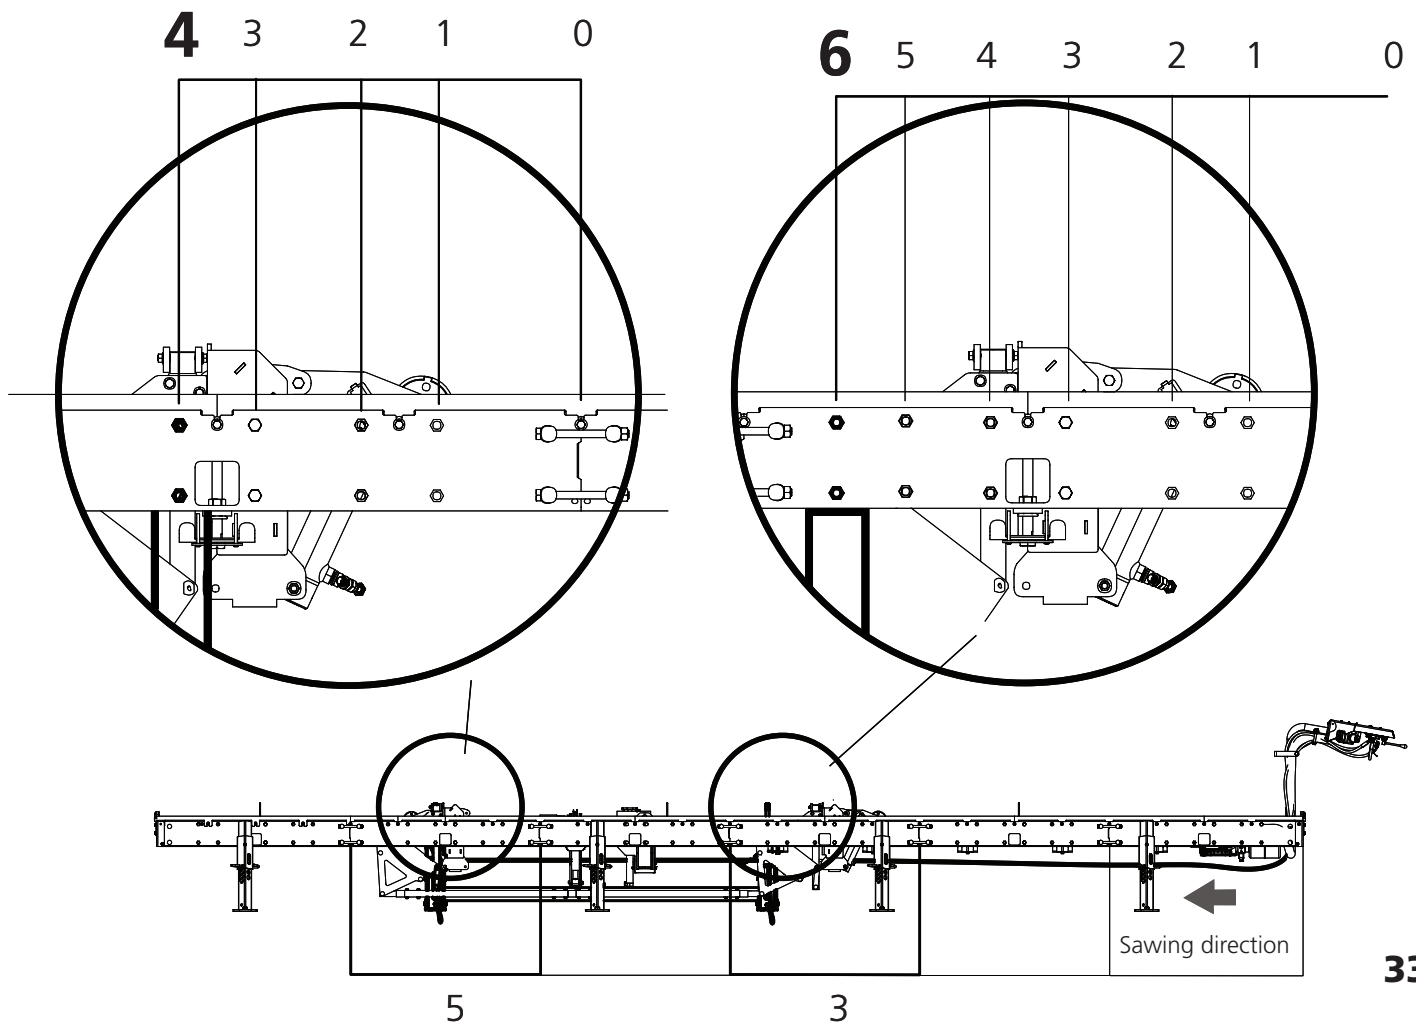



8310-001-0205

1




4 x – M10x20




4 x – M10




4 x – M10

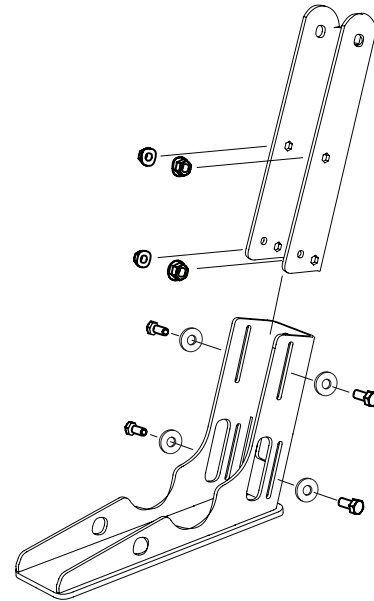

2




4x – M12x100





2 x – M12x100 + M12




2 x – M12

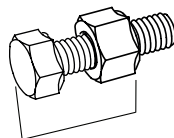

78,5mm

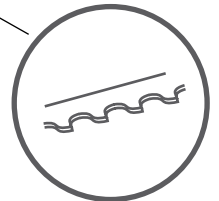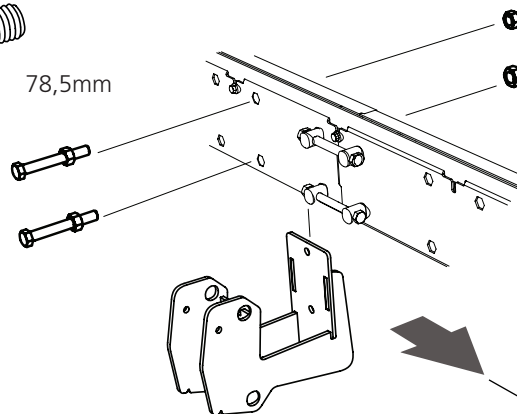

3



1 x – M12x130





1 x – M12



1 x – M12



1x – 03-03094 (97mm)

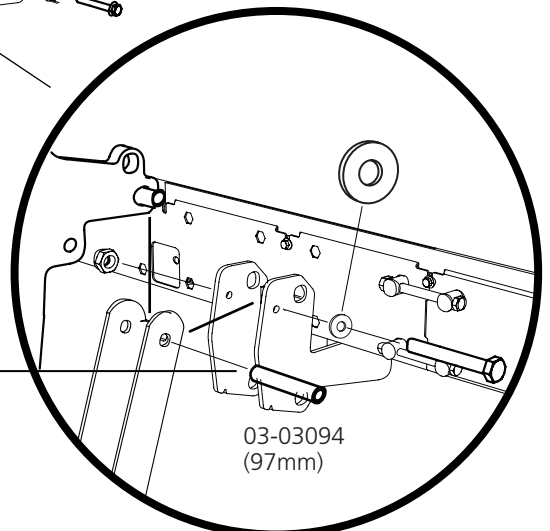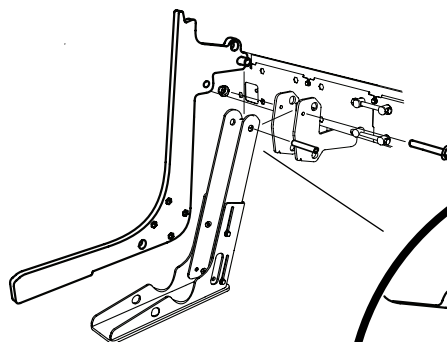


03-03094
(97mm)




8310-001-0205


4

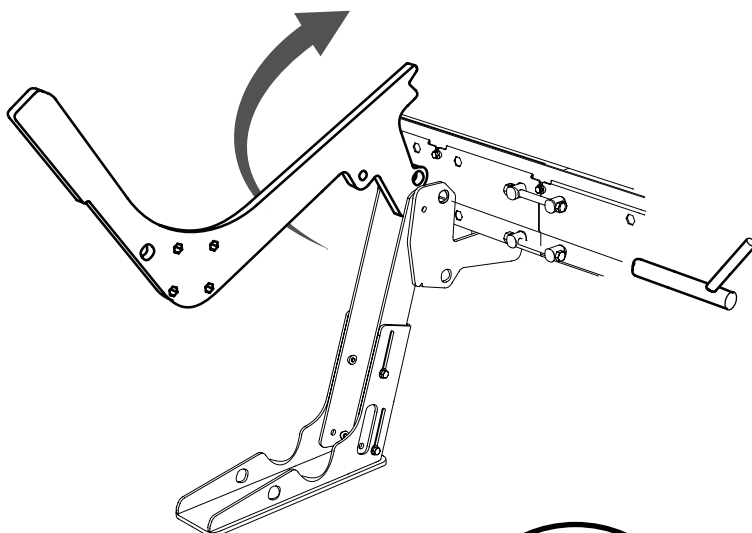

5

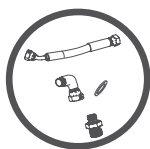

04-00468



1 x – M12x110




1 x – M12



1 x – M12



1x – 03-03105 (78mm)

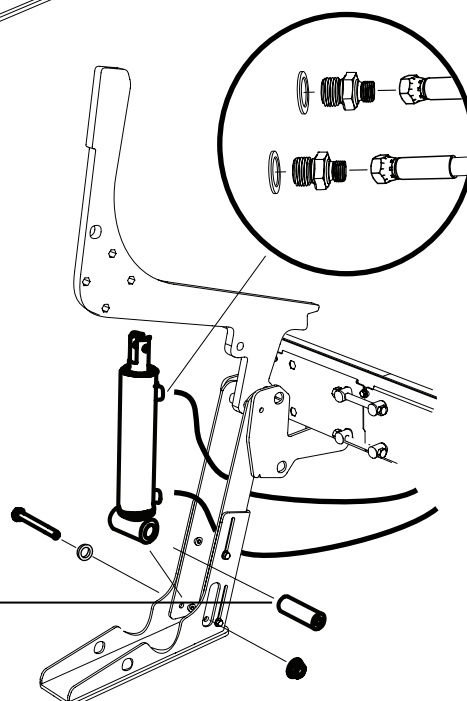

6




1 x – M12x55



1 x – M12



1x – 03-03102 (21,8mm)

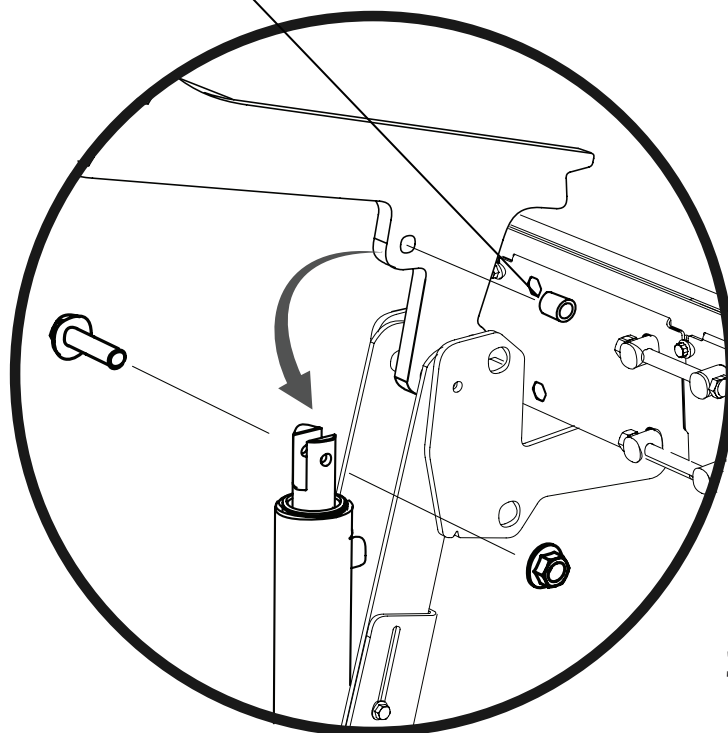



8310-001-0205


7



4 x – M10x25



4 x – M10

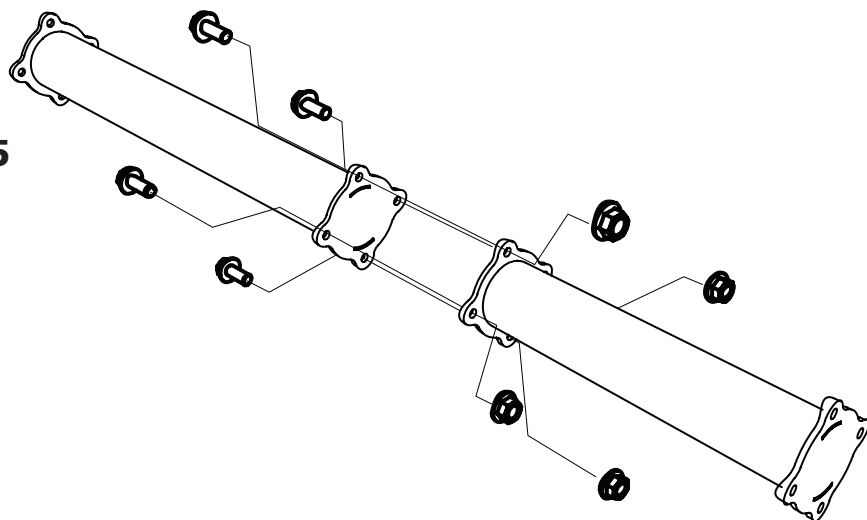


8



4 x – M10x30



4 x – M10

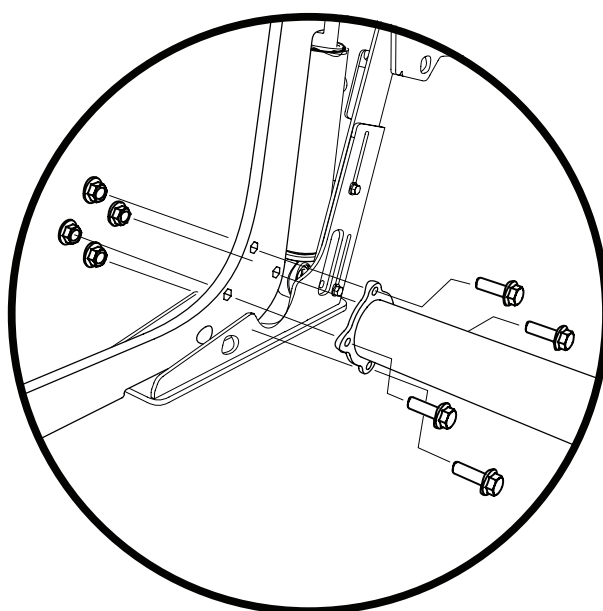

9





4 x – M8x40



4 x – M8



2 x

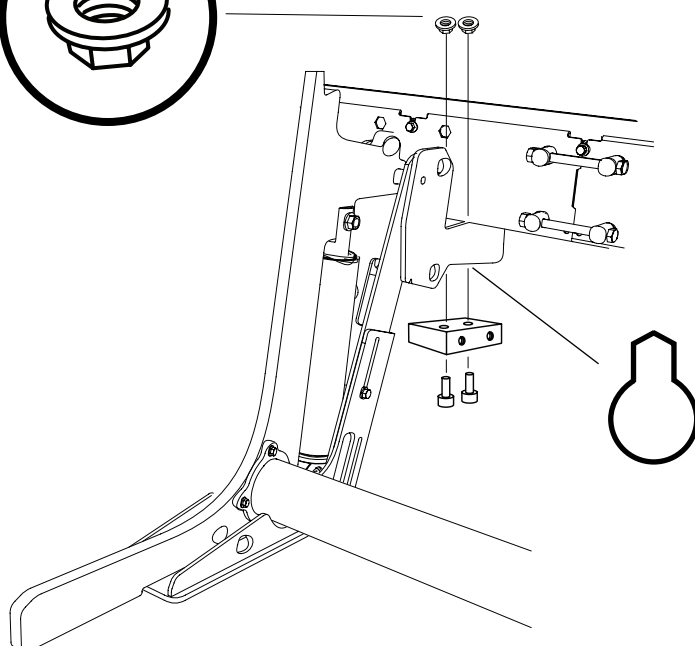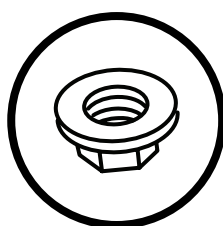



01-00560

POWER UNIT



To start the next step, the parts from the packages are needed. **01-00560**. We recommend laying out all fasteners on a tray or similar to make it easier to find screws.

To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.

1




4 x – M10x25



4 x – M10


2

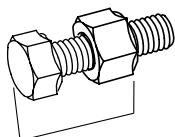

78,5mm



2 x – M8x20




1 x – M12x90 +M12



1 x – M12


3



2 x – M12x90 +M12



2 x – M12


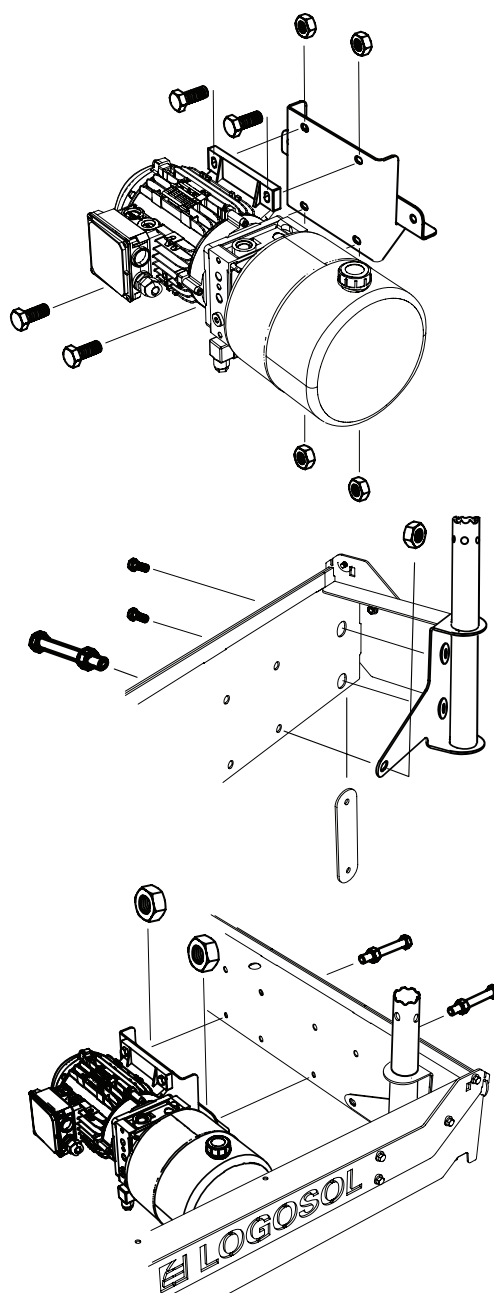




01-00718


PETROL UNIT

1

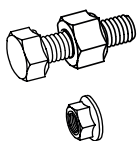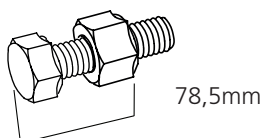


3 x – M12x100 +M12

2 x – M12

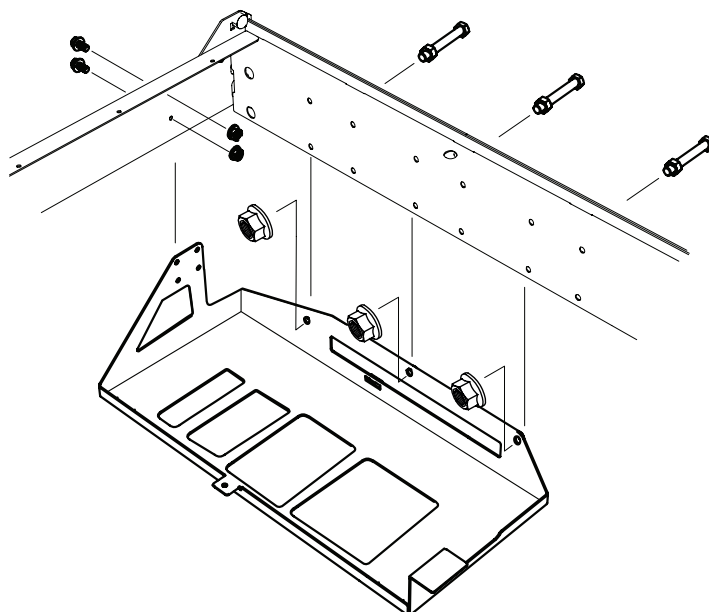


2



1 x – M8x20




1 x – M8

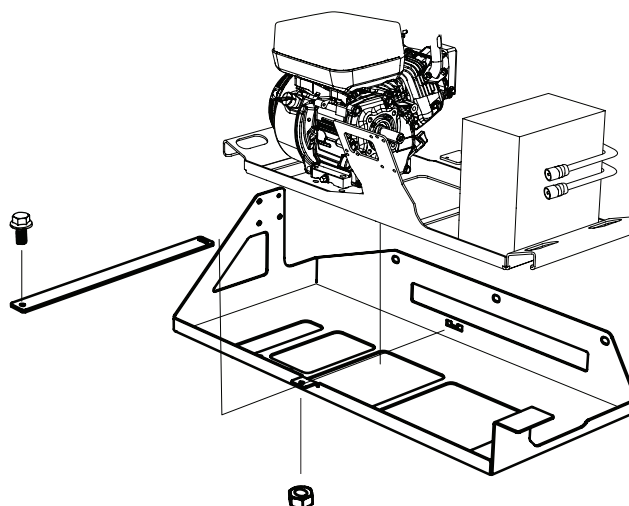


**01-00560**

CONTROL PANEL

1


2 x – M8x20





1 x – M12x100 +M12



1 x – M12

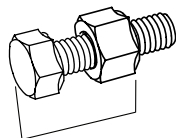


78,5mm

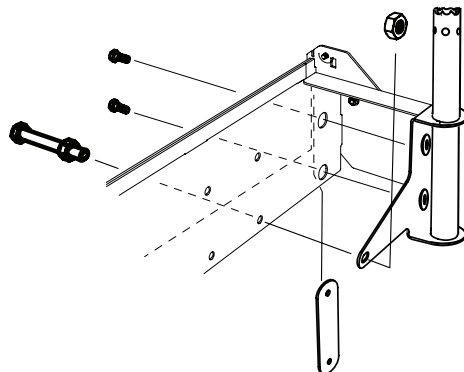**2**

4 x – M6x16



4 x – M6

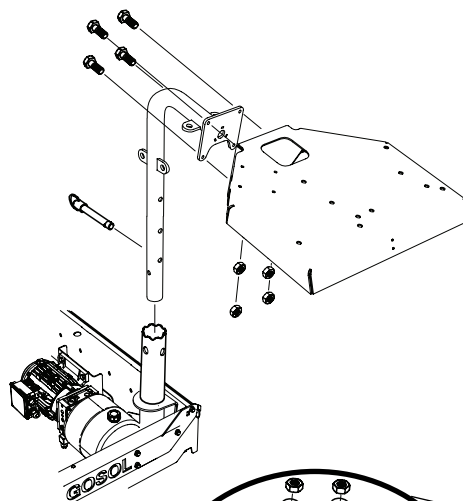**3**



6 x – M8x14



4 x – M4



4 x – M4

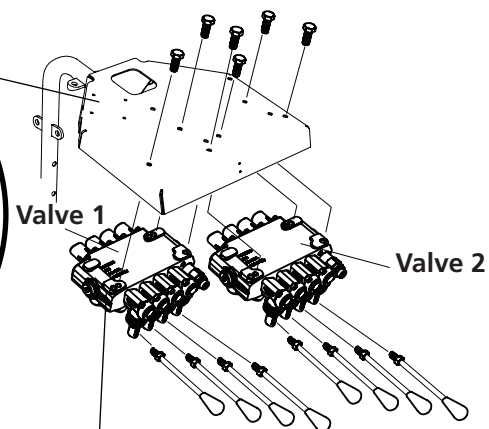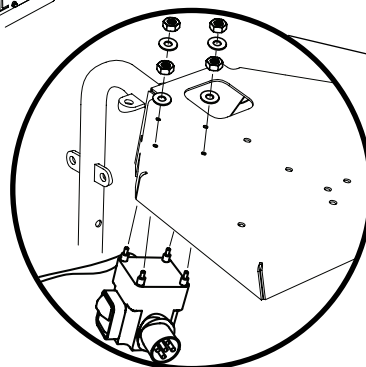


Valve 1

Valve 2

Plugs in ports

To pair the valves, a steel plug in port T:2 must be removed from valve 1. Unscrew the steel plug (1) and unscrew the carryover plug (2), then screw the steel plug back into port T:2. Check that all sealing surfaces are clean before tightening.

Remove the plastic paintwork covers from the levers.

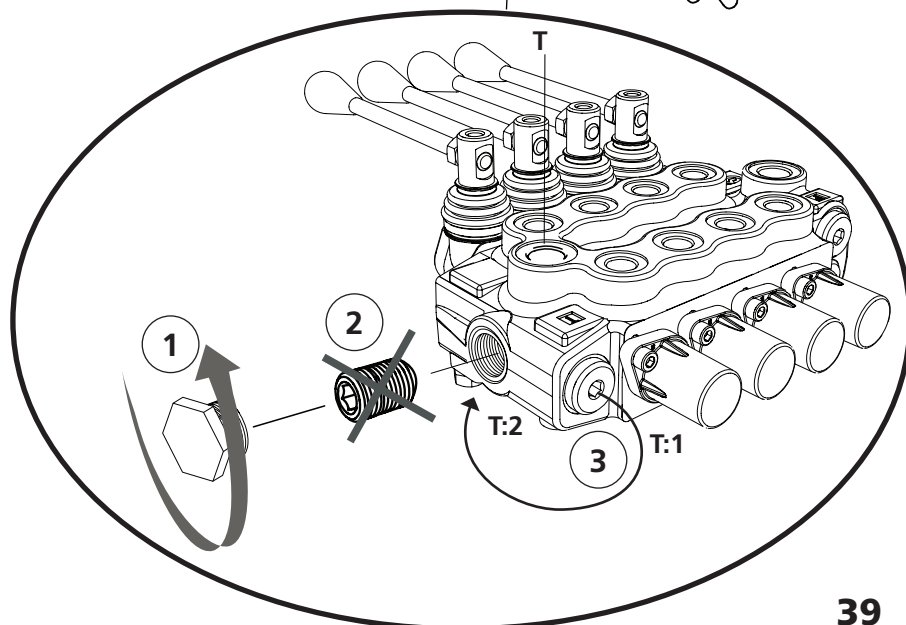

1

2

T

T:2

T:1

3

CONNECTING THE UNIT AND PAIRING THE VALVE

Remove the plastic plug on the pump, tank and work ports wherever the hose is fitted.




Position of functions on the valve



01-00584

01-00627

01-00556

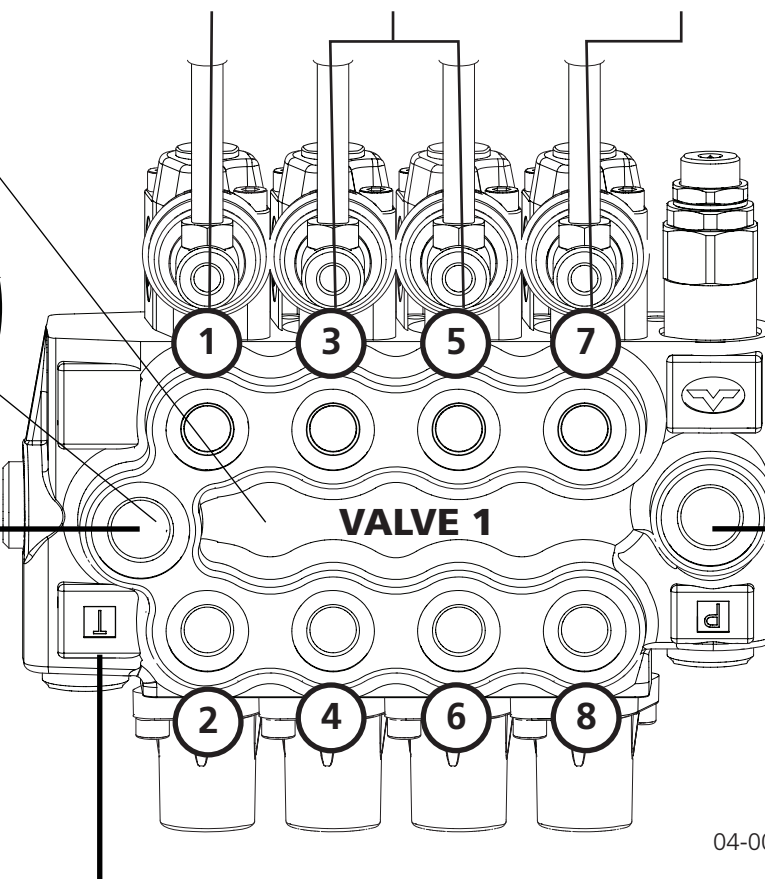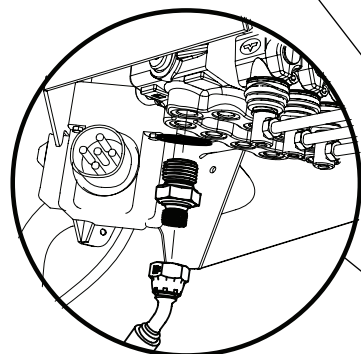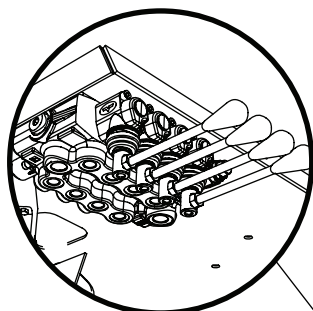

04-00483

04-00482

T


04-00530 (el)

04-00575 (bensin)




Power unit 01-00560

1x - 04-00439 (04-00530 included)

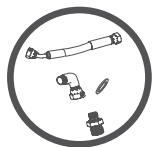


T

P

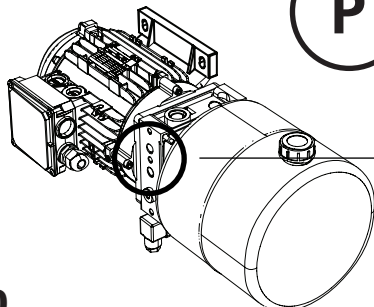


Pairing of valves

1x - 04-00444
(04-00483,
04-00482 included)

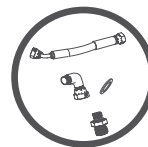

NB! Ports 7 and 8 on valve 2 have to be plugged using a 1/4" steel plug unless the log loader (8310-001-0205) is used.





Position of functions on the valve

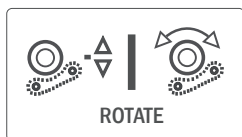

01-00102

01-00584

8310-001-0205

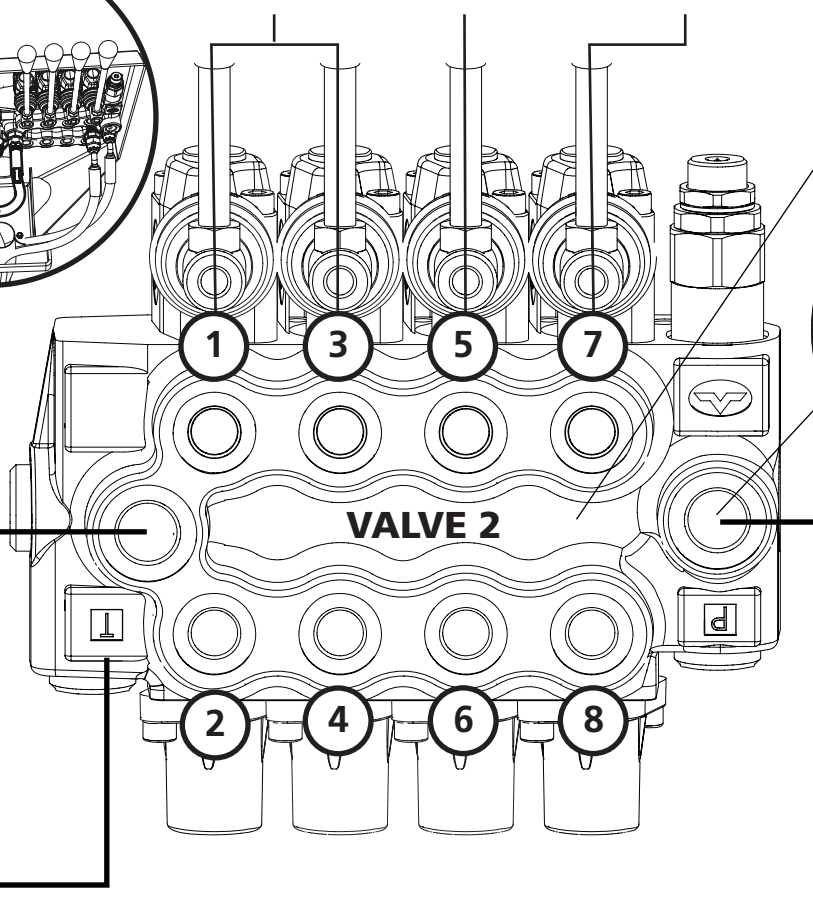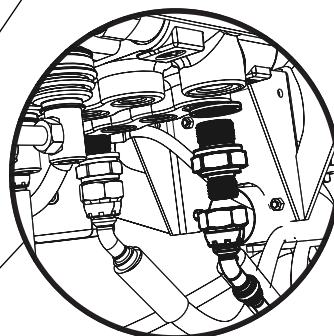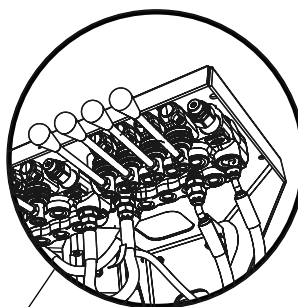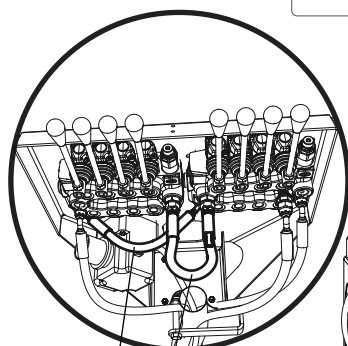

04-00530 (el)



04-00575 (bensin)



Petrol unit 01-00718

1x - 04-00574

(04-00575 included)

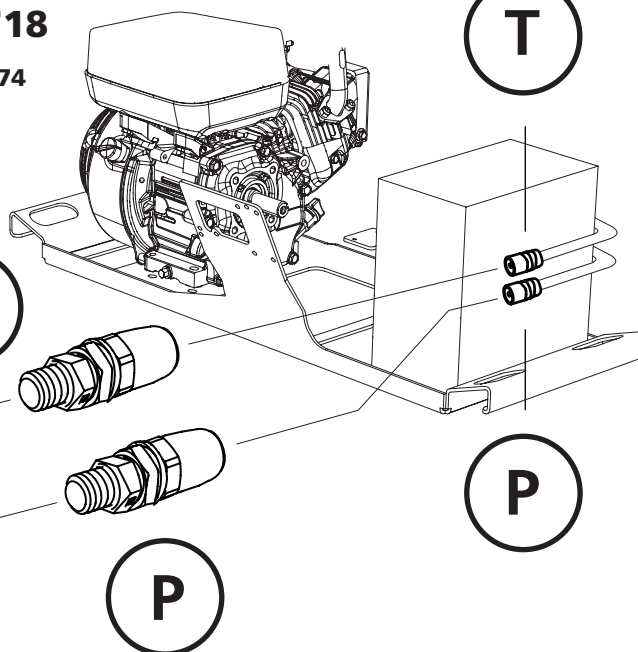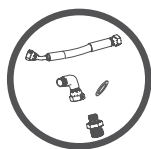


CONNECTING THE HOSE

Connection T/P petrol unit

The petrol unit has quick couplings on the P/T, mount the quick couplings on the pump and tank hoses and connect it into the petrol unit. The connection in the valves is the same for both units.

Stickers

Place the stickers for the functions in the relevant locations on the control panel.




1x – 080-828-021-0070



VALVE BLOCK


Hydraulic cylinders

To facilitate connection of the hydraulic cylinders, we define the connections as piston side and rod side.

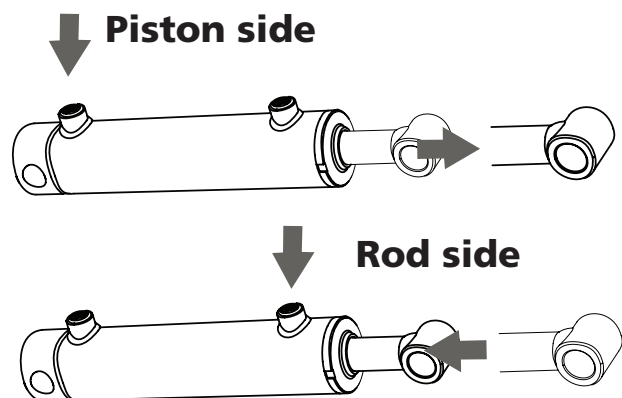

Connecting hydraulic cylinder

Logosol recommends connecting the piston connections from the hydraulic cylinders on the piston side of the valve block.

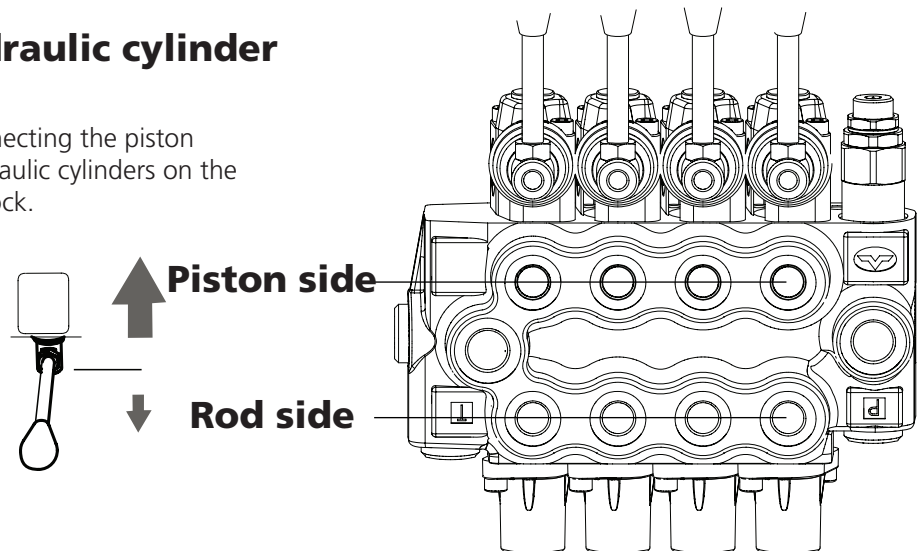

Connecting hydraulic cylinders

Fit the hoses onto the hydraulic cylinder. Note the location of the respective hose on the cylinder and valve. The hoses connected to the piston side of the cylinder shall be connected to the piston side of the valve.

Note the illustration showing the side of the sawmill into which the hoses should be installed for each function.

Then perform the procedure on the other functions based on the respective instruction.

Double-check that all connections are properly tightened before starting work on the first start-up of the machine.



Warning! Cuts. Never handle pressurized hydraulic hoses, oil from a pressurized hose can penetrate the skin and cause serious injury.




Do not lift or handle hydraulic equipment connected to the hoses or couplings.




Handle hydraulic hoses and couplings carefully during assembly and maintenance work. Avoid sharp bends on hydraulic hoses. Sharp bends damage the hoses and increase the risk of breakdown. Check that there is enough hose for the movement of the function.

Connection angle




the illustration shows the connection angle of the hoses for each function in top view.

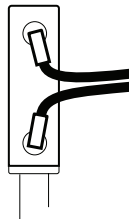

01-00584

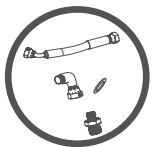


1x - 04-00539

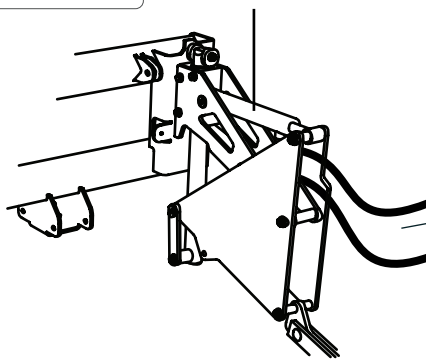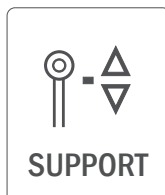


04-00537

04-00538

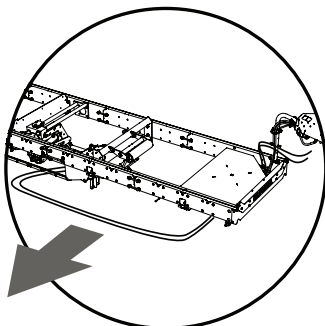


Position of hydraulic hose

The illustration shows the side of the saw bed to which the hoses should be installed for each function.

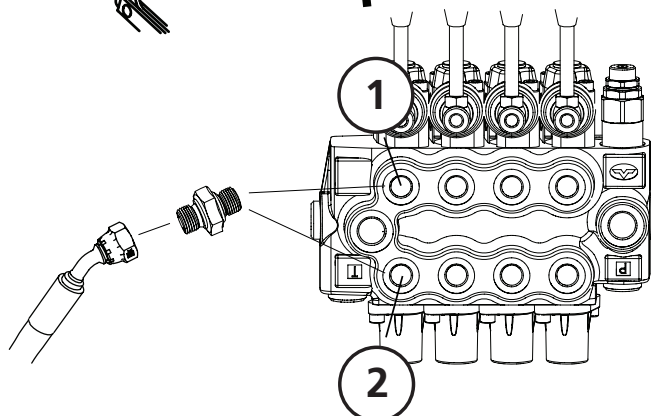






01-00627

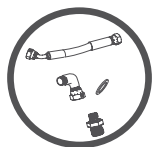



1x - 04-00441

1x - 04-00442

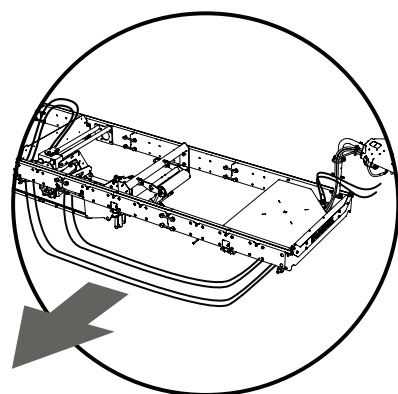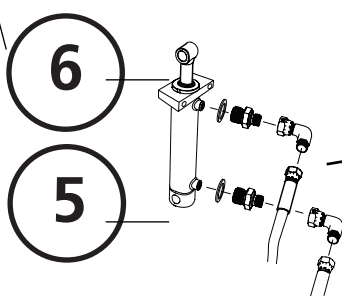
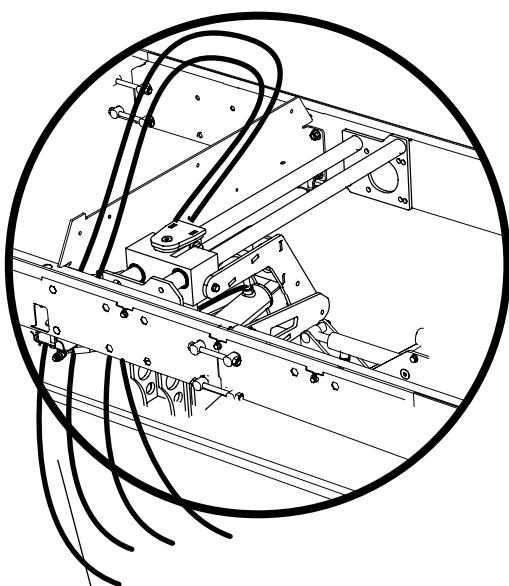


04-00535

04-00536

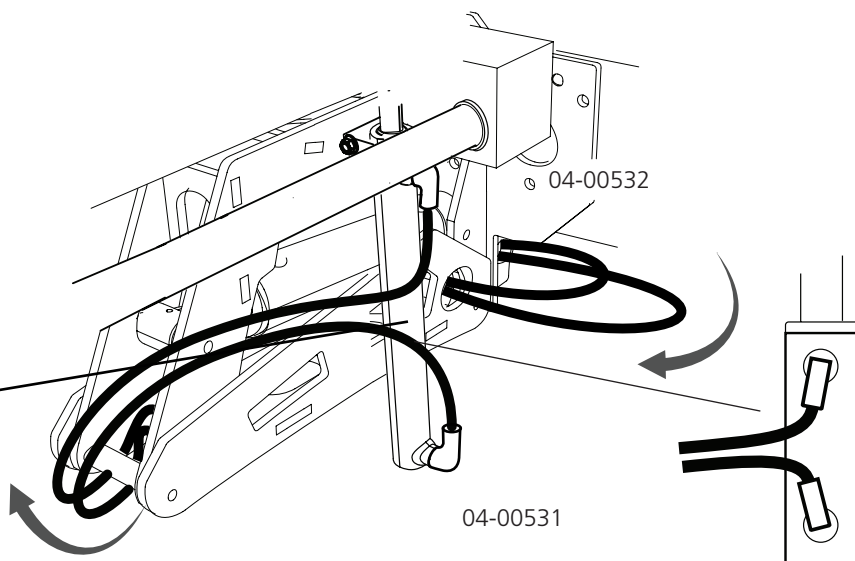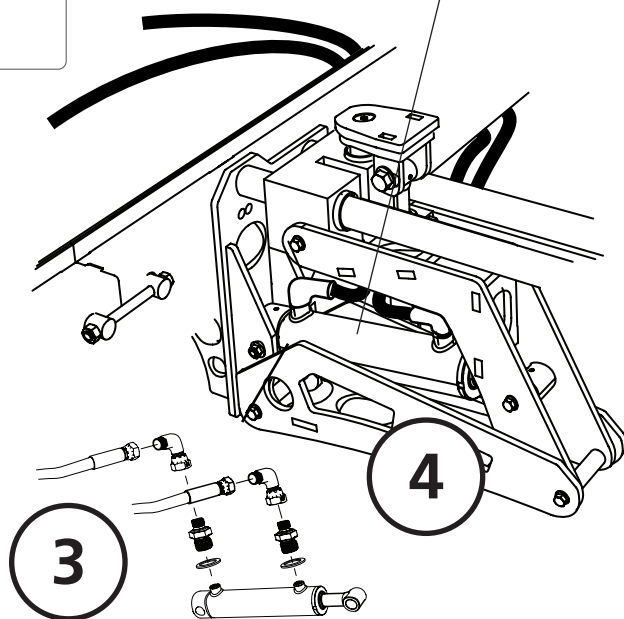


04-00531

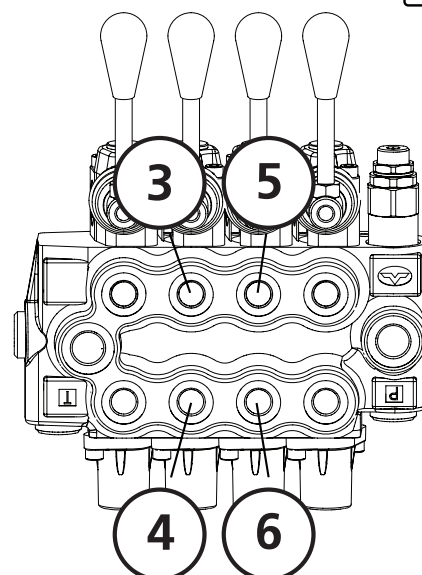
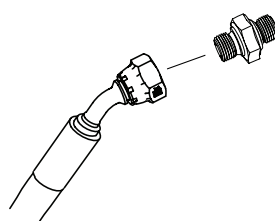





01-00584

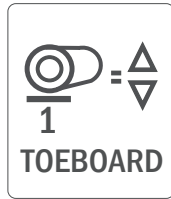





04-00440

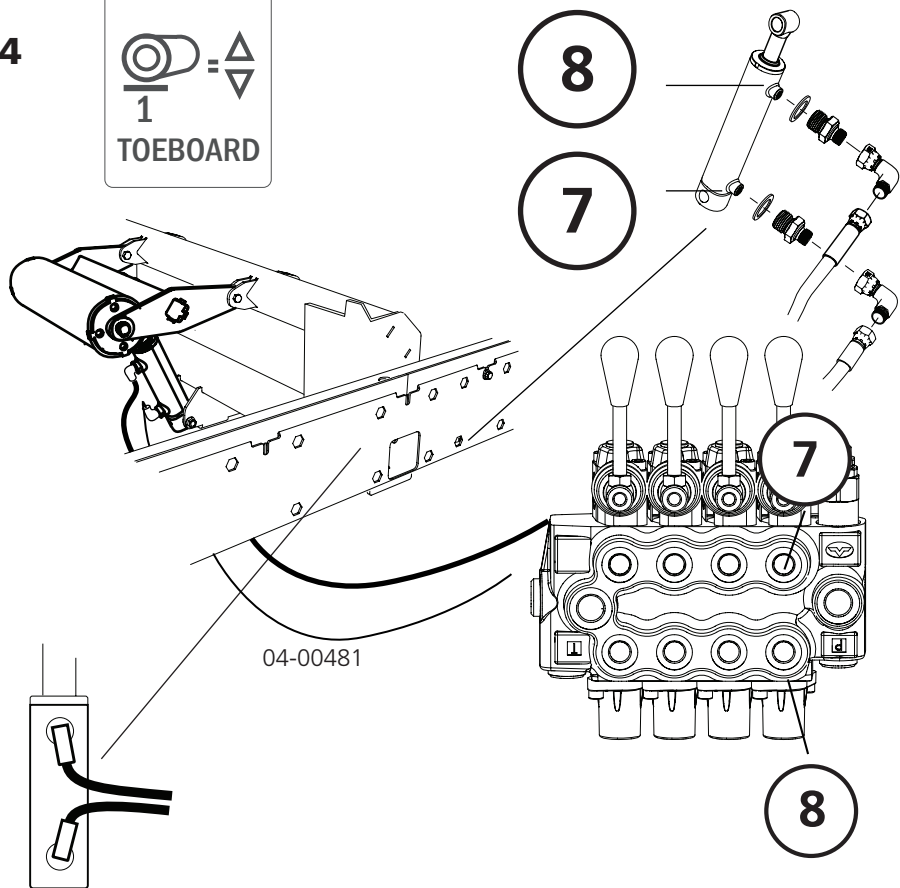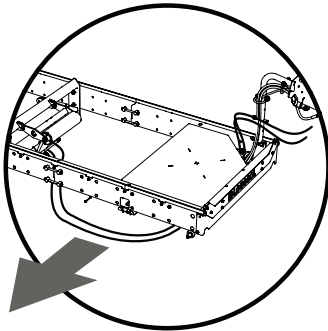

01-00102

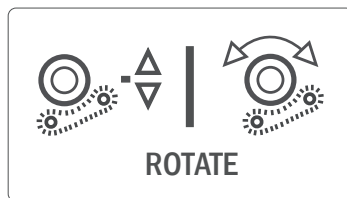


04-00474
04-00477

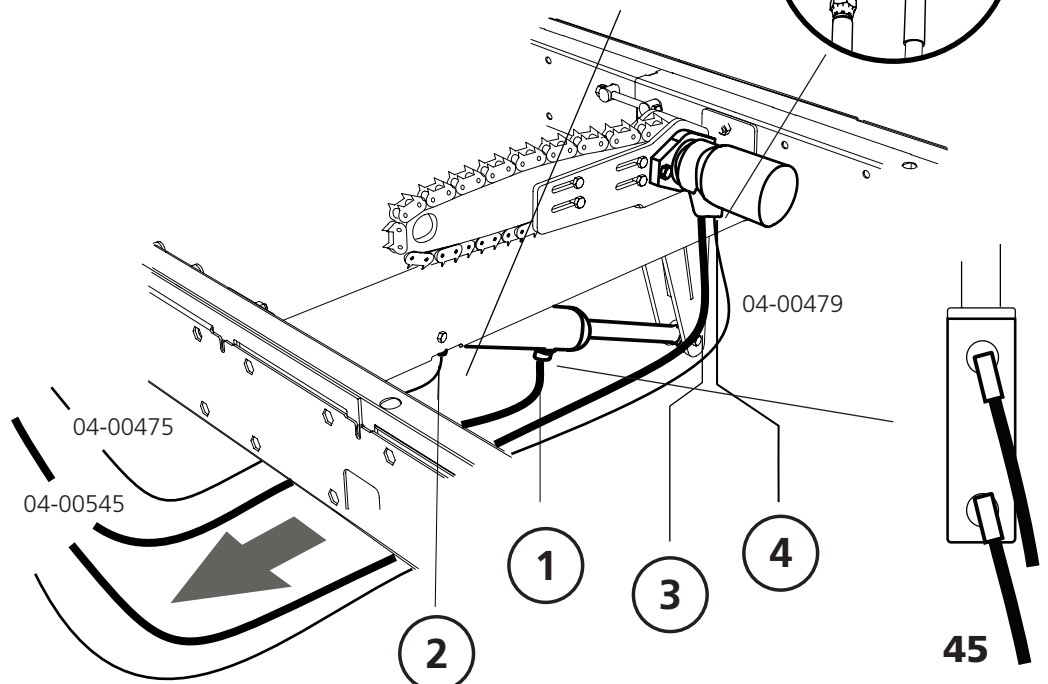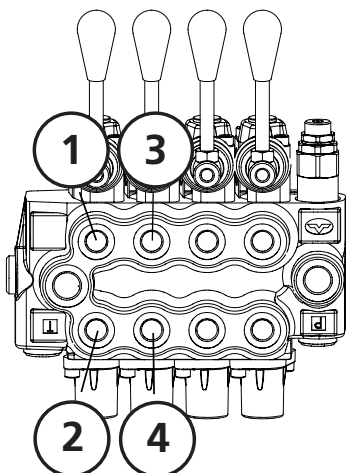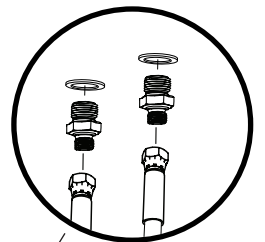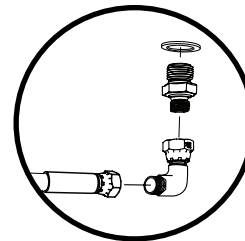







01-00584

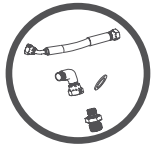



04-00478

6



5

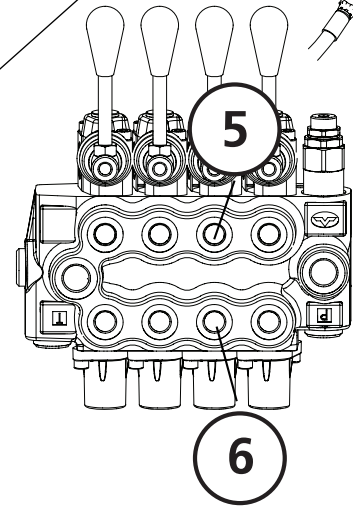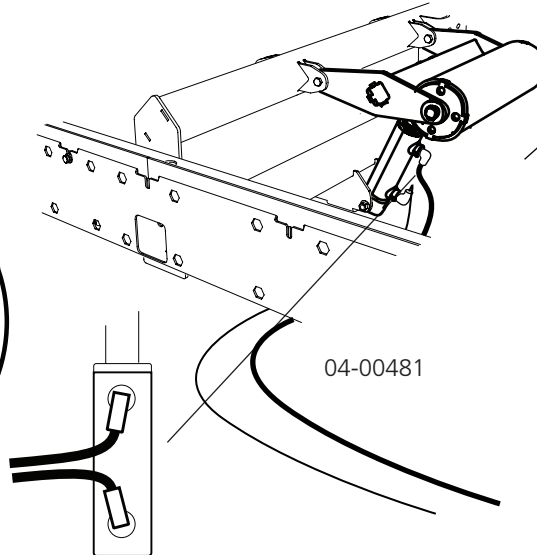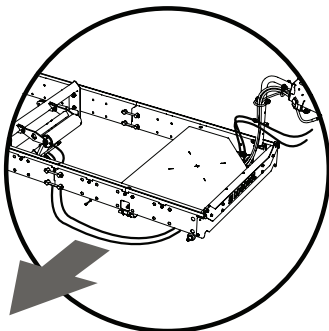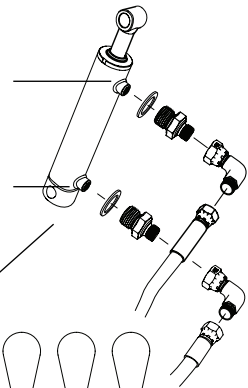

01-00604

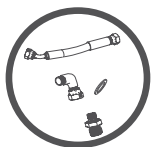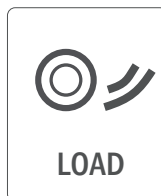

04-00468

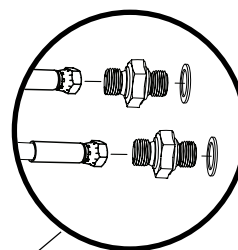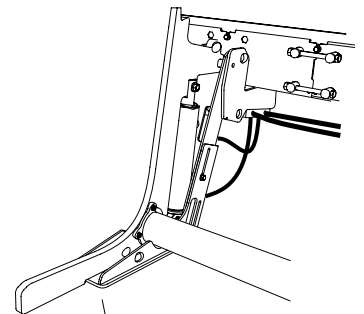


04-00472




04-00471

04-00470

04-00470



2x
(1/4" plug)
(included in
01-00766)

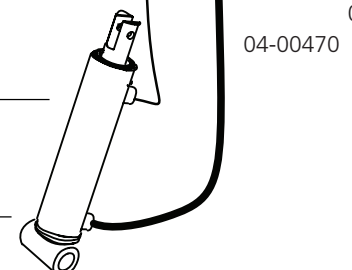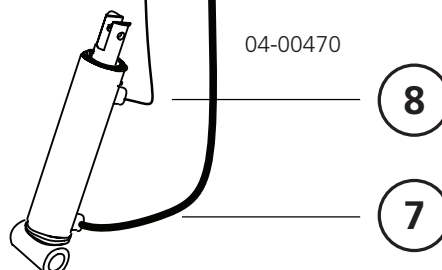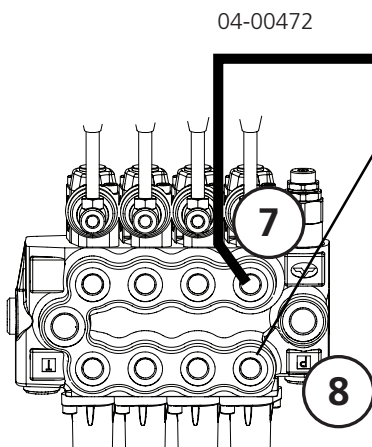


HYDRAULIC HOSE

Securing hydraulic hose


The hydraulic hoses shall be secured beneath the log bed on its route between the functions and the operating position. Secure the hoses using the straps provided. Be sure to stretch the hoses, try to minimize the amount of hose hanging between the brackets and ensure that they are not pinched so that the brackets cause wear to the hoses.

At the operating position, hang up and secure the excess hose beneath the work platform using the straps (note: applicable to power units only). Assembly of the platform is on the next page.

With petrol units, straps are used to secure the hoses along the unit platform.

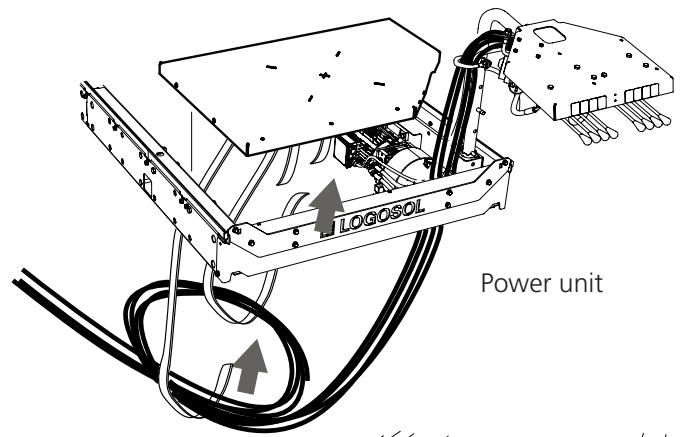


Power unit

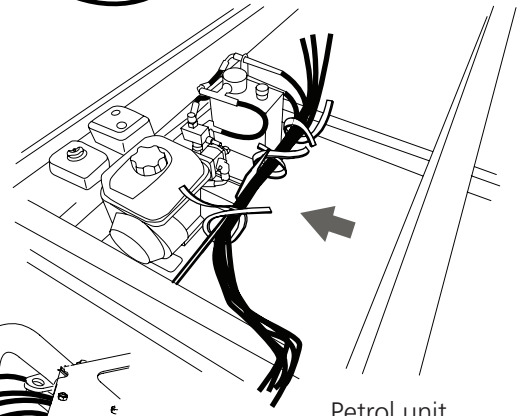


Petrol unit


Fit the cable cover over the hoses on the part that is below the valves.



8 x – 04-00526

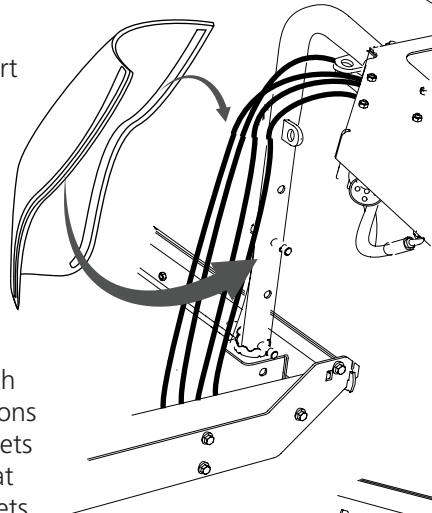



The hydraulic hoses shall be secured beneath the log bed on its route between the functions and the operating position. Using the brackets supplied, be sure to stretch the hoses so that they do not hang down between the brackets and ensure that they are not pinched so that the brackets cause wear to the hoses.



10x – M10x80






10 x – M10

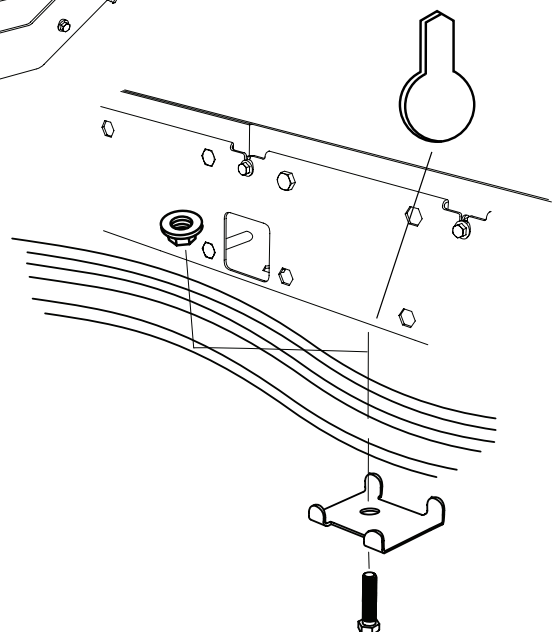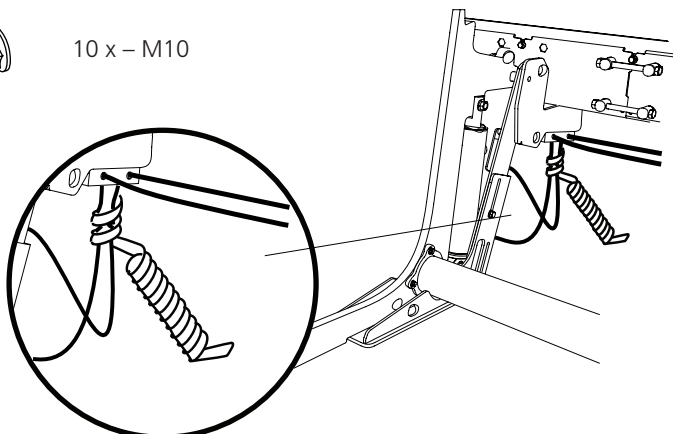

Operating position



The hydraulic hoses shall be secured on their route up to the operating position. Using the brackets supplied, be sure to collect the hoses in a neat bundle and also ensure that they are not pinched so that the brackets cause wear to the hoses. When the hose brackets are mounted, continue with assembling the floor above the hydraulic unit (note: Applicable to power units only).

-  2 x – M12x25
-  2 x – M12x90
-  4 x – M2
-  4 x – M12x90 + M12
-  4 x – M12

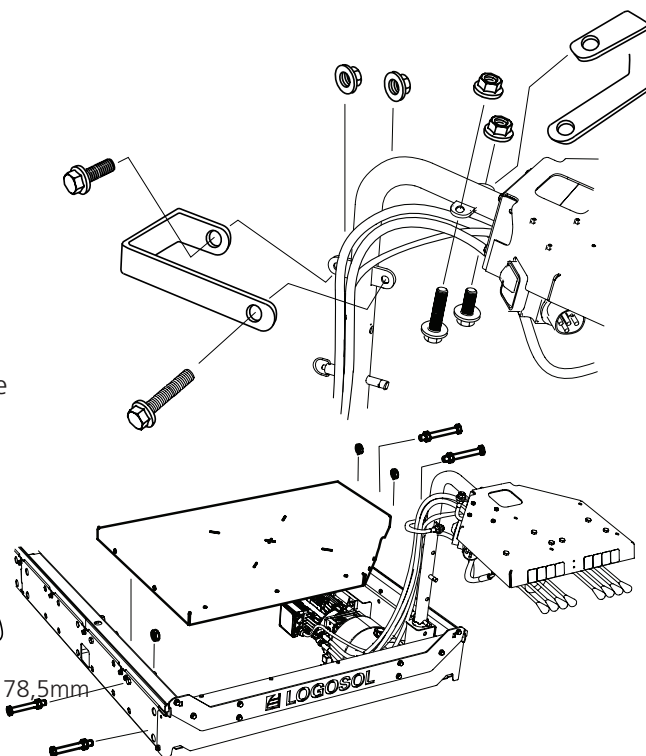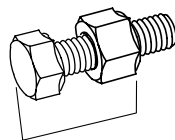

Grip tape


Apply grip tape as illustrated to ensure good grip on the operating position. Cut the strips and wear protective gloves when securing the strips to avoid scratches.

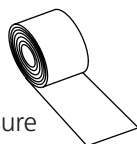

1 x – 04-00528



Adjusting log support

The angle of the log supports is adjustable. The goal is to achieve a 90 degree angular ratio in relation to the log bed. Undo the screws that hold the log supports in the bed. Note that the upper screw towards the centre of the rail should only be very slightly loosened. Then use the knob to adjust the angle. When the angular ratio is 90 degrees, tighten the fastening screws and the knob.

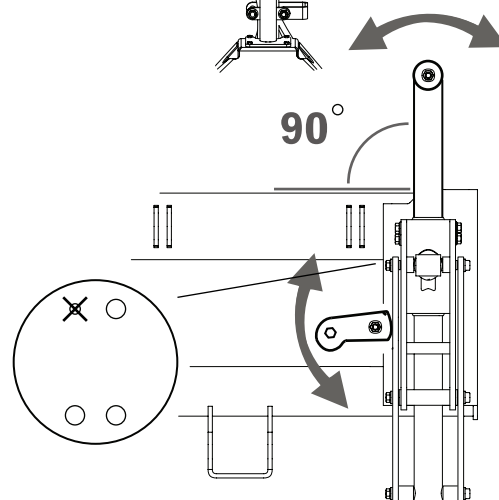


Adjusting log bed

If, after installation, the log supports are at different heights in relation to each other, the log beds must be adjusted. It is the length of the linkage that determines the height of the log supports. To adjust, undo the log beds' screw joints and adjust the beds in the oblong grooves so that the log supports end up at the same level. Then re-tighten the screw joints.

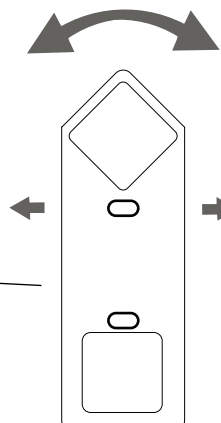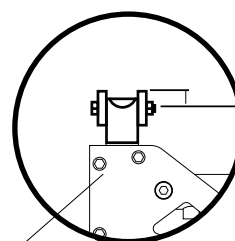


ADJUSTMENT

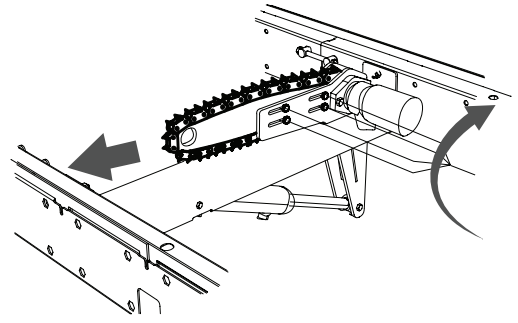


Adjusting chain tension

Adjust the chain tension by undoing the screws holding the guide bar, then tighten up the chain using a breaking bar. Then re-tighten the screws.

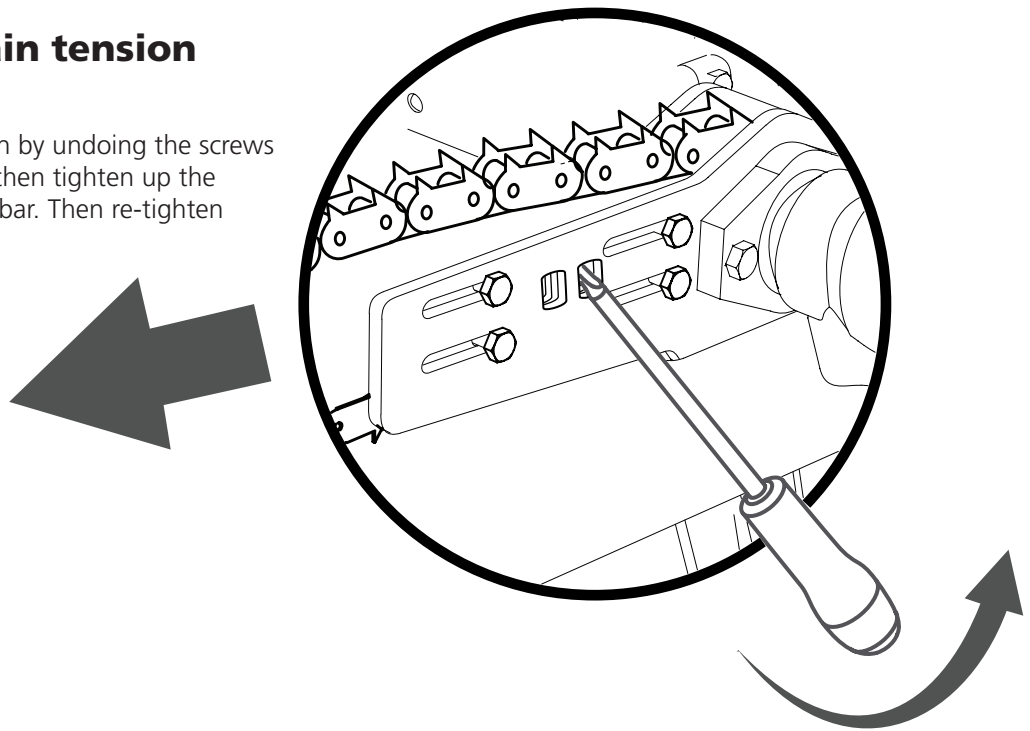

Adjusting log loader foot

In order for the log loader to work, the foot must be adjusted so that it provides support against the ground. Undo the screws and drop the foot down, check the angle of the leg against the marking, and then secure the foot.

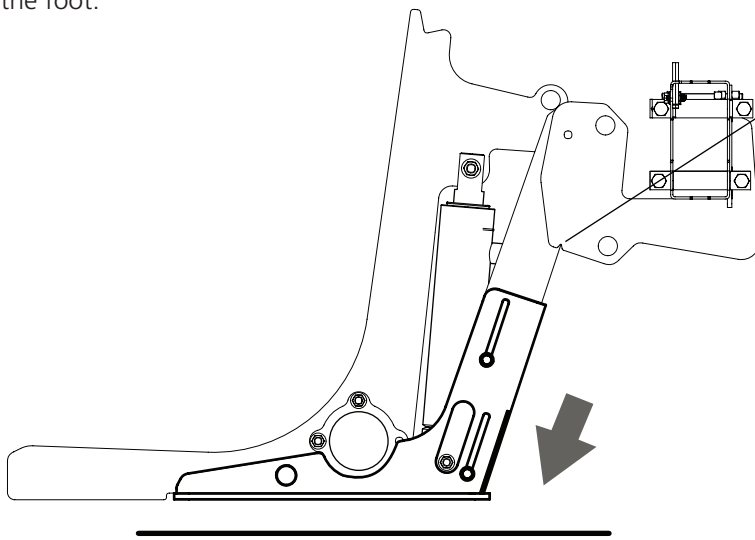

When the leg touches the lowest point of the marking, the leg is at the right angle.

FIRST START-UP

-  **Warning! Fire risk. Hydraulic oil is flammable, do not perform hot work in the vicinity of hydraulic components and equipment.**
-  **Warning! Pinch risk. Do not remain within the work area when the hydraulic cylinders are loaded.**
-  **Warning! Cuts. Never handle pressurized hydraulic hoses, oil from a pressurized hose can penetrate the skin and cause serious injury.**
-  **Warning! Burn injuries. Allow the equipment to cool down before working with hydraulic units and hoses. The hydraulic oil can reach high temperatures during use.**

-  Handle hydraulic hoses and couplings carefully during assembly and maintenance work. Avoid sharp bends on hydraulic hoses. Sharp bends damage the hoses and increase the risk of breakdown. Check that there is enough hose for the movement of the function.
-  Do not lift or handle hydraulic equipment connected to the hoses or couplings.
-  Always use hydraulic oil prescribed by Logosol when working with the equipment.
-  Always wipe up any spillage of hydraulic oil from the product and the working area. Residual hydraulic oil constitutes a slip hazard to users.
-  Always use absorbent cloths beneath the equipment when working with the machine.


First start-up

When all assembly and connections are completed, check that all couplings on the machine are properly tightened. Then fill the tank with oil.

Then start the hydraulic pump and run one function at a time, it may take a little while for the oil to fill the system and force the air out. Place absorbent cloth beneath the couplings for each function that is started up. Check the tightness of the couplings.


It might be necessary to refill with oil several times before there is oil in the entire system. It is a good idea to check the oil level in the tank every time a function is completed. Take care not to run the oil tank dry while filling the hydraulic hoses. If the tank becomes empty, a lot of air enters the system and it then takes longer than necessary before it is forced out.

If the pump is not activated in connection with start-up, check that the pump's coupling is not phase-inverted.

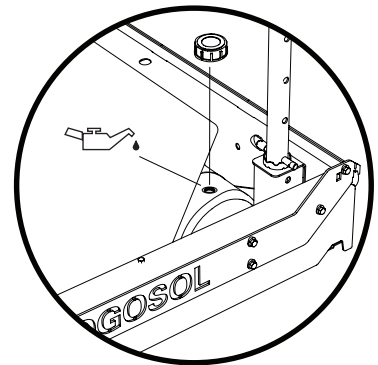










Hydraulic oil

Hydraulic oil:
(ISO VG 32)









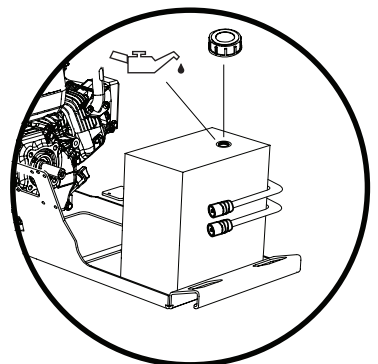


USE

If the functions have been connected as described,
the function shall be as in the illustrations below.

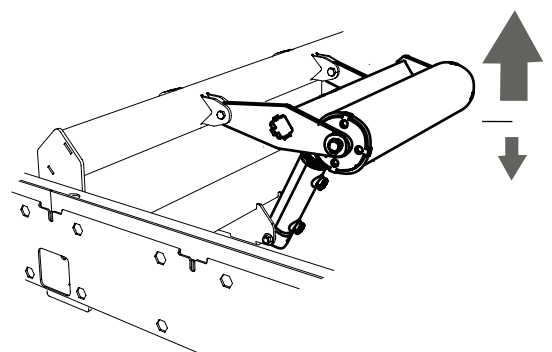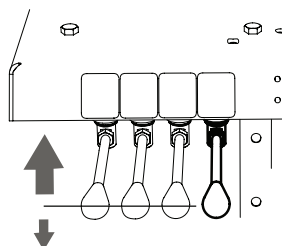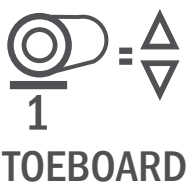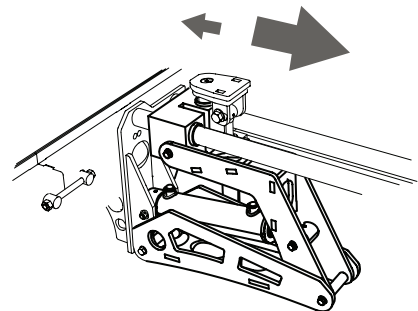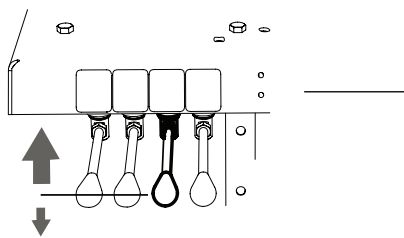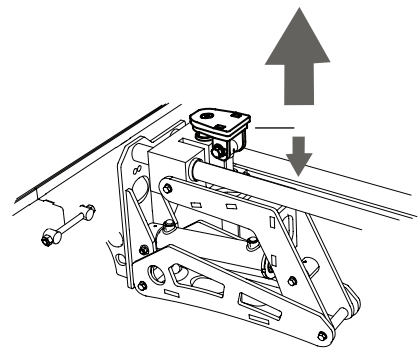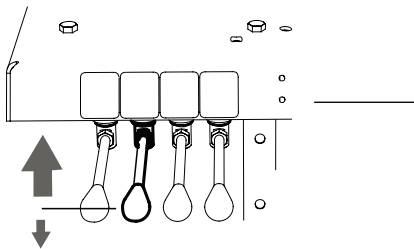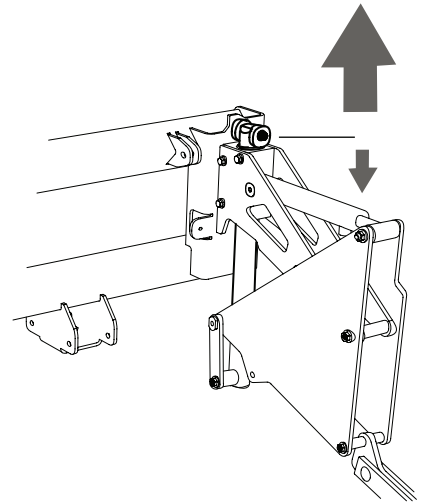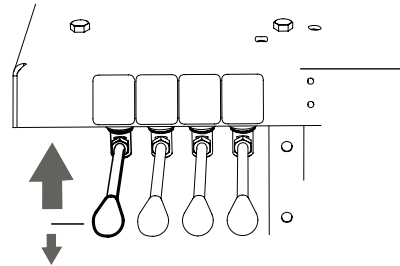

USE

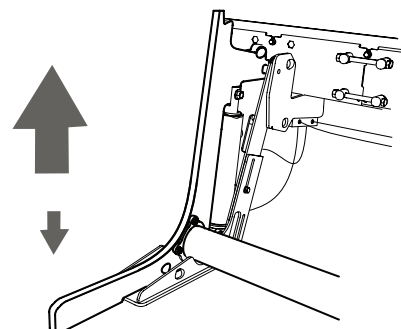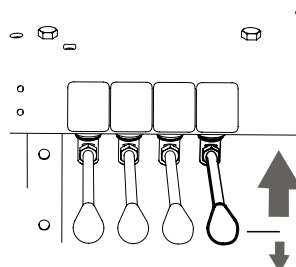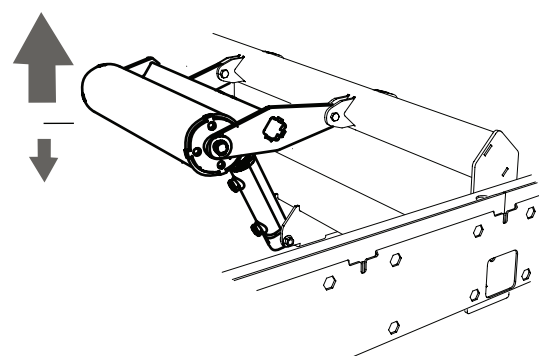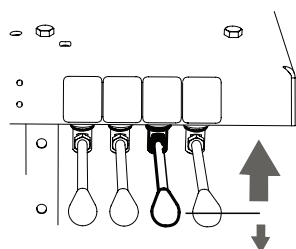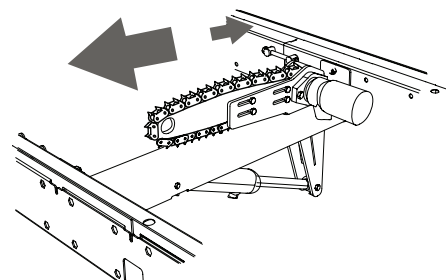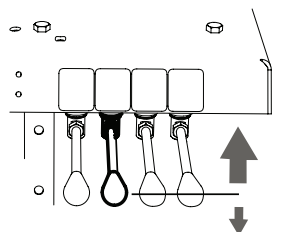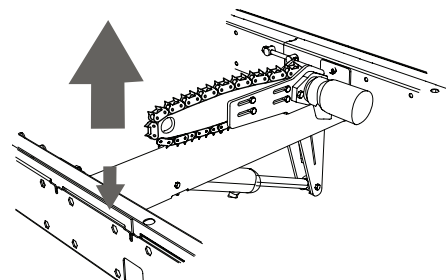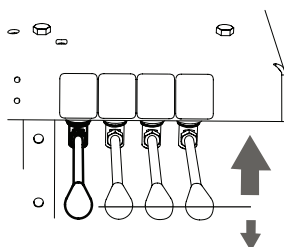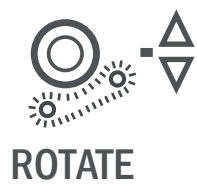

TRANSPORT


Transporting the machine

If the machine has a trailer kit and is to be transported, check that everything on the machine is secure. The following hydraulic functions must be placed in transport position before transportation. Before transportation, make sure that there will not be any collisions between the functions.

Transport position for the log loader


The log loaders must be placed in the transport position before the sawmill can be transported. Start by putting the loaders in their top position, secure the lifting arms (1). Then lift the log loader foot using the hydraulic lever. Then secure the foot in the log lift arm (2), note that the Foot needs to be in its top position in the adjusting grooves.

! Note that the saw head's blade tensioning arm must be positioned so that the T-handle is parallel to the rails so as not to collide with the log loader in transport position.

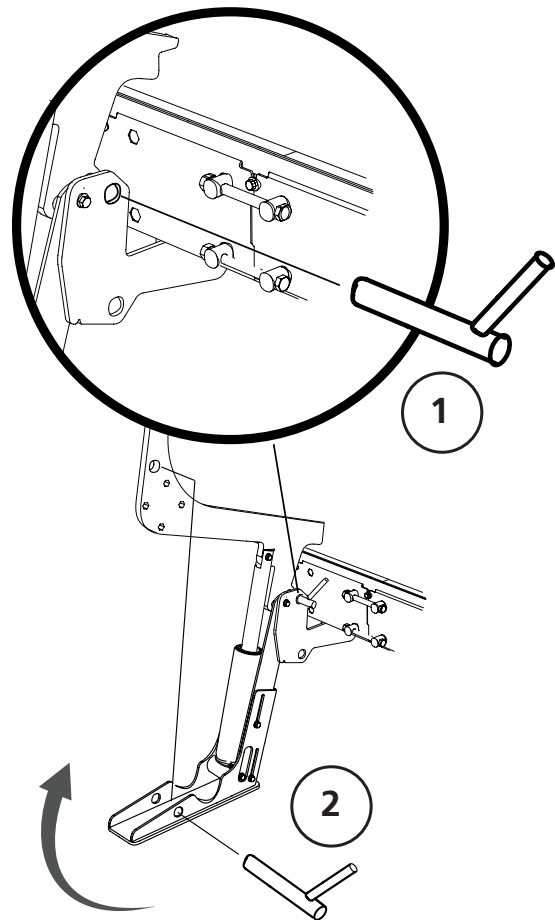


Transport position for the log supports

The log supports must be placed in the top position during transport, otherwise there is insufficient ground clearance and there is a risk of damaging the machine.

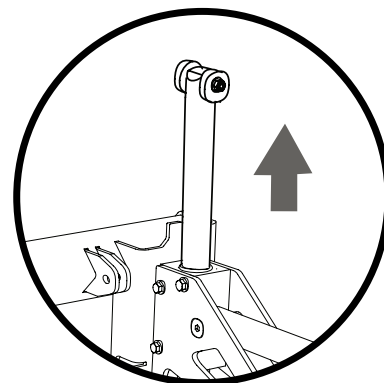


Transport position of log clamp

The log clamp must be placed in its innermost position before transport in order to maximise ground clearance.

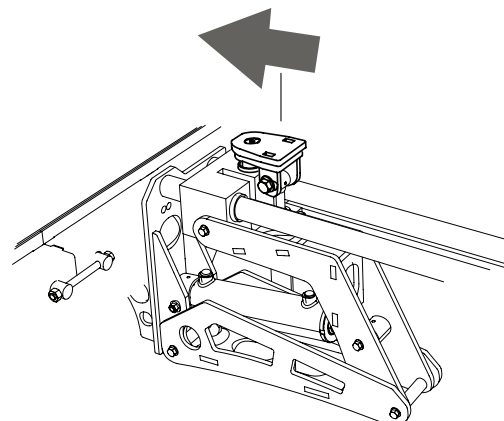



01-00627

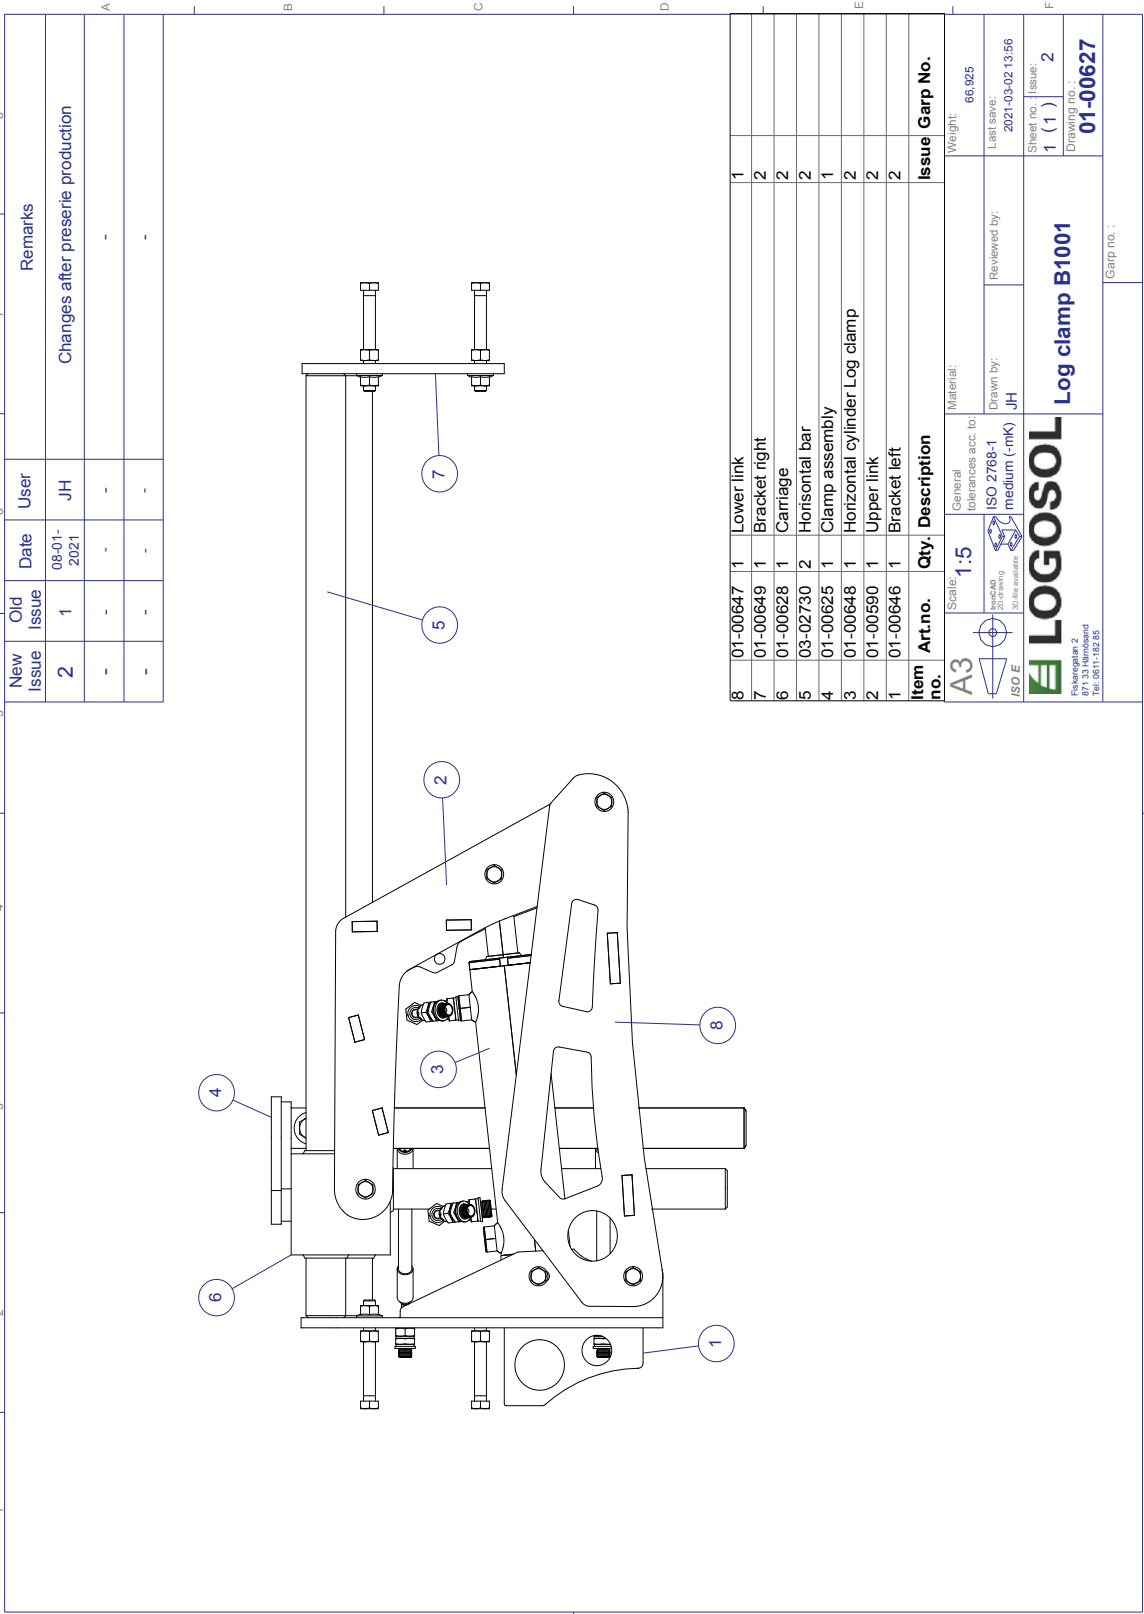


Item no.	Art.no.	Qty.	Description	Issue	Garp No.
8	01-00647	1	Lower link	1	
7	01-00649	1	Bracket right	2	
6	01-00628	1	Carriage	2	
5	03-02730	2	Horizontal bar	2	
4	01-00625	1	Clamp assembly	1	
3	01-00648	1	Horizontal cylinder Log clamp	2	
2	01-00590	1	Upper link	2	
1	01-00646	1	Bracket left	2	

A3		Scale: 1:5	General tolerances acc. to:	Material:	Weight:
ISO E		ISO 2768-1	medium (-mk)	JH	66.925
LOGOSOL		Drawn by:	JH	Reviewed by:	Last save:
Finnegan 2		30.05.2019			2021-03-02 13:56
Tel: 0511-182 85		Log clamp B1001		Sheet no:	Issue:
				1 (1)	2
				Drawing no.:	01-00627
				Garp no.:	

This document and its contents are the exclusive property of Logosol AB and may not be copied, reproduced, transmitted or communicated to a third party, or used for any purpose without written permission.



01-00560

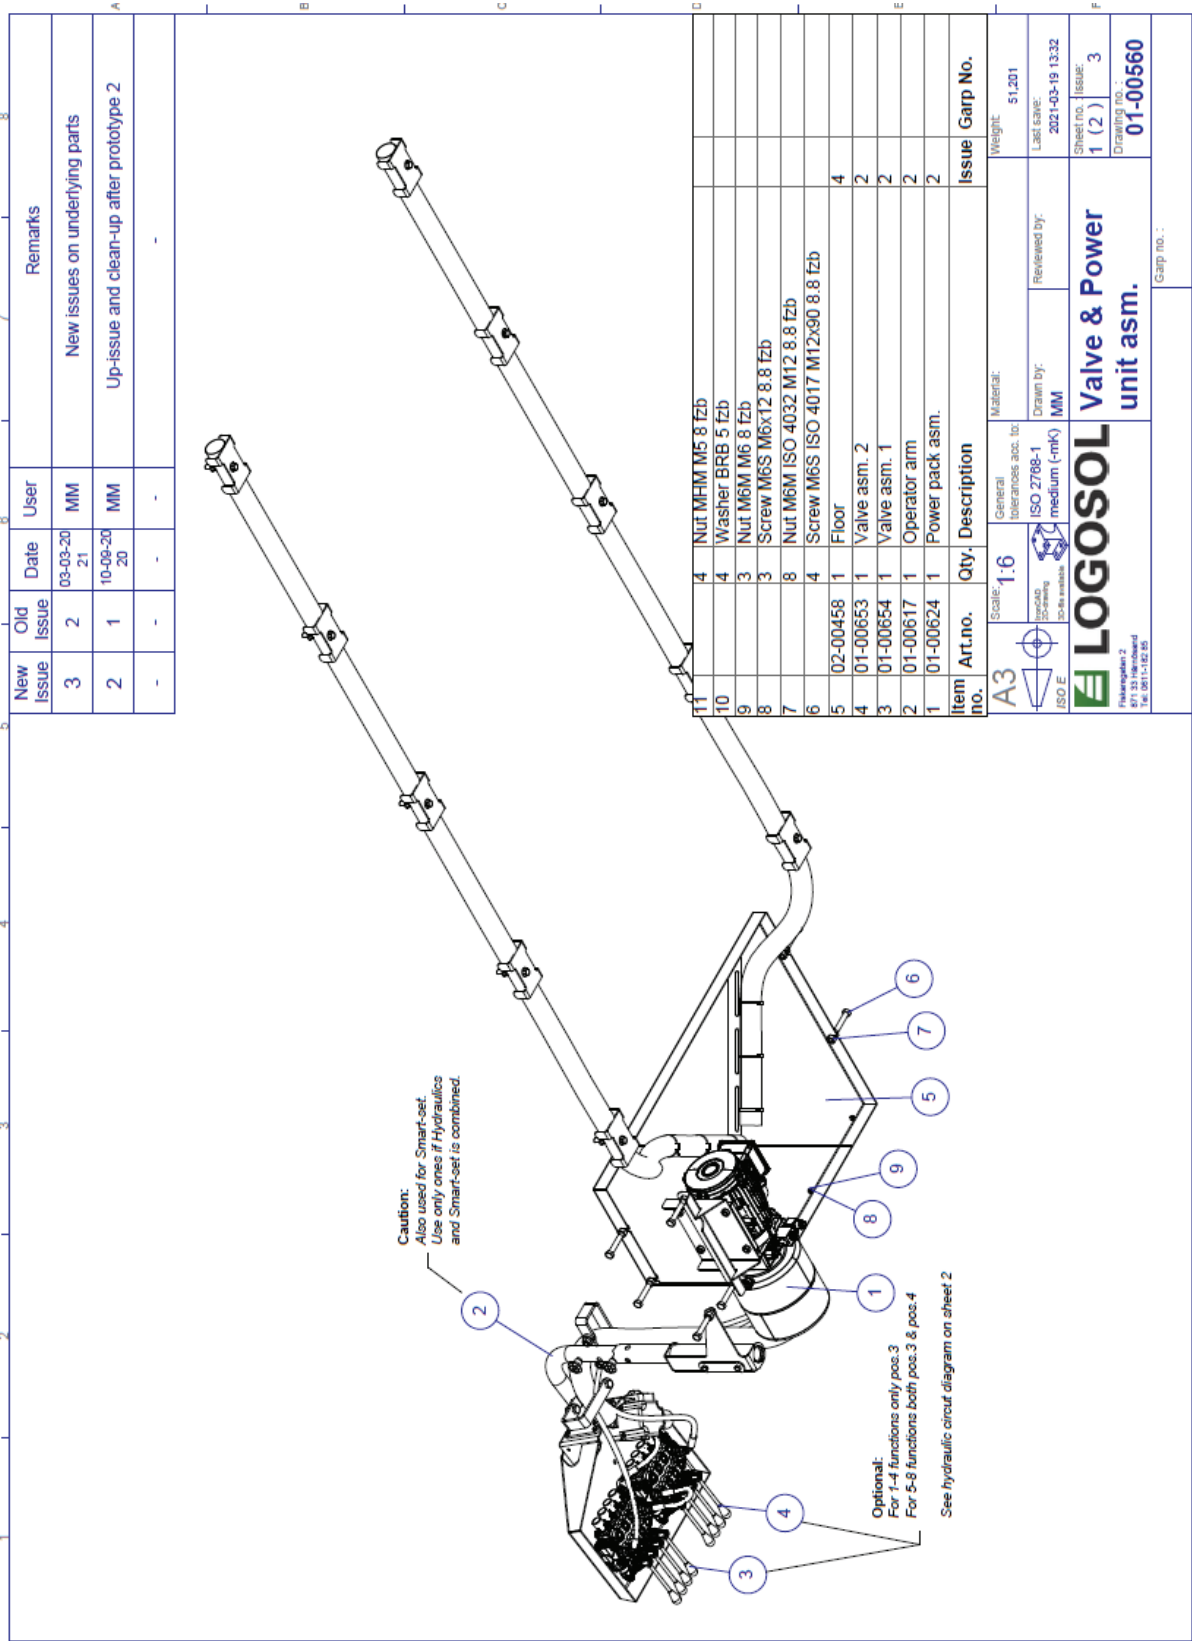


56





01-00584

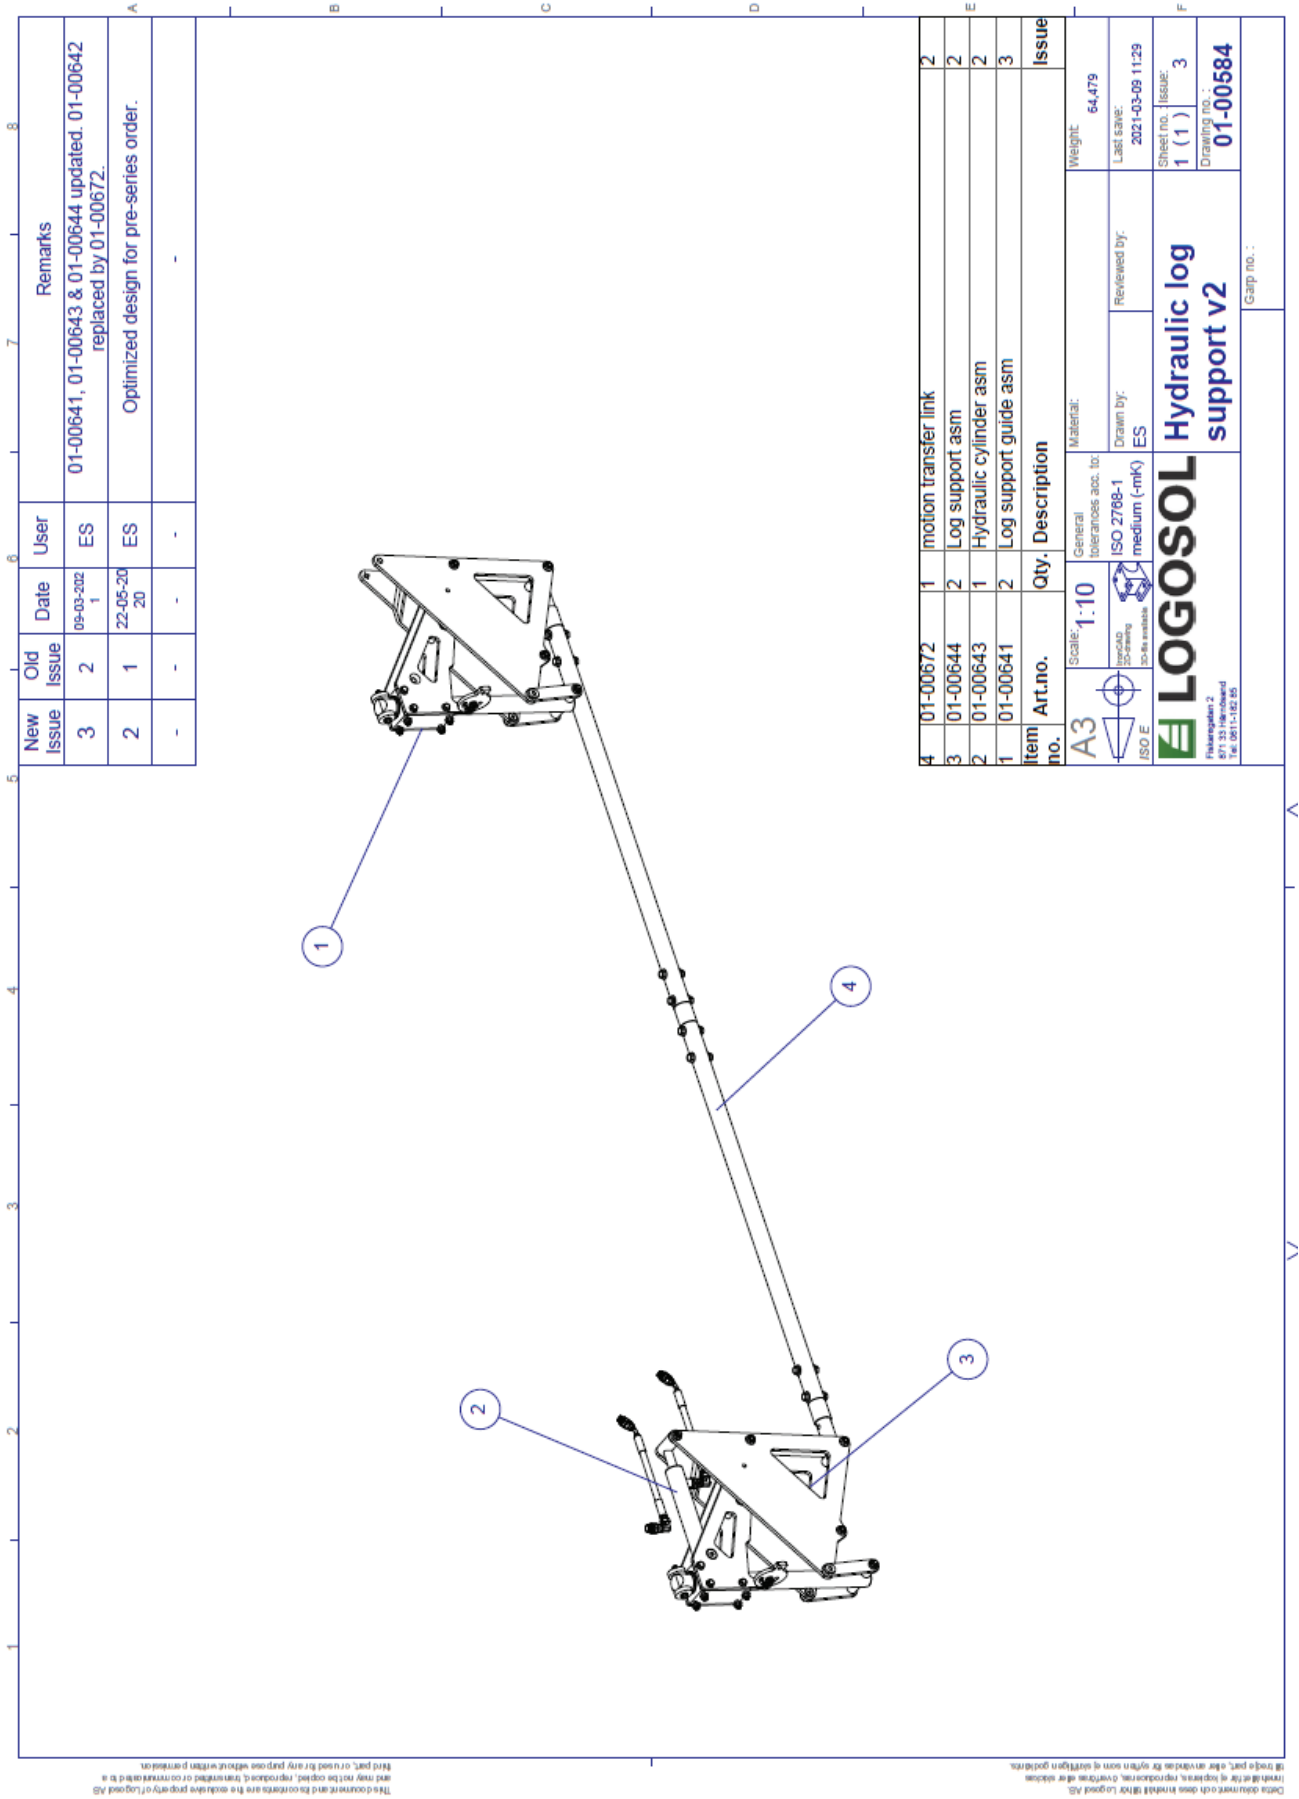

01-00641, 01-00643 & 01-00644 updated. 01-00642 replaced by 01-00672.
Optimized design for pre-series order.



01-00644

New Issue		Old Issue	Date	User	Remarks
2	1	15-01-2021	ES		03-02815, 03-02816 and 03-02838 updated.
-	-	-	-	-	-
-	-	-	-	-	-

Item no.	Art.no.	Qty.	Description	Issue
17	LM6M M8 Lock1	1	LM6M M8 Lock nut with nylon ring, class 8, fzb	
16	M6MF M10, 8	3	Nut with flange, M6MF M10, 8 Fzb	
15	BRB M8 Plain	2	BRB M8 Plain washer, fzb	
14	M6S M8x75 He1	1	M6S M8x75 Hex bolt, 8.8, Fzb	
13	MVBF M10x11	2	MVBF M10x11 Carriage bolt, 8.8 FZB	
12	MVBF M10x13	1	MVBF M10x13 Carriage bolt, 8.8 FZB	
11	MF6S M10x20	2	Countersunk socket screw, MF6S M10x20 10.9 Fzb	
10	DR-01467	2	Spacer, Ø12 mm, L=11 mm, ØI=8 mm	2
9	03-02842	2	Log support bottom spacer	1
8	03-02822	2	Ø16x2.8x83 reinforcement spacer	1
7	03-02843	1	Bottom link shaft	1
6	03-02830	2	Pivot link fastener	2
5	03-02814	2	Linkage plate	3
4	03-02815	1	Left triangle plate	5
3	03-02816	1	Right triangle plate	5
2	03-02839	2	Log support roller	1
1	03-02838	1	Log support rod	3

Scale:	General tolerances acc. to:	Material:	Weight:
A3	1:4	ISO 2768-1 medium (-mk)	17,068
ISO E	ISO 2768-1 medium (-mk)	ES	Last save: 2021-03-09 10:56
ISO E	ISO 2768-1 medium (-mk)	ES	Sheet no. Issue: 1 (1) 2
ISO E	ISO 2768-1 medium (-mk)	ES	Drawing no.: 01-00644

LOGOSOL	Log support asm	Garp no.:
Polenpark 2 87131 Haren Tel. 0611-182 85		

This document and its contents are the exclusive property of Logosol AS. No part of this document may be reproduced, stored in a retrieval system, or used for any purpose without written permission. All rights reserved. © 2021 Logosol AS. All rights reserved.



01-00642

</

Exploded view diagram of a Logosol log support assembly.

The diagram illustrates the components of the log support, numbered 1 through 17:

- 1: Main frame
- 2: Support leg
- 3: Roller
- 4: Roller
- 5: Roller
- 6: Roller
- 7: Roller
- 8: Roller
- 9: Roller
- 10: Roller
- 11: Roller
- 12: Roller
- 13: Roller
- 14: Roller
- 15: Roller
- 16: Roller
- 17: Roller

Assembly List:

Item no.	Art.no.	Qty.	Description
17	LM6M M8 Lock 1	1	LM6M M8 Lock nut with nylon ring, class 8, fzB
16	M6MF M10, 8	3	Nut with flange, M6MF M10, 8 FzB
15	BRB M8 Plain	2	BRB M8 Plain washer, fzB
14	M6S M8x75 He 1	1	M6S M8x75 Hex bolt, 8.8, FzB
13	MVBF M10x11	2	MVBF M10x110 Carriage bolt, 8.8 FZB
12	MVBF M10x13	1	MVBF M10x130 Carriage bolt, 8.8 FZB
11	MF6S M10x20	2	Countersunk socket screw, MF6S M10x20 10.9 FzB
10	DR-01467	2	Spacer, Ø12 mm, L=11 mm, ØI=8 mm
9	03-02842	2	Log support bottom spacer
8	03-02822	2	Ø16x2.8x83 reinforcement spacer
7	03-02843	1	Bottom link shaft
6	03-02830	2	Pivot link fastener
5	03-02814	2	Linkage plate
4	03-02815	1	Left triangle plate
3	03-02816	1	Right triangle plate
2	03-02839	2	Log support roller
1	03-02838	1	Log support rod

General Information:

Item no.	Art.no.	Qty.	Description
A3	Scale: 1:4		General tolerances acc. to: ISO 2768-1 medium (-mK)
Material: 17.068			
Last save: 2021-03-09 10:56			
Drawn by: ES			
Reviewed by:			
Sheet no. 1 (1) 2			
Drawing no. 01-00644			


LOGOSOL

Fiskerisplan 2
871 33 Hørsholm
Tel. 0611-162 86

Log support


asm

Garp no. :

[illegible]



01-00634

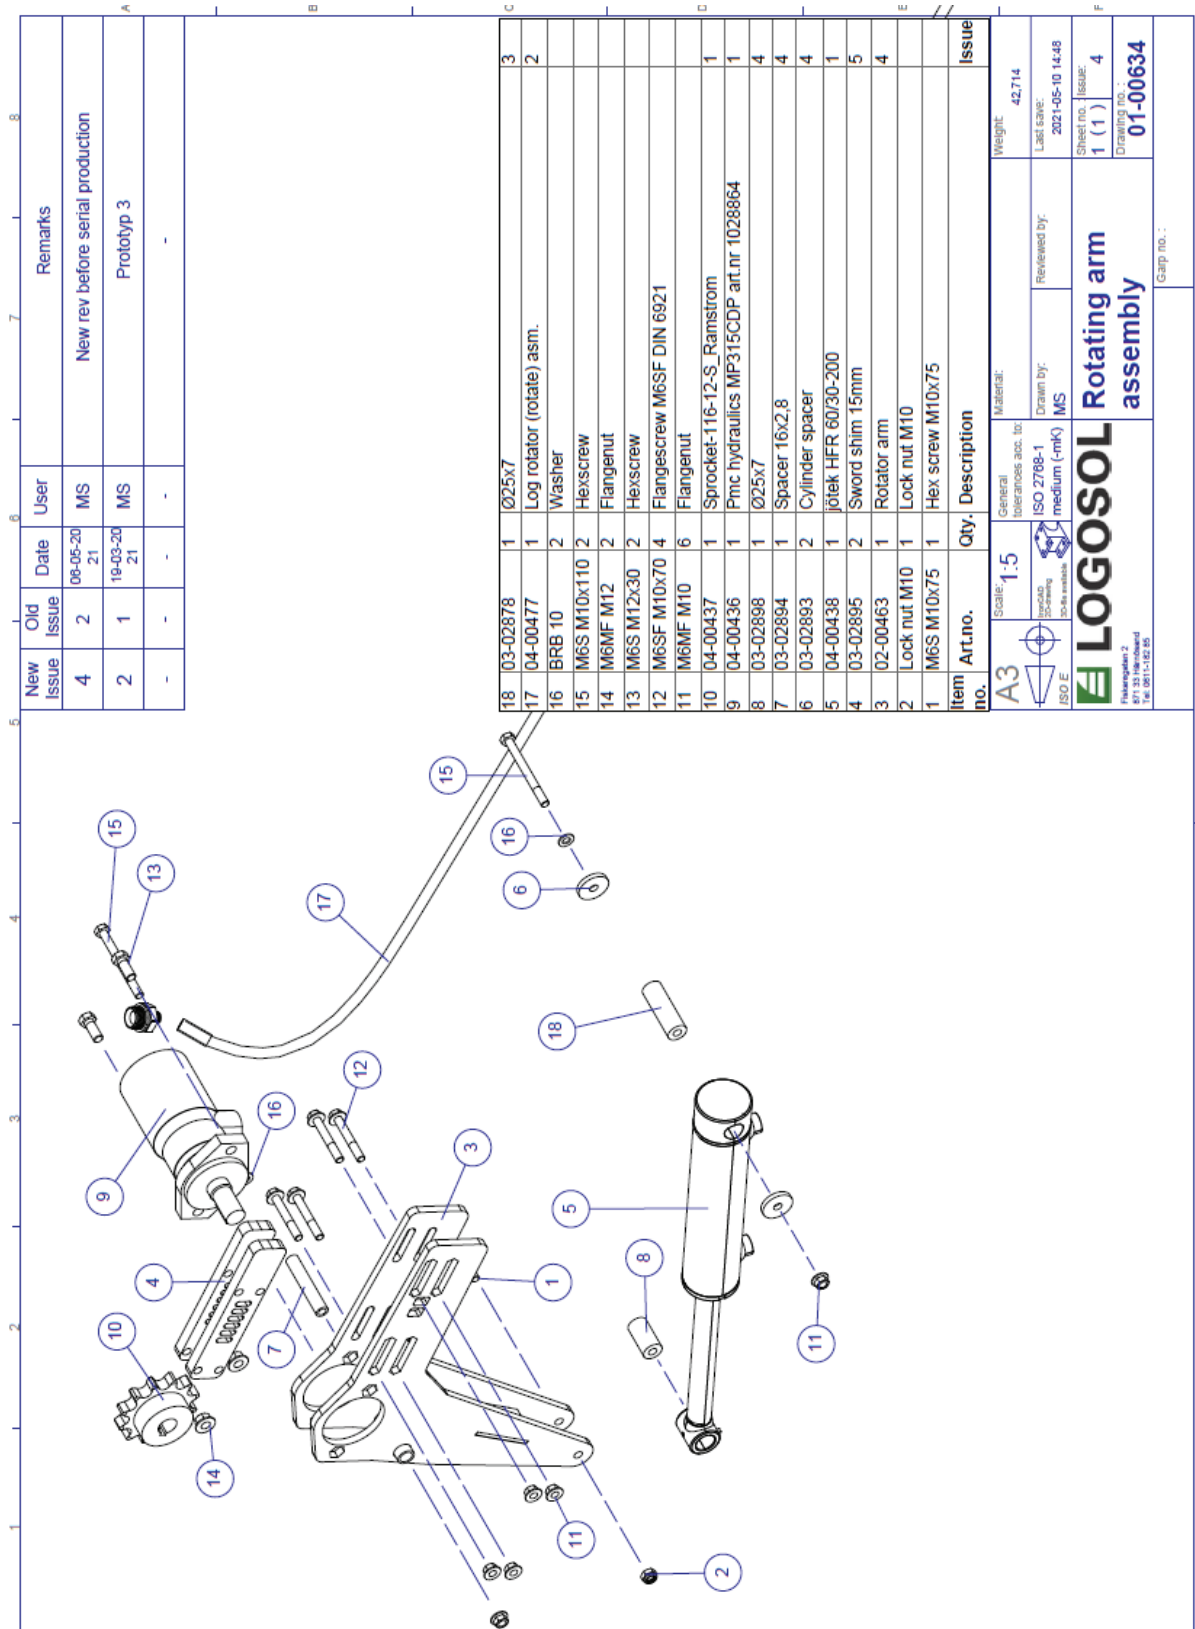

6

7

8

New Issue	Old Issue	Date	User	Remarks
4	2	06-05-2021	MS	New rev before serial production
2	1	19-03-2021	MS	Prototyp 3
-	-	-	-	-

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509

510

511

512

513

514

515

516

517

518

519

520

521

522

523

524

525

526

527

528

529

530

531

532

533

534

535

536

537

538

539

540

541

542

543

544

545

546

547

548

549

550

551

552

553

554

555

556

557

558

559

560

561

562

563

564

565

566

567

568

569

570

571

572

573

574

575

576

577

578

579

580

581

582

583

584

585

586

587

588

589

590

591

592

593

594

595

596

597

598

599

600

601

602

603

604

605

606

607

608

609

610

611

612

613

614

615

616

617

618

619

620

621

622

623

624

625

626

627

628

629

630

631

632

633

634

635

636

637

638

639

640

641

642

643

644

645

646

647

648

649

650

651

652

653

654

655

656

657

658

659

660

661

662

663

664

665

666

667

668

669

670

671

672

673

674

675

676

677

678

679

680

681

682

683

684

685

686

687

688

689

690

691

692

693

694

695

696

697

698

699

700

701

702

703

704

705

706

707

708

709

710

711

712

713

714

715

716

717

718

719

720

721

722

723

724

725

726

727

728

729

730

731

732

733

734

735

736

737

738

739

740

741

742

743

744

745

746

747

748

749

750

751

752

753

754

755

756

757

758

759

760

761

762

763

764

765

766

767

768

769

770

771

772

773

774

775

776

777

778

779

780

781

782

783

784

785

786

787

788

789

790

791

792

793

794

795

796

797

798

799

800

801

802

803

804

805

806

807

808

809

810

811

812

813

814

815

816

817

818

819

820

821

822

823

824

825

826

827

828

829

830

831

832

833

834

835

836

837

838

839

840

841

842

843

844

845

846

847

848

849

850

851

852

853

854

855

856

857

858

859

860

861

862

863

864

865

866

867

868

869

870

871

872

873

874

875

876

877

878

879

880

881

882

883

884

885

886

887

888

889

890

891

892

893

894

895

896

897

898

899

900

901

902

903

904

905

906

907

908

909

910

911

912

913

914

915

916

917

918

919

920

921

922

923

924

925

926

927

928

929

930

931

932

933

934

935

936

937

938

939

940

941

942

943

944

945

946

947

948

949

950

951

952

953

954

955

956

957

958

959

960

961

962

963

964

965

966

967

968

969

970

971

972

973

974

975

976

977

978

979

980

981

982

983

984

985

986

987

988

989

990

991

992

993

994

995

996

997

998

999

1000

1001

1002

1003

1004

1005

1006

1007

1008

1009

1010

1011

1012

1013

1014

1015

1016

1017

1018

1019

1020

1021

1022

1023

1024

1025

1026

1027

1028

1029

1030

1031

1032

1033

1034

1035

1036

1037

1038

1039

1040

1041

1042

1043

1044

1045

1046

1047

1048

1049

1050

1051

1052

1053

1054

1055

1056

1057

1058

1059

1060

1061

1062

1063

1064

1065

1066

1067

1068

1069

1070

1071

1072

1073

1074

1075

1076

1077

1078

1079

1080

1081

1082

1083

1084

1085

1086

1087

1088

1089

1090

1091

1092

1093

1094

1095

1096

1097

1098

1099

1100

1101

1102

1103

1104

1105

1106

1107

1108

1109

1110

1111

1112

1113

1114

1115

1116

1117

1118

1119

1120

1121

1122

1123

1124

1125

1126

1127

1128

1129

1130

1131

1132

1133

1134

1135

1136

1137

1138

1139

1140

1141

1142

1143

1144

1145

1146

1147

1148

1149

1150

1151

1152

1153

1154

1155

1156

1157

1158

1159

1160

1161

1162

1163

1164

1165

1166

1167

1168

1169

1170

1171

1172

1173

1174

1175

1176

1177

1178

1179

1180

1181

1182

1183

1184

1185

1186

1187

1188

1189

1190

1191

1192

1193

1194

1195

1196

1197

1198

1199

1200

1201

1202

1203

1204

1205

1206

1207

1208

1209

1210

1211

1212

1213

1214

1215

1216

1217

1218

1219

1220

1221

1222

1223

1224

1225

1226

1227

1228

1229

1230

1231

1232

1233

1234

1235

1236

1237

1238

1239

1240

1241

1242

1243

1244

1245

1246

1247

1248

1249

1250

1251

1252

1253

1254

1255

1256

1257

1258

1259

1260

1261

1262

1263

1264

1265

1266

1267

1268

1269

1270

1271

1272

1273

1274

1275

1276

1277

1278

1279

1280

1281

1282

1283

1284

1285

1286

1287

1288

1289

1290

1291

1292

1293

1294

1295

1296

1297

1298

1299

1300

1301

1302

1303

1304

1305

1306

1307

1308

1309

1310

1311

1312

1313

1314

1315

1316

1317

1318

1319

1320

1321

1322

1323

1324

1325

1326

1327

1328

1329

1330

1331

1332

1333

1334

1335

1336

1337

1338

1339

1340

1341

1342

1343

1344

1345

1346

1347

1348

1349

1350

1351

1352

1353

1354

1355

1356

1357

1358

1359

1360

1361

1362

1363

1364

1365

1366

1367

1368

1369

1370

1371

1372

1373

1374

1375

1376

1377

1378

1379

1380

1381

1382

1383

1384

1385

1386

1387

1388

1389

1390

1391

1392

1393

1394

1395

1396

1397

1398

1399

1400

1401

1402

1403

1404

1405

1406

1407

1408

1409

1410

1411

1412

1413

1414

1415

1416

1417

1418

1419

1420

1421

1422

1423

1424

1425

1426

1427

1428

1429

1430

1431

1432

1433

1434

1435

1436

1437

1438

1439

1440

1441

1442

1443

1444

1445

1446

1447

1448

1449

1450

1451

1452

1453

1454

1455

1456

1457

1458

1459

1460

1461

1462

1463

1464

1465

1466

1467

1468

1469

1470

1471

1472

1473

1474

1475

1476

1477

1478

1479

1480

1481


1482

1483


1484



01-00604

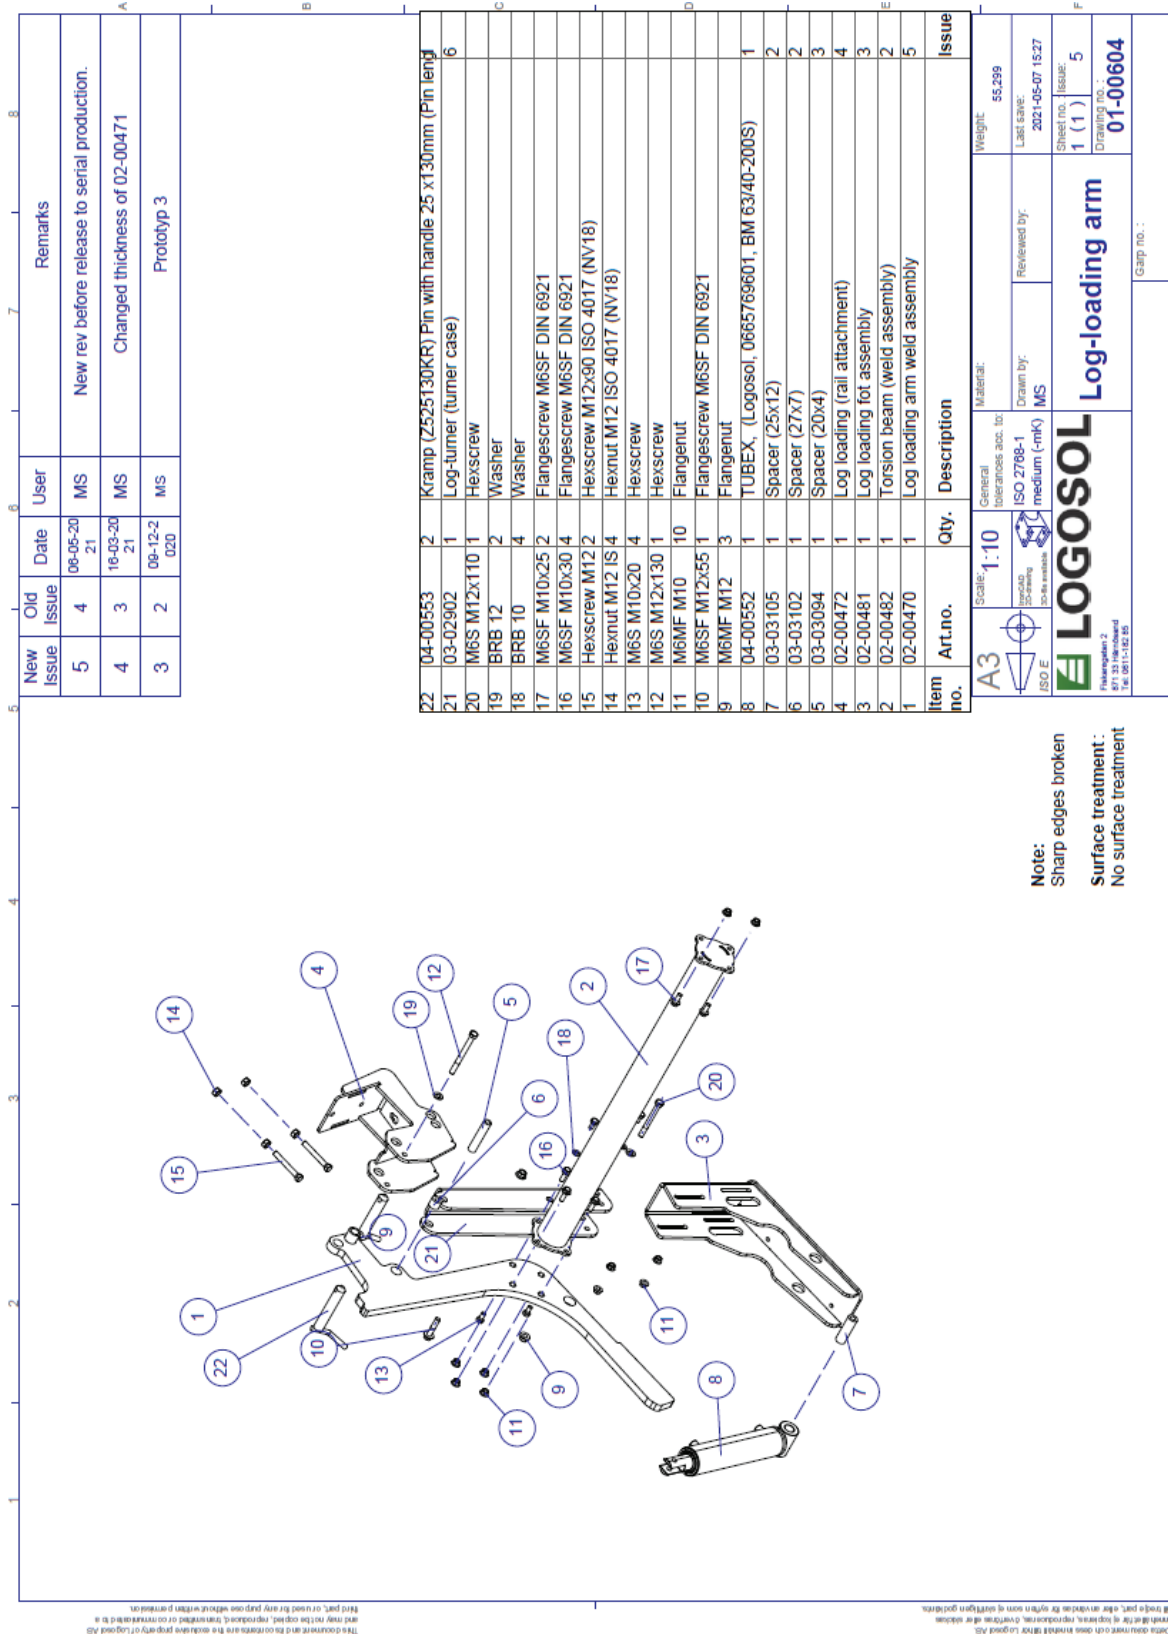

HYDRAULIC DIAGRAM

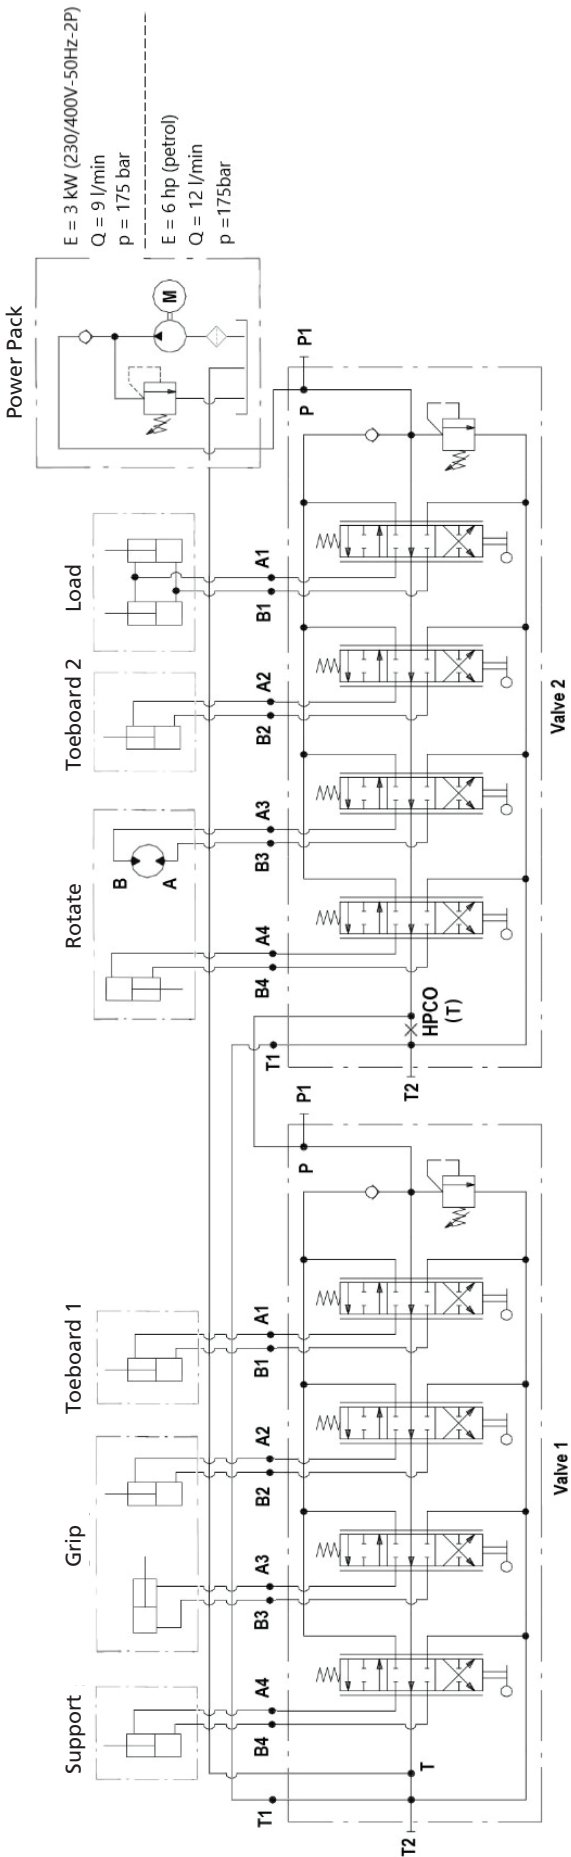

TROUBLESHOOTING SCHEDULE

PROBLEM/SYMPTOM	PROBABLE CAUSE	ACTION
Nothing happens when you activate the levers	Low oil level in the tank Fuse has tripped Incorrect hose connection on the valve Pump motor runs in the wrong direction (Phase-inverted motor)	Check the oil level and refill if necessary Check fuses in fuse cabinets Check connection has been executed as in the manual. Phase-inverted motor in the coupling.
The pump does not start when the power is turned on	Fuses have tripped Connectors not put together properly	Check fuses check connectors
Oil leaking from the machine	Check whether leaking coupling is tightened Check hoses for leaks	Re-tighten loose couplings Replace damaged hoses
One or more functions are perceived to be under-powered.	Low oil level in the tank Leakage in the system Air in the system Damaged hydraulic cylinder	Check the oil level in the tank Re-tighten loose couplings Replace damaged hoses Run the functions one by one until the air is forced out of the system to the tank Run the piston rod out into its end position, turn off the machine. If there is a lot of play in the piston, the gasket and piston control may be broken.
Functions move jerkily	Low oil level in the tank Leakage in the system Air in the system	Check the oil level in the tank Re-tighten loose couplings Replace damaged hoses Run the functions one by one until the air is forced out of the system to the tank
Sawn blocks are not perpendicular	Log supports not aligned Sawmill not aligned	Adjust the log supports perpendicular to the saw bed Check against alignment sequence in the sawmill manual



Declaration of Conformity

In accordance with Directive 2006/42/EC, Annex 2A

Logosol AB
Arkivvägen 6
871 53 Härnösand

hereby declare that **Logosol B1001 Hydraulic**

has been manufactured in conformity with:
Machinery Directive 2006/42/EC, EMC Directive
2014/30/EU

and has been manufactured in conformity with
the following harmonised standards:
EN ISO 12100:2010, EN 60204-1:2018,
EN 50370-1:2005, EN 50370-2:2003.

Härnösand, 30 January 2026

A handwritten signature in black ink, appearing to read 'R. Berglund'.

Robert Berglund, CEO

LOGOSOL

Arkivvägen 6, SE-871 53 Härnösand
+46 (0)611-182 85 | info@logosol.com | www.logosol.com