


USER MANUAL

Part no. 0458-395-0691

REV:1

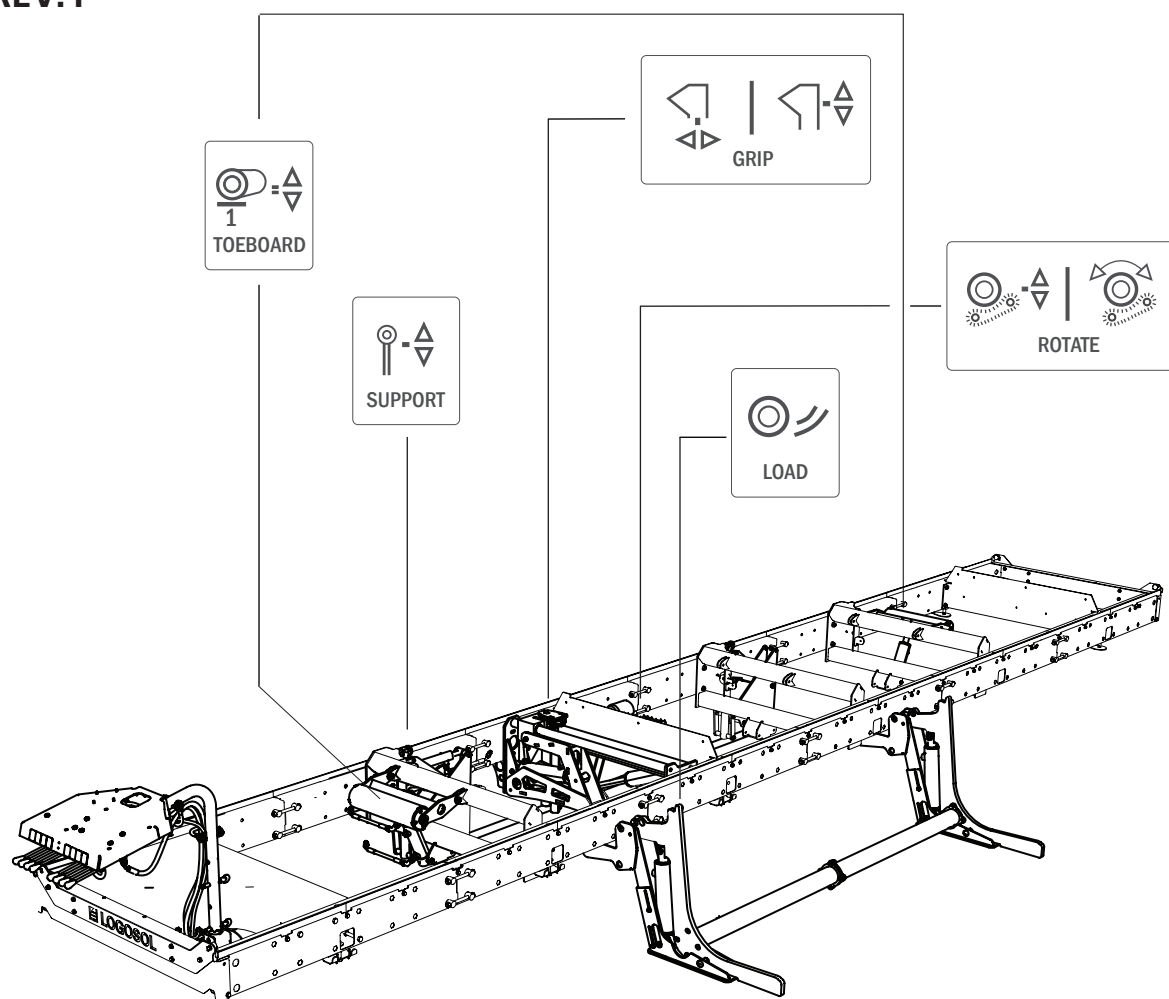

LOGOSOL B1001 HYDRAULIC

THANKS FOR CHOOSING A LOGOSOL MACHINE!

We are very pleased that you have demonstrated your confidence in us by purchasing this machine and we will do our utmost to meet your expectations.

LOGOSOL has been manufacturing sawmills since 1989, and in that time we have supplied approximately 50,000 machines to satisfied customers the world over.

We are concerned with your safety and ensuring that you achieve the best possible results with your machine. We therefore recommend that you take the time to carefully read this user manual before using the machine. Remember that the machine itself is only a part of the value of the product. Much of the value is also to be found in the expertise we pass on to you in the user manual. It would be a pity if that was not utilised.

We hope you will be thoroughly satisfied with your new machine.



Bengt-Olov Byström

Founder and Chairman of the Board,
Logosol in Härnösand



Read through the user manual carefully and make sure you understand its contents before using the saw.



This user manual contains important safety instructions.



WARNING! Incorrect use can result in serious or fatal injuries to the operator or others.


LOGOSOL continuously develops its products.
For this reason, we must reserve the right to modify
the configuration and design of our products.
Document: LOGOSOL B1001 Hydraulic User Manual
Manual, part no.: 458-395-0691
Text: Martin Söderberg
Illustration: Martin Söderberg
Last revised: March 2022
© 2022 LOGOSOL, Härnösand Sweden

TABLE OF CONTENTS

Description of machine	4
Safety instructions	5
Maintenance	7
Technical data	9
Component parts:	10
Assembly	18
Connecting valve/hydraulic cylinders	37
Hydraulic hose	45
Adjustment	47
First start-up	48
Use	49
Transport	51
Exploded views	52
Hydraulic diagram	63
Troubleshooting	63
CE declaration	64

DESCRIPTION OF THE MACHINE

LOGOSOL B1001 HYDRAULIC

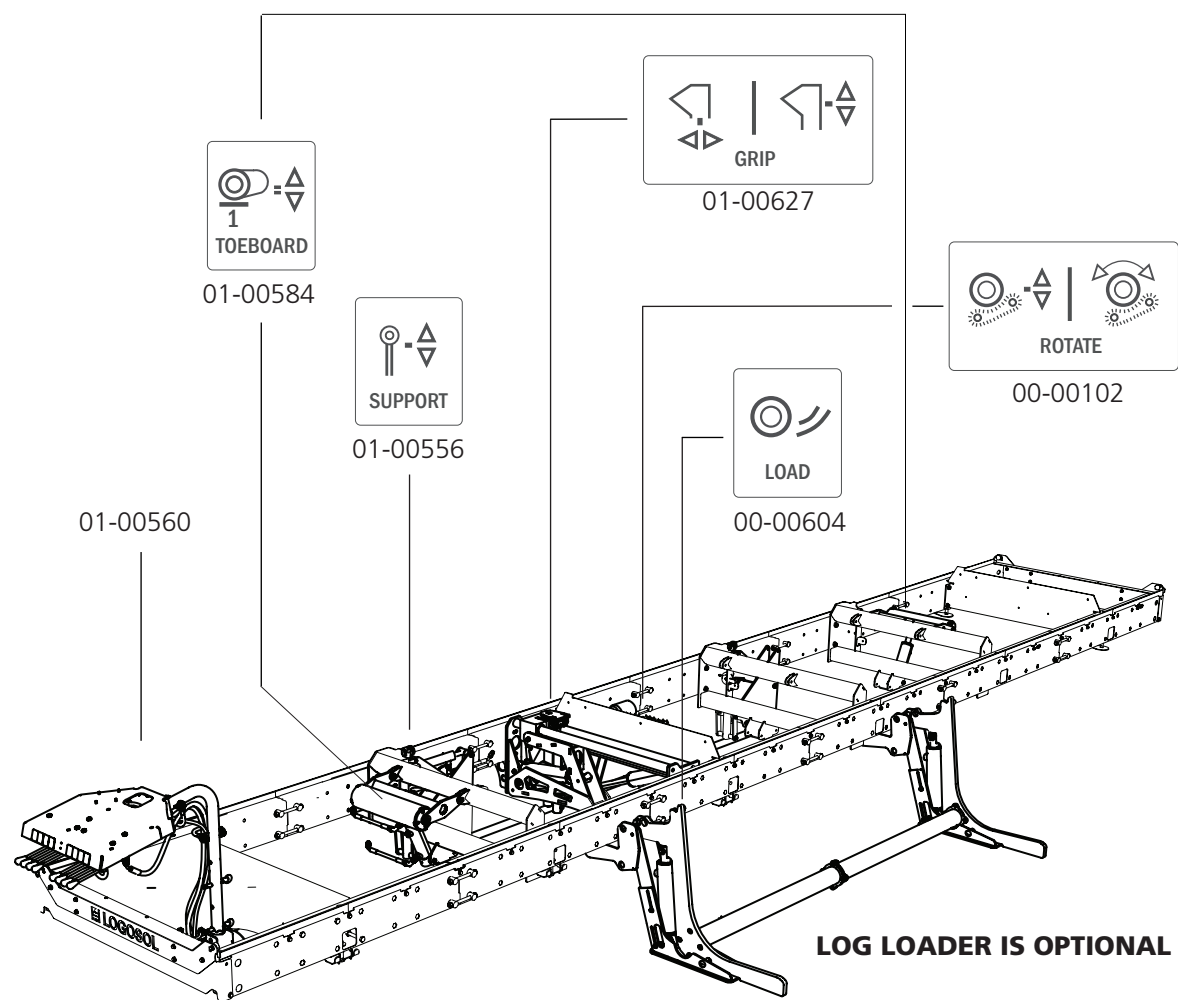

SAFETY INSTRUCTIONS

- Read carefully through the entire manual before putting the machine into operation. Failure to observe these safety instructions may result in fatal injuries.
- Make sure that everyone who uses the machine is well informed of the dangers and has read the manual. The manual must be available at all times for those working with the machine.
- Minors under the age of 18 are not allowed to use the machine.
- Make sure that children and animals are not in the vicinity when the machine is being operated.
- Anyone working with the machine should be in good physical shape, healthy and well-rested. Take regular breaks. Do not work under the influence of alcohol, drugs or medicines that may cause drowsiness or inattentiveness.
- The machine should only be used where there is good visibility. Do not work in the dark or where visibility is poor.
- Make sure there are other people within earshot in case you need help.
- Use only LOGOSOL manufactured products or those expressly approved for the purpose when adding extra equipment. Other equipment may result in risk of accident and must not be used. Logosol will not accept liability for personal injury or material damage incurred while using non-approved attachments on the sawmill.
- Always wear personal protective equipment: Appropriate clothing is, for example, a tight-fitting work overall. Never work with loose clothing, jacket or similar.
- Wear steel cap shoes and deep tread sole for good grip. Do not wear a scarf, tie, jewellery or the like that can catch in the equipment.
- Wear heavy duty protective gloves. Risk of cuts when handling the equipment.

KEY TO SYMBOLS



WARNING! This symbol means that you have to take particular care. It is always accompanied by information on the specific risk.



ATTENTION. A warning comes after this symbol. Pay particular attention where this symbol appears in the manual text.



For your own safety and that of others, do not use the bandsaw mill or handle bandsaw blades without first reading through and understanding the contents of this user manual in its entirety.



WARNING! Cutting knives: Careless use of the machine can result in potentially fatal injuries. Bandsaw blades are extremely sharp and dangerous.



Always wear protective gloves (class 1) when working with the bandsaw mill or handling bandsaw blades. Risk of sustaining cuts when handling bandsaw blades. Bandsaw blades and motor parts may be hot after sawing.



Always wear approved ear protectors when working with the machine. Even brief exposure to high frequency noise can damage your hearing. Always use close-fitting protective goggles when working with the machine or handling bandsaw blades. Under certain circumstances the use of a protective mask may also be advisable. This would primarily apply if you are sawing dry wood or sawing indoors.



Always wear approved protective footwear with saw protection, steel toe-caps and non-slip soles when working with the machine or handling bandsaw blades.



Always wear full-length protective trousers when working with the machine or handling bandsaw blades. Never wear loose-fitting clothing, scarves, necklaces, etc. that may fasten in the machine when working. Tie long hair back before working with the machine.

SAFETY INSTRUCTIONS

Safety distance

-  **Warning! Fire risk.** Hydraulic oil is flammable, do not perform hot work in the vicinity of hydraulic components and equipment.
-  **Warning! Do not exceed the maximum weights specified for the equipment.** Overload can entail sudden breakdowns making the work area dangerous
-  **Warning! Pinch risk.** Do not remain within the work area when the hydraulic cylinders are loaded.
-  **Warning! Cuts.** Never handle pressurized hydraulic hoses, oil from a pressurized hose can penetrate the skin and cause serious injury.
-  **Warning! Burn injuries.** Allow the equipment to cool down before working with hydraulic units and hoses. The hydraulic oil can reach high temperatures during use.
-  Handle hydraulic hoses and couplings carefully during assembly and maintenance work. Avoid sharp bends on hydraulic hoses. Sharp bends damage the hoses and increase the risk of breakdown.
-  Do not lift or handle hydraulic equipment connected to the hoses or couplings.
-  Always use hydraulic oil prescribed by Logosol when working with the equipment.
-  Always wipe up any spillage of hydraulic oil from the product and the working area. Residual hydraulic oil constitutes a slip hazard to users.
-  Always use absorbent cloths beneath the equipment when working with the machine.

Before each shift:

Check hydraulic hoses, couplings and cables for visible damage.

-  **Warning! Do not exceed the maximum weights specified for the equipment.** Overload can entail sudden breakdowns making the work area dangerous

Always check that the specified amount of hydraulic oil is in the tank before starting the machine.

During operation

-  The sawmill is not to be in any other position than level when in operation. Risk of tipping!


- Keep the worksite free of tools, pieces of wood, chips and other items you can trip on.

-  In the event of problems of any kind, stop work immediately and turn off the machine until it has been resolved. Always keep this in mind. Most accidents involving dangerous machines occur when something malfunctions and the operator has to correct this during operation. A stop seldom shows up on the finished product.

SAFETY INSTRUCTIONS

Safety distance:

Make sure that nobody is within the safety distance when working with the machine.

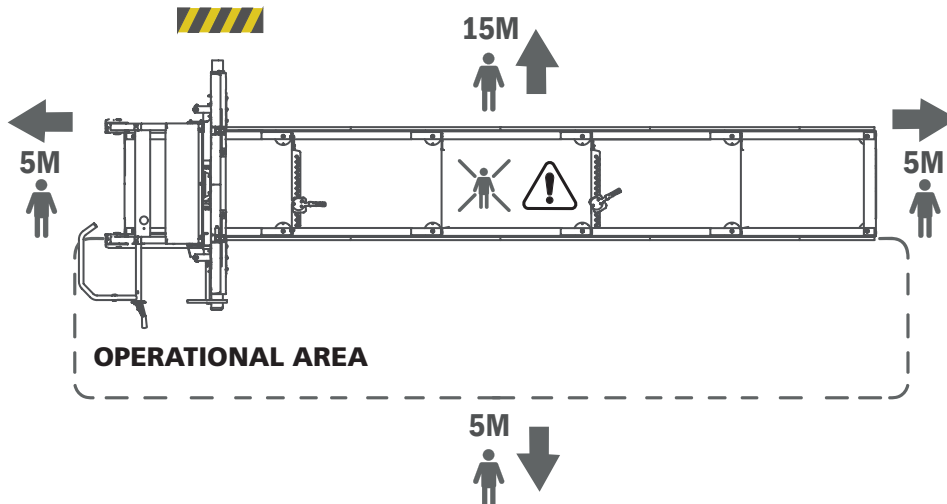

MAINTENANCE

MAINTENANCE

Periodic maintenance of the machine expected to be performed by the operator is described in this section. Be sure to follow the specified maintenance intervals, as this is the basis for good function of the machine.

WARNING! Risk of serious injury:

! Make sure that the machine is turned off before servicing and maintenance. Always wear work gloves (Class 1) when undertaking maintenance on the machine

WARNING! Cuts:

! Be careful when working with the machine as it has sharp edges.

WARNING! Fire risk:

BEFORE WORKING ON THE MACHINE

Always unplug the power cable at the mains before starting service or adjustment. Check that the power cable, plugs and switches are in good condition and undamaged. Clean all parts of the machine with a brush and dry cloths. Store the machine in a dry, clean and non-corrosive environment, out of reach of children. Check that all screw joints are tightened.

! Do not smoke or perform any work (welding, grinding, etc.) on the machine that can generate ignition sparks in the vicinity of fuel or combustible materials.

! If you spill oil on the machine during refuelling, this should be wiped up immediately. If you get oil on your clothes, change them at once.

! Never run the engine if there is an oil leak. Always turn the engine off before refuelling.

MAINTENANCE

CLEANING THE MACHINE

Clean the bandsaw mill after each shift. Sweep away shavings and sawdust around the functions and on and around the rails.

EVERY START-UP

Check scraper rings:

Make sure that dirt and shavings do not accumulate on the scraper rings.

Check for oil leaks:

Check all connections for oil leaks

Check the oil level:

Check the oil level in the hydraulic tank before each shift. Follow the maintenance schedule in the engine instruction manual.

Check safety features:

Before each shift, check the function of the following safety features:
Make sure that the valve levers return when the handle is released.


Check screw joints:

Check that there are no loose screw joints on the machine.

OIL CHANGE

Change the oil for the first time after about 30 hours of work. With normal operation, the second change is not needed until about 4-500 hours of work. Hydraulic oil: (ISO VG 32).

If a petrol unit is used, the hydraulic oil filter must be changed at 300 hours of use, see the hydraulic unit instruction.

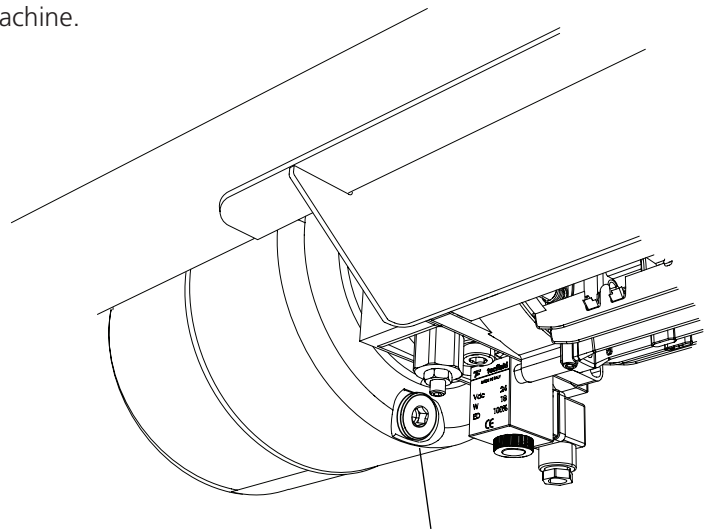



Position of the oil plug on the underside of the hydraulic unit.

TECHNICAL DATA

LOGOSOL HYDRAULIC B1001/B751	
01-00556 TOEBOARD	
Stroke length toeboard	70mm
Diameter roller	100 mm
01-00627 LOG CLAMP	
Vertical stroke	300 mm
Minimum clamp width	20mm
Maximum clamp width	700 mm
01-00584 LOG SUPPORT	
Vertical stroke	305 mm
Cylinder	150mm
Quantity	2
Diameter of the support	40mm
POWERPACK	
Output	3 kW, 400 V CEE 16A / 6hp Kranman Ks791
Oil volume	4L / 5L
	There is approximately 10L of oil in the system with all functions connected

SCREWS/NUTS

Definition of the fasteners.

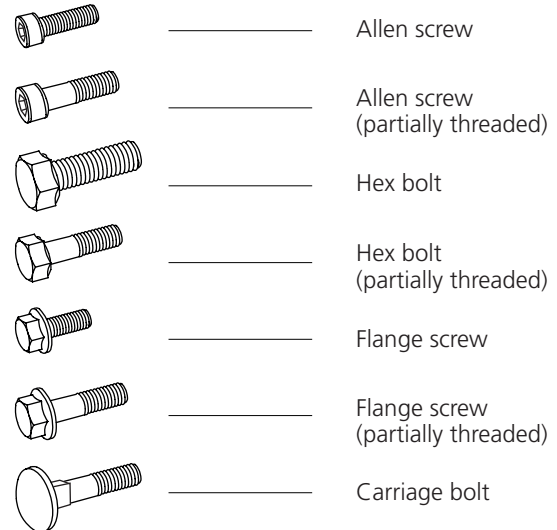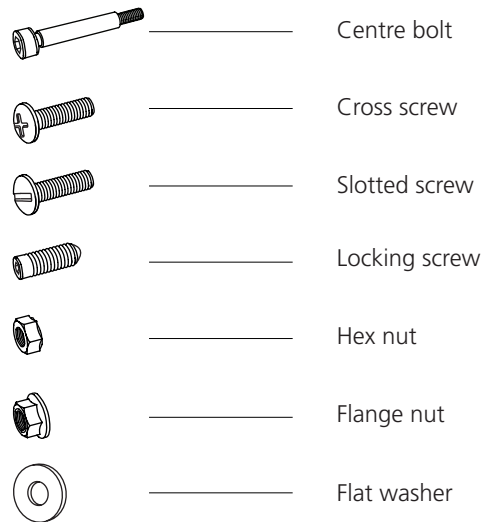

ADDITIONAL SYMBOLS






The following symbols are used in addition to those shown above to describe part design.



DIMENSIONS/LENGTH


The dimensions of the fasteners are printed as a diameter dimension (M) ISO 68-1. This is followed by a length dimensions for bolts/screws; the dimension of a bolt/screw is the part of the bolt/screw that disappears into the material in which it is mounted.


(Diameter)		(Length)
M8	x	20

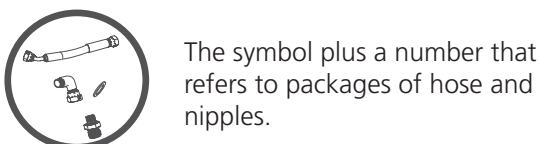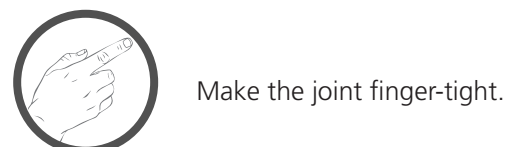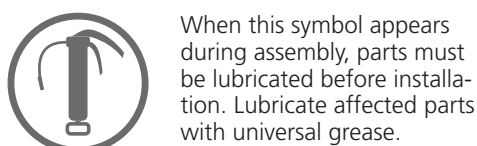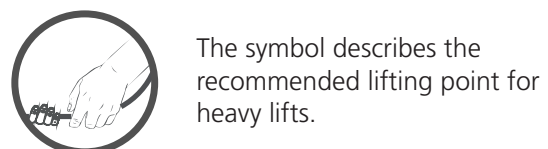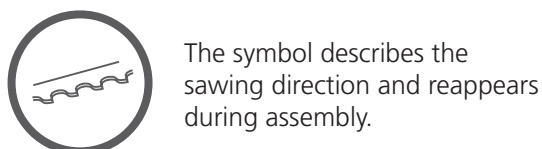

Delivery

The hydraulics are delivered in several different packages. The different functions are packed as shown in the illustration below. Arrange the component parts according to each function before starting the assembly.





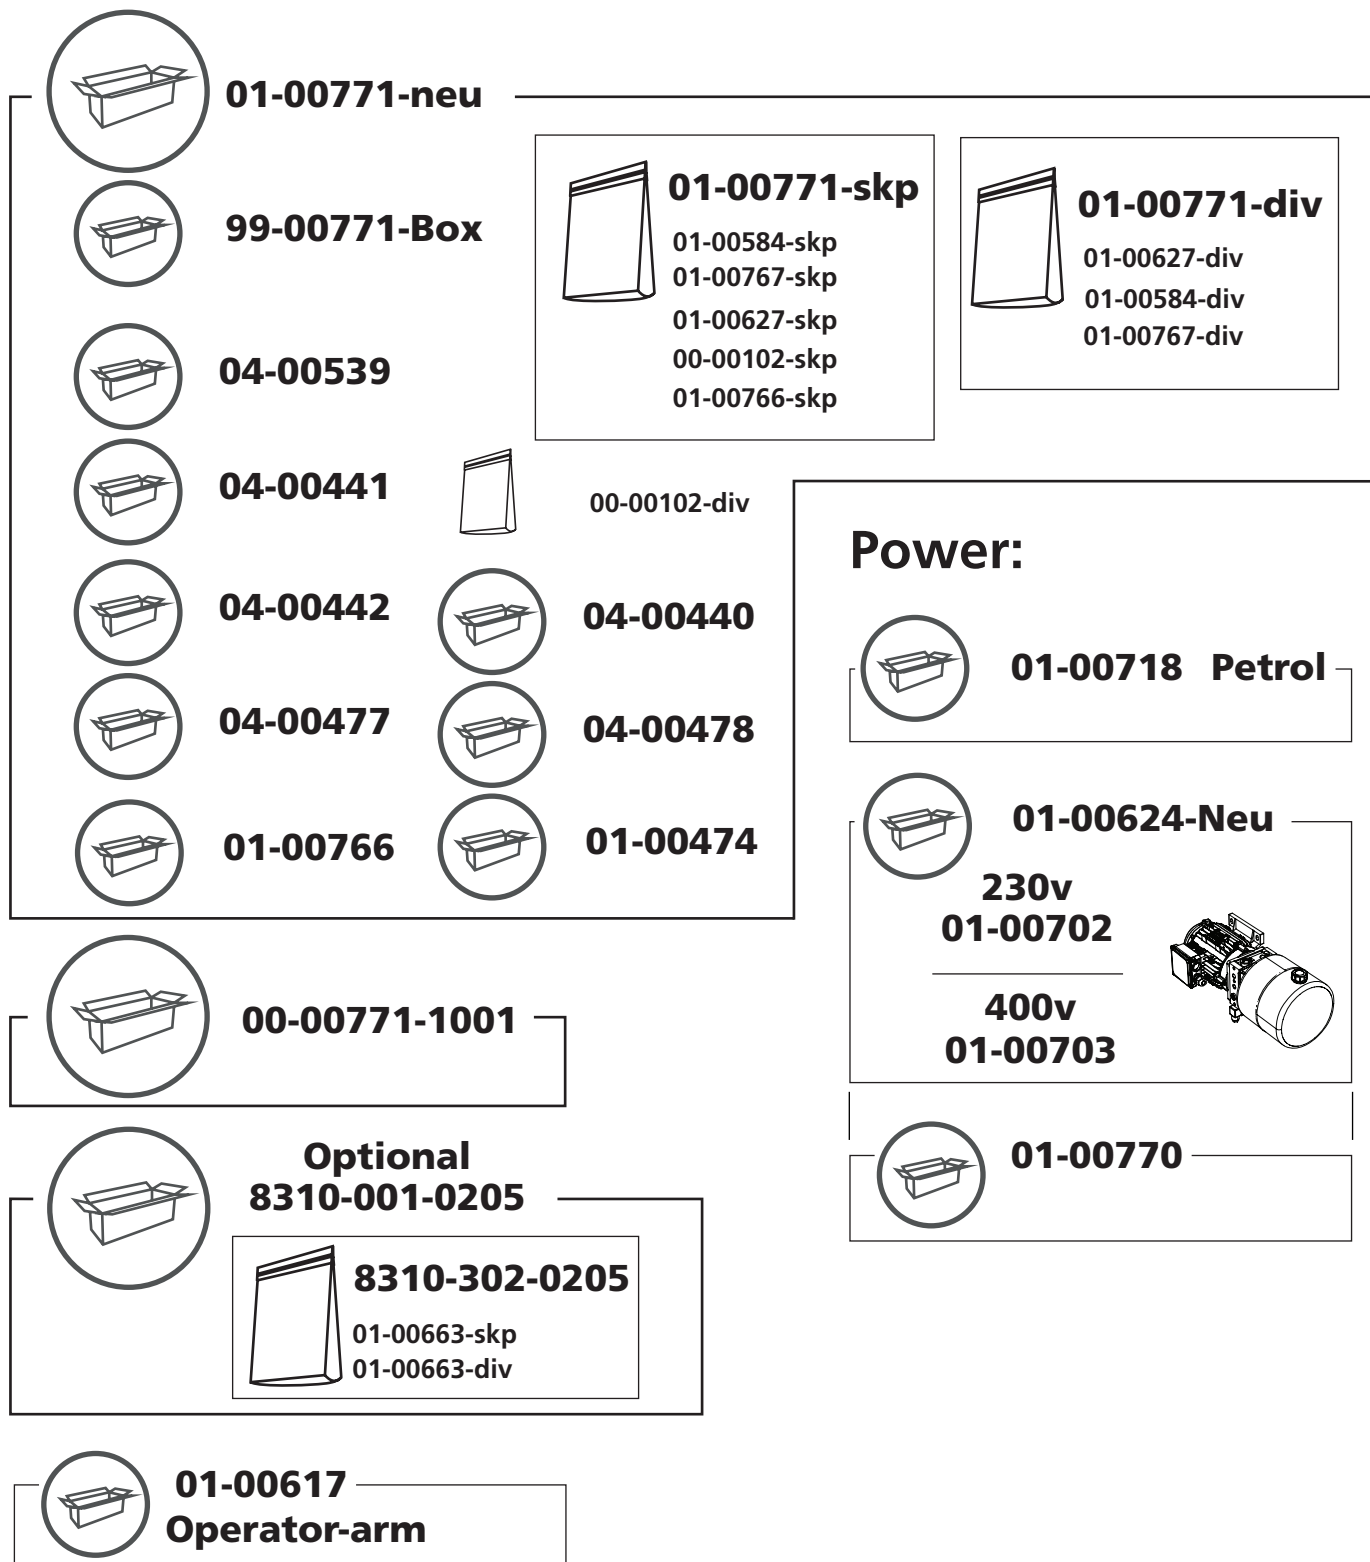




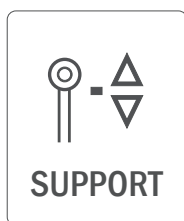


01-00771-neu 01-00584









01-00584-skp

-  2 x – M8x75
-  6x – M10x110
-  2x – M10x130
-  1x – M10x90
-  4 x – M8x16
-  12 x – M8x20
-  8 x – M10x50
-  4 x – M10x20
-  6 x – M12x25
-  2 x – M8
-  17 x – M10
-  12 x – M8
-  8 x – M8

-  4x – 03-02814
-  3x – 03-02820 (61mm)
-  6x – 03-02822 (83mm)
-  4x – 03-02830
-  4x – 03-02834 (23,5mm)
-  4x – 03-02839
-  4x – 03-02842 (29,5mm)
-  2x – 03-02843 (100mm)
-  1x – 03-02971 (59,5mm)
-  2x – 03-03293
-  4x – (8,5x12x11)



01-00584-div

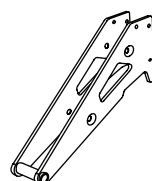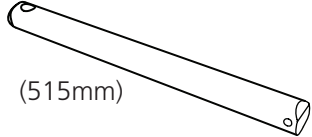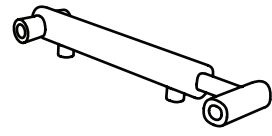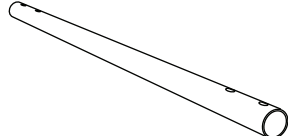- 02-00445  2 x
- 03-02815  2 x
- 03-02816  2 x
- 03-02838  2 x (515mm)
- 04-00488 
- 03-03036  2 x
- 03-03038  3 x




04-00539

-  04-00538
-  04-00537
-  4x (1/4)
-  4 x (1/4- 1/4)
-  2x (1/4- 1/4)



99-00771-Box


- 01-00769  2 x




01-00771-neu 01-00627




8 x – M12x100




1 x – M10x100



2 x – M10x110



2 x – M10x140



1 x – M16x100



01-00627-skp



5 x – M12x30



8 x – M12



1 x – M16



5 x – M10



10 x – M12




2 x – M8



01-00627-div



2x – 03-02868 (105mm)



3x – 03-02878 (77mm)



2x – 03-02879 (35mm)




00-00771-1001

04-00365

03-02730

2 x

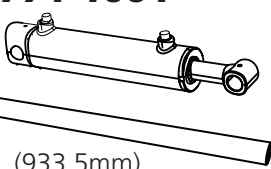


(933,5mm)




99-00771-Box

01-00628




02-00468




03-02925



02-00447

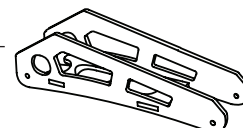

02-00448

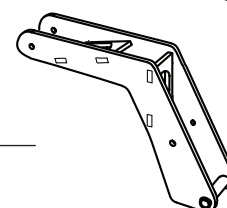


02-00469



02-00460



03-02871



(450mm)




1x 04-00535




1x 04-00536



04-00442



2x (1/4- 3/8)




2x (1/4- 1/4)



2x (1/4)



2x (3/8)



2x (1/4- 1/4)




1x 04-00532



1x 04-00531




04-00441





4x (1/4- 1/4)



4x (1/4)



2x (1/4- 1/4)

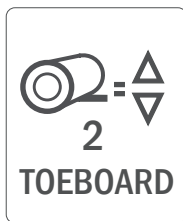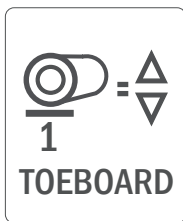

01-00771-neu

01-00767





- 4 x – SGA20
- 4 x – M10x35
- 2 x – M10x70
- 2 x – M10x100
- 4 x – BRB20
- 8 x – M10



- 2 x – 03-02898 (46,5mm)
- 2 x – 03-02878 (77mm)
- 4 x – 03-02926 (11,5mm)




- 1x 04-00534
- 1x 04-00533
- 4x (1/4- 1/4)
- 2x (1/4- 3/8)
- 4x (1/4)
- 2x (3/8)
- 2x (1/4- 1/4)

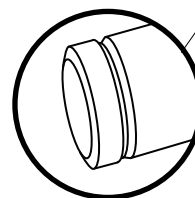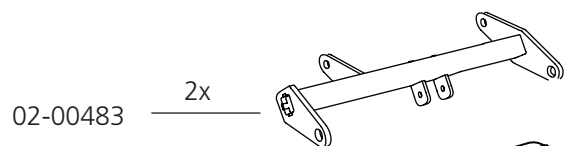

- 2x 04-00481
- 4x (1/4)
- 4 x (1/4- 1/4)
- 2x (1/4- 1/4)




01-00684 B-1001 (2x)

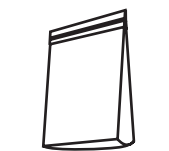

- 4x – M12x90
- 4 x – M12
- 4 x – M12

02-00461 —

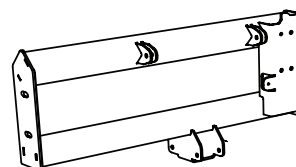




01-00771-neu 01-00560



01-00624-Neu



01-00624-skp SKP powerpack

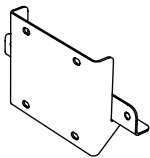

- 4 x – M10x25
- 4 x – M10
- 2x – M12x90
- 4 x – M12
- 4 x – M4
- 4 x – M4
- 04-00439

- 2x 04-00530
- 2x (1/4- 1/4)
- 2x (1/4- 3/8)
- 2x (1/4)
- 2x (3/8)



04-00439



01-00718

- 03-03154
- 03-03181
- 04-00547
- 3x – M12x90
- 6 x – M12
- 1 x – M8x20
- 1 x – M8

01-00718-skp



01-00617

- 02-00465
- 02-00487
- 02-00449
- 03-02857
- 04-00521 2x
- 2 x – M8x20
- 1x – M12x90
- 2 x – M12
- 4 x – M6x16
- 4 x – M6



01-00617-skp SKP operation arm



01-00766

- 04-00420 2 x
- 03-03106 2x



01-00766-skp

- 6 x – M8x14
- 6 x – M12
- 2x – M12x90
- 2x – M12x25
- 10x – M10x80
- 10 x – M10




01-00770







- 02-00458
- 4 x – M12x90
- 8 x – M12
- 3 x – M6x12
- 3 x – M6



01-00770-skp

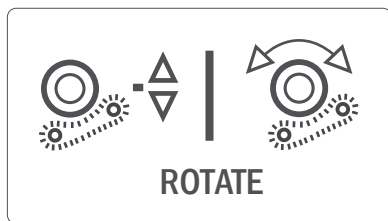

01-00771-neu 00-00102

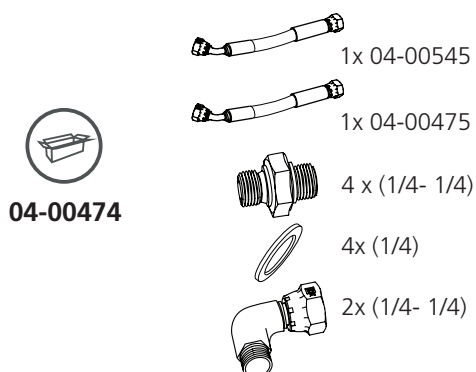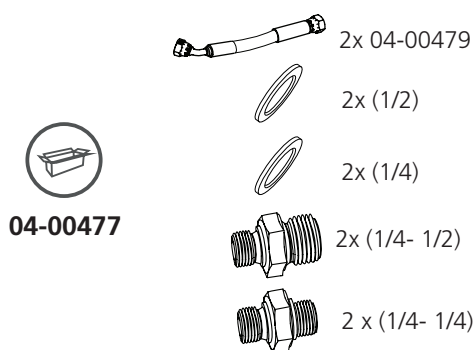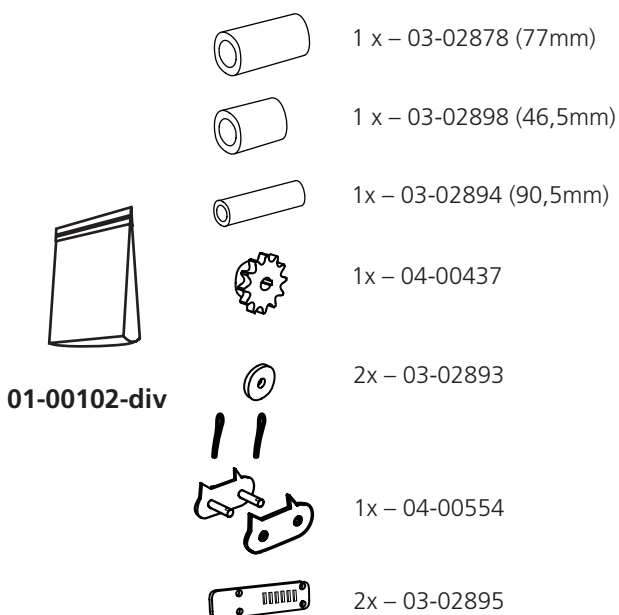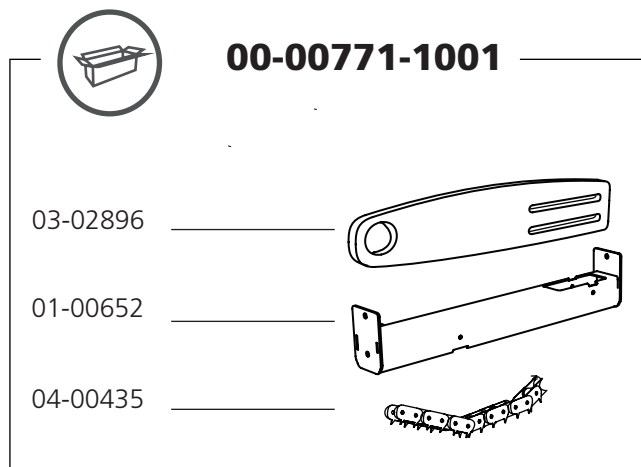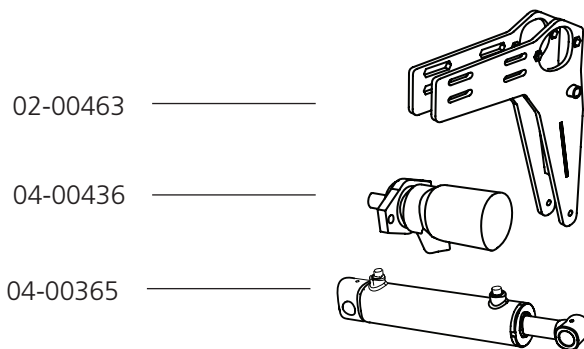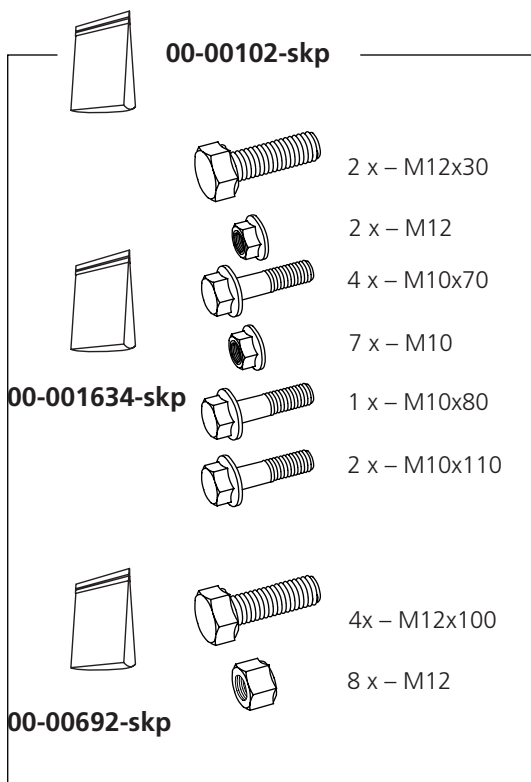



LOAD











8310-001-0205



8310-302-0205




01-00663-skp


-  8 x – M10x20
-  4x – M12x90
-  2x – M12x110
-  2x – M12x130
-  4x – M10x25
-  8x – M10x30
-  2x – M12x55
-  4 x – M8x40
-  8 x – M12
-  20 x – M10
-  6 x – M12
-  4 x – M8
-  8 x – BRB10
-  4 x – BRB12




01-00663-div

-  2x – 03-03094 (97mm)
-  2x – 03-03105 (78mm)
-  2x – 03-03102 (21,8mm)
-  4x – 04-00553


03-02902 — 2 x

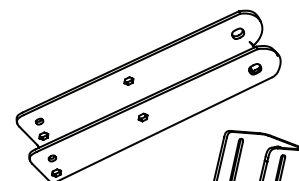


02-00481 — 2 x

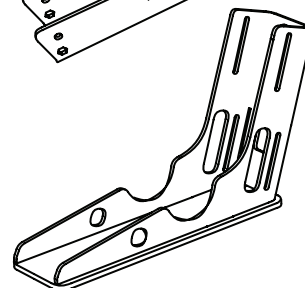


02-00472 — 2 x

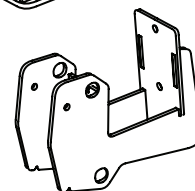


04-00552 — 2 x

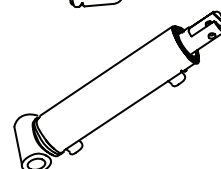

02-00482 — 2 x

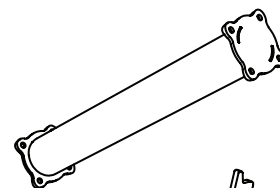

02-00470 — 2 x

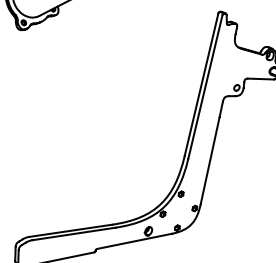

03-03001 — 2 x



2x 04-00592



16x (1/4)



16 x (1/4- 1/4)




04-00468

-  4x 04-00470
-  2x 04-00471
-  2x 04-00472

ASSEMBLY



01-00767

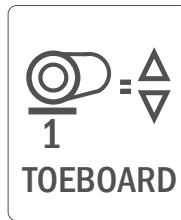

POSITION

In order for all functions to fit on the rails, the position is important. We start from the joints on the rail pipes and then count the hole pattern from the relevant joints to find the correct position.

The assembly assumes that the saw rails have an extension. If a second extension is fitted, it shall be mounted on the far end of the rails.

The parts from packages are needed to start the assembly. **01-00767** We recommend laying out all fasteners on a tray or similar to make the task easier.



To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.



When this symbol appears during assembly, parts must be lubricated before installation. Lubricate affected parts with universal grease.




The symbol describes the sawing direction and reappears during assembly.

Position 01-00767


The log beds are positioned on pipes number **3** and **5** viewed in the sawing direction. The beds are then placed on hole pattern 3 counted from the joint of the pipe in the sawing direction.

Count the hole patterns from the pipe joint, the log beds should be placed on the third hole pattern from the respective pipe joint

Hole pattern

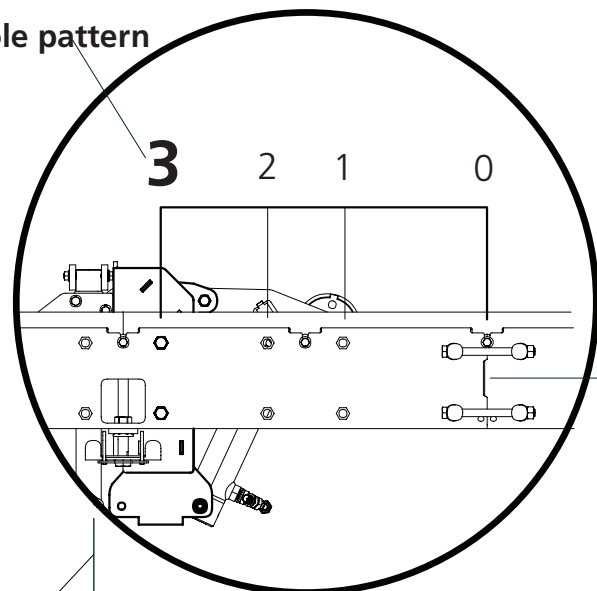


Pipe joint

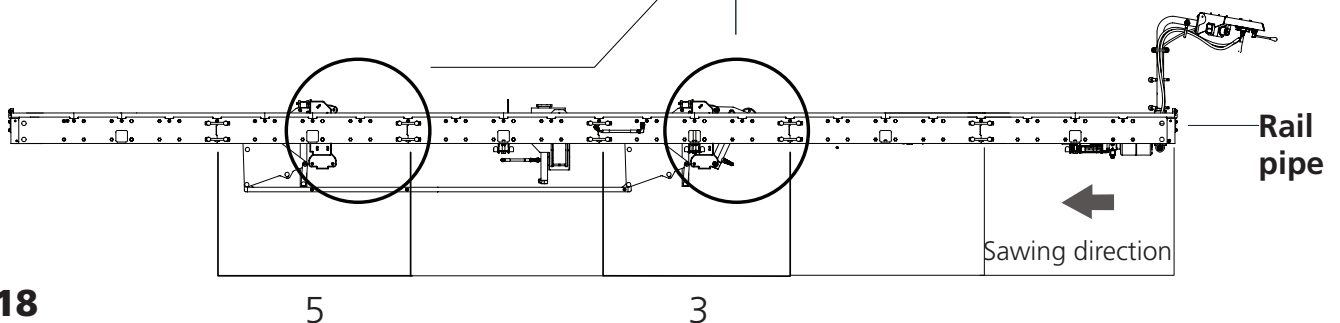




01-00767

1

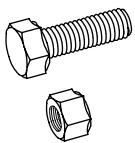


4 x – M12x100

4 x – M12

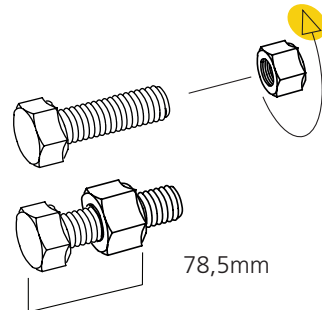


2

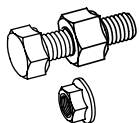


4 x – M12x100 + M12

4 x – M12

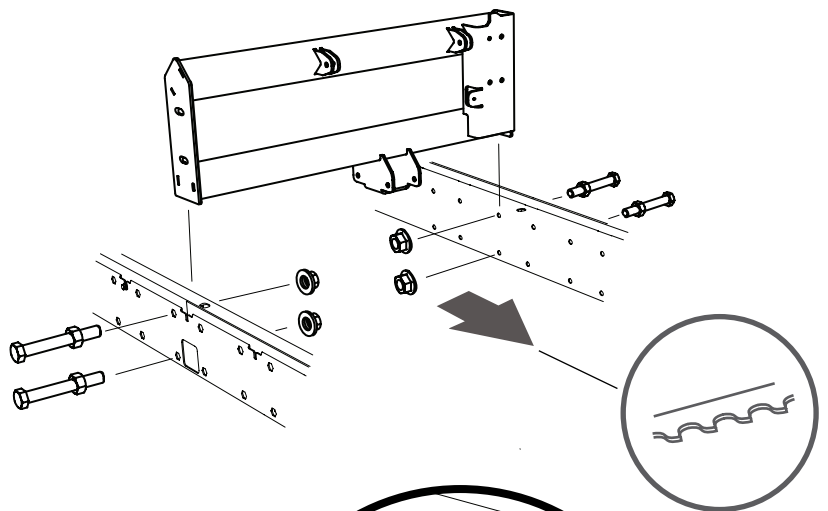


3

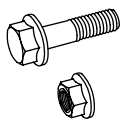


1 x – M10x100

1 x – M10



1 x – 03-02878 (77mm)

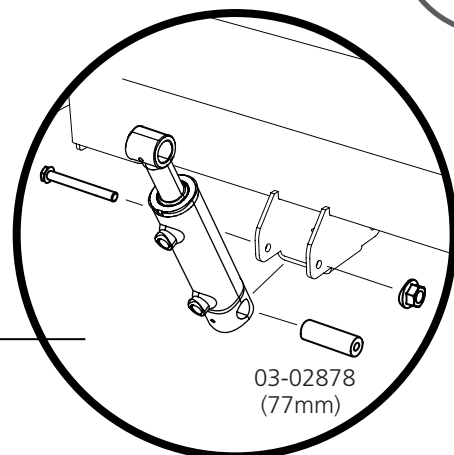


4



2 x – BRB20



2 x – SGA20

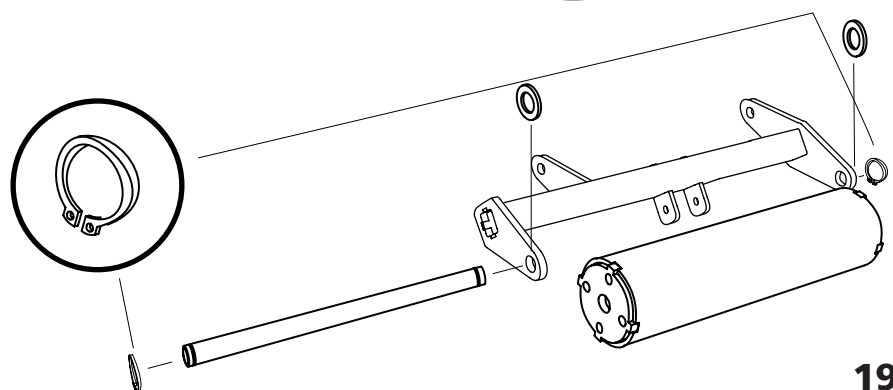






01-00767



5

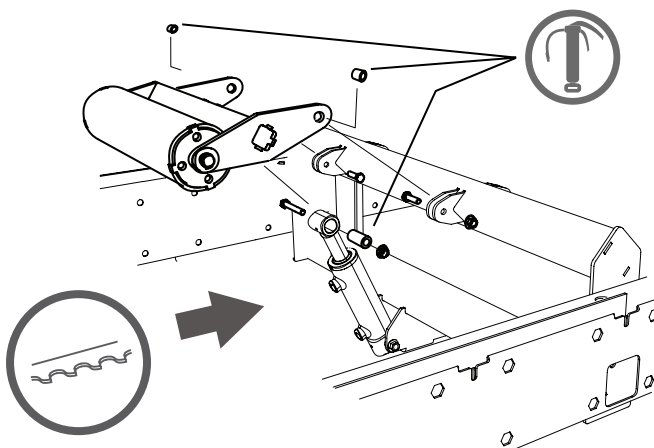

Note that the two toeboards should be mounted on each side of their respective bed. Toeboard (1) shall be mounted closest to the operating position.

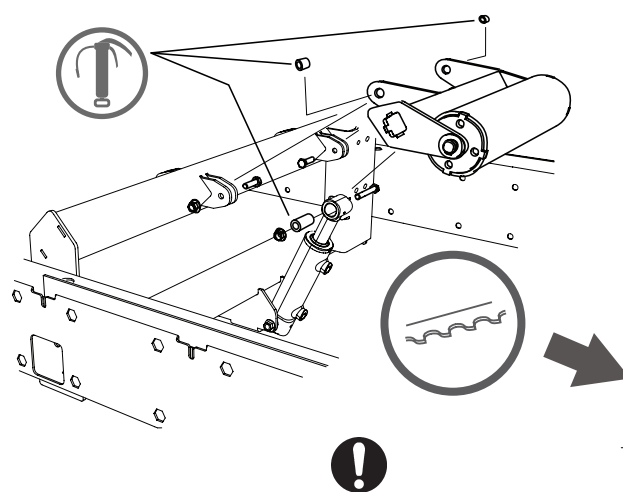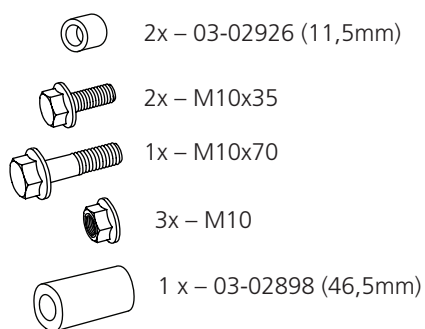


We recommend laying out all fasteners on a tray or similar to make the task easier.

To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.


! WARNING PINCH RISK! In this section of the assembly there is a risk of injury through crushing, so be careful and wear work gloves.




01-00584

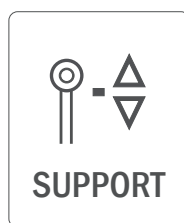

1

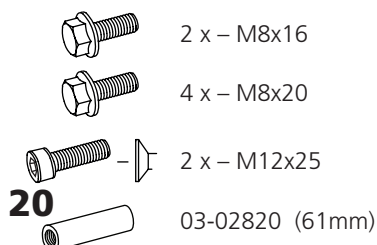

M8x16

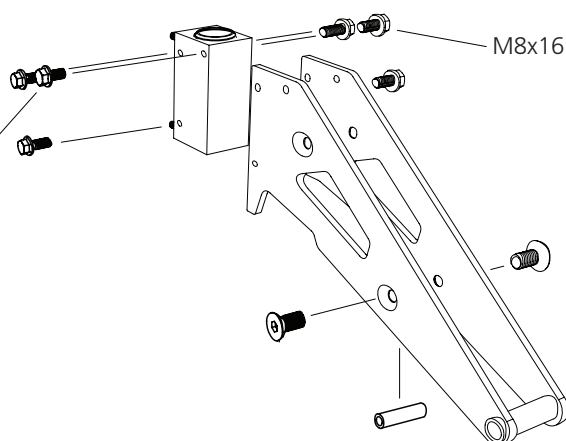


M8x16

20




01-00584

2

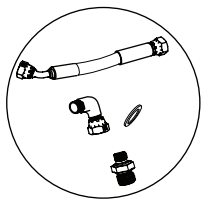

04-00539

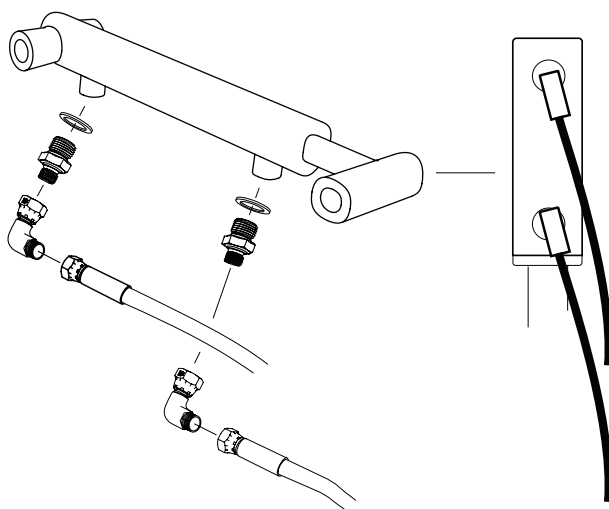


3



2 x – M12x25



1x – 03-02820 (61mm)

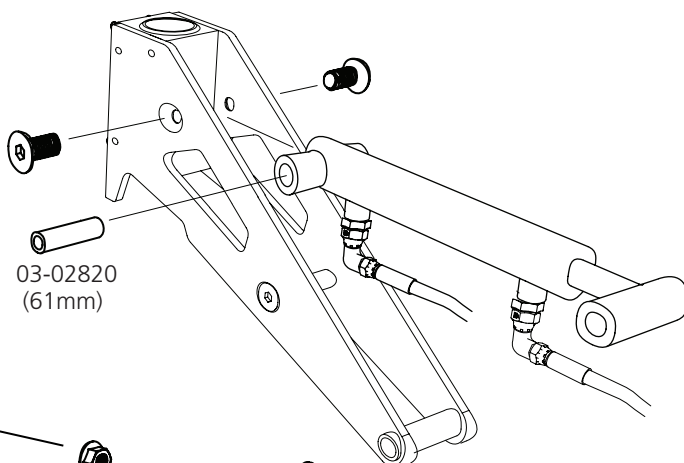

03-02820
(61mm)

4





5 x – M8



1 x – M8




1 x – M8x20

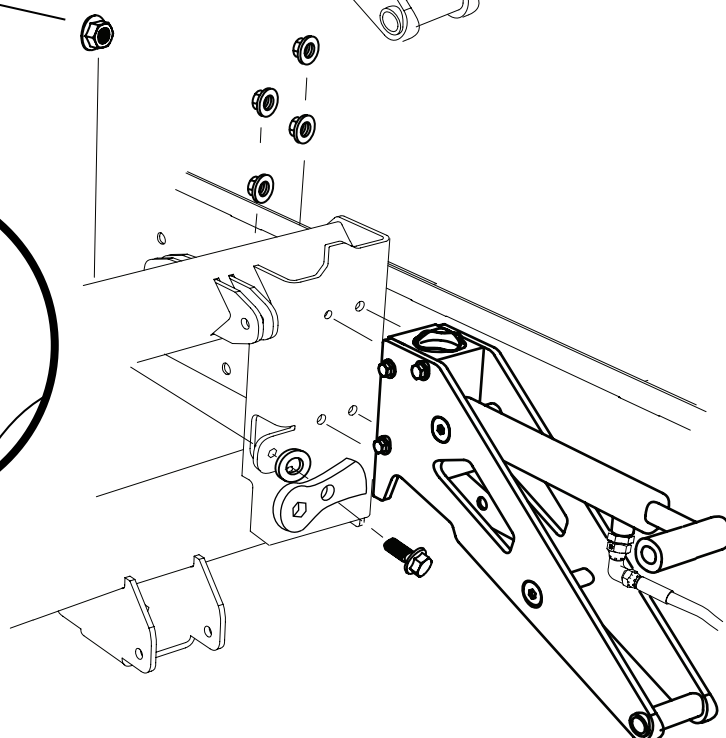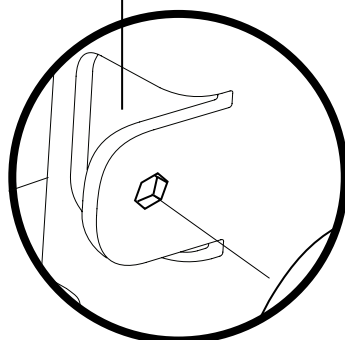



01-00584

5



1 x – M8x75



1 x – M8





2 x – M8



2x – DR-01467




2x – 03-02839

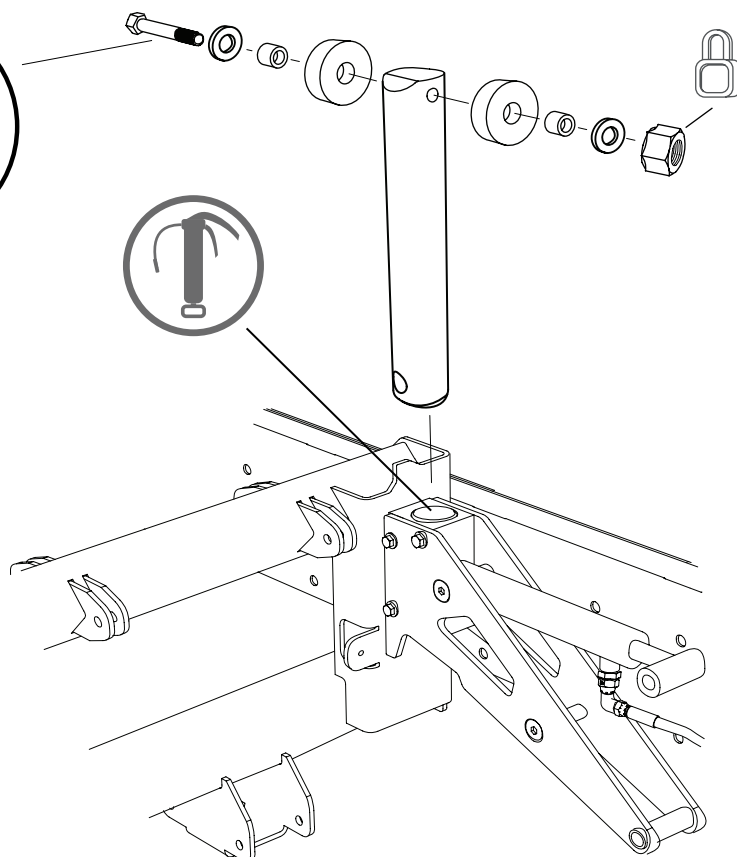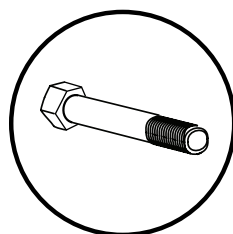

6



2 x – M10x20



1 x – M10x110



1 x – M10





1x – 03-02822 (83mm)




2x – 03-02830




2x – 03-02814

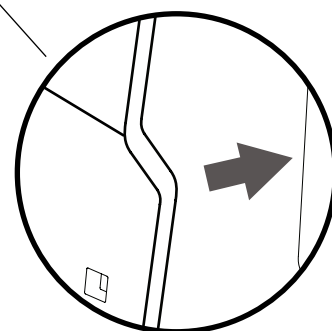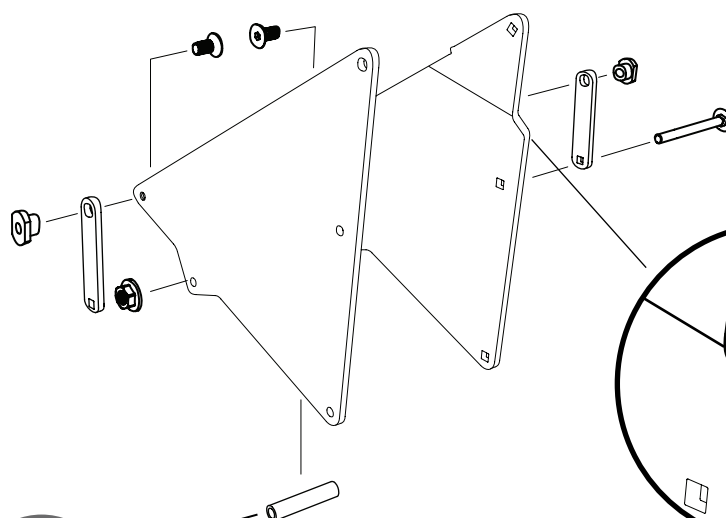

7



1 x – M10x90



1 x – M10x110




2 x – M10



1x – 03-02971 (59,5mm)




1x – 03-02822 (83mm)

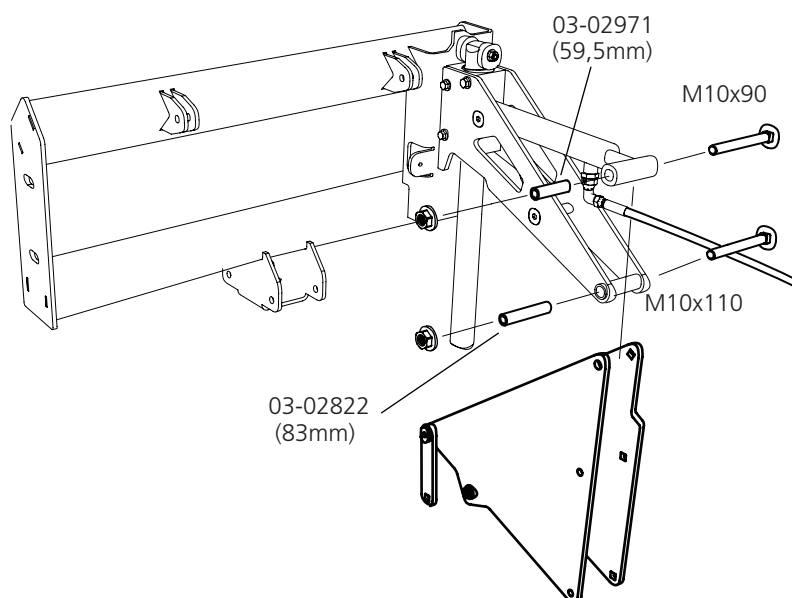



01-00584



8




8 x – M10x50




8 x – M10

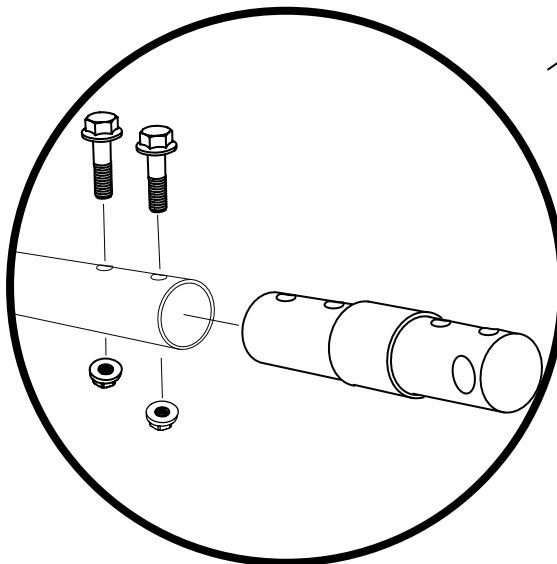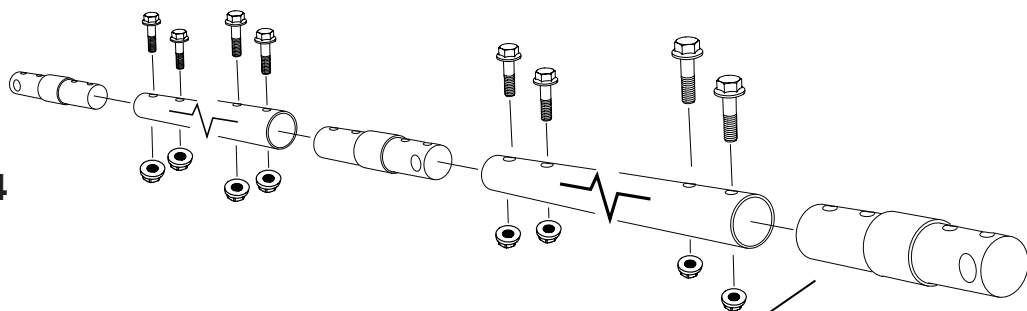

9



1 x – M10x130



1 x – M10x110



2 x – M10



1x – 03-02843 (100mm)




2x – 03-02834 (23,5mm)



2x – 03-02842 (29,5mm)



1x – 03-02822 (83)mm

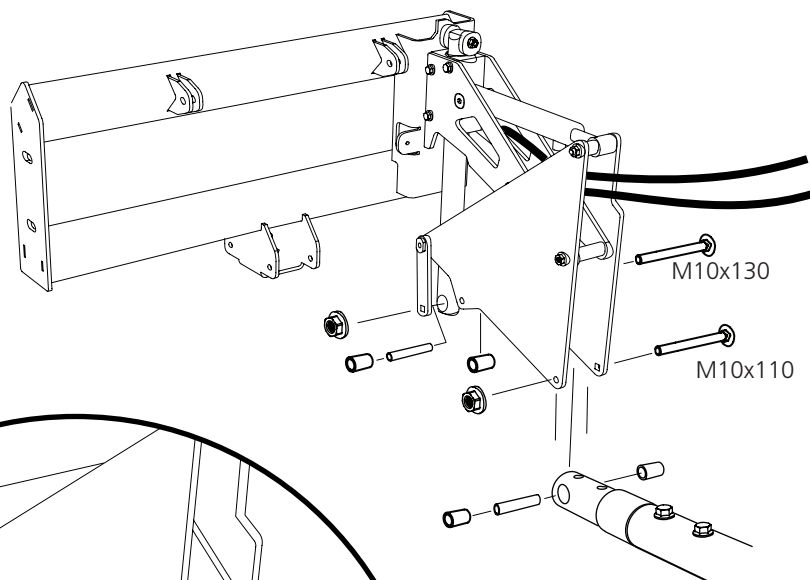

03-02842
(29,5mm)


03-02843
(100mm)

03-02834
(23,5mm)

03-02822
(83)mm

M10x130

M10x110

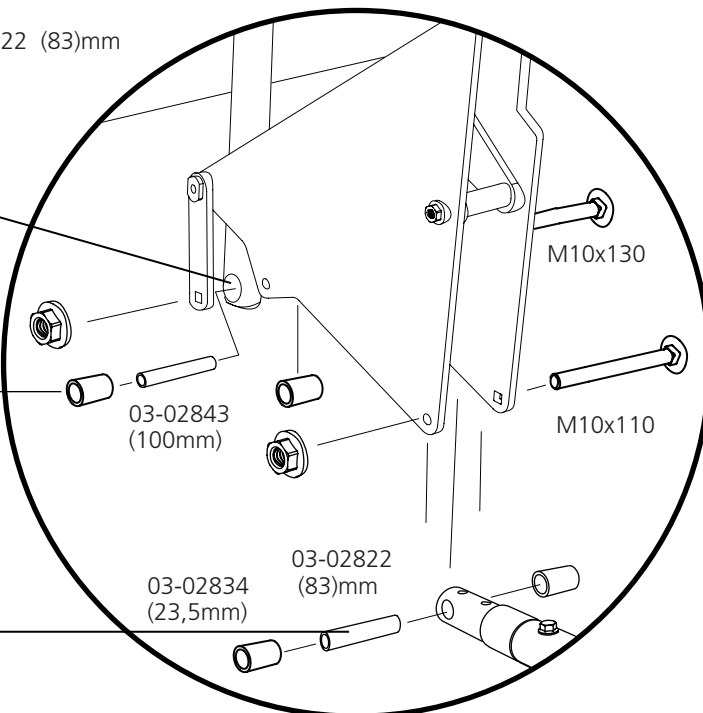



01-00627




We recommend laying out all fasteners on a tray or similar to make the task easier.

To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.

Position 01-00627


The log beds are positioned on pipe number **4** viewed in the sawing direction. The log clamp is then placed on hole patterns **3** and **4** counted from the joint on the pipe in the sawing direction.

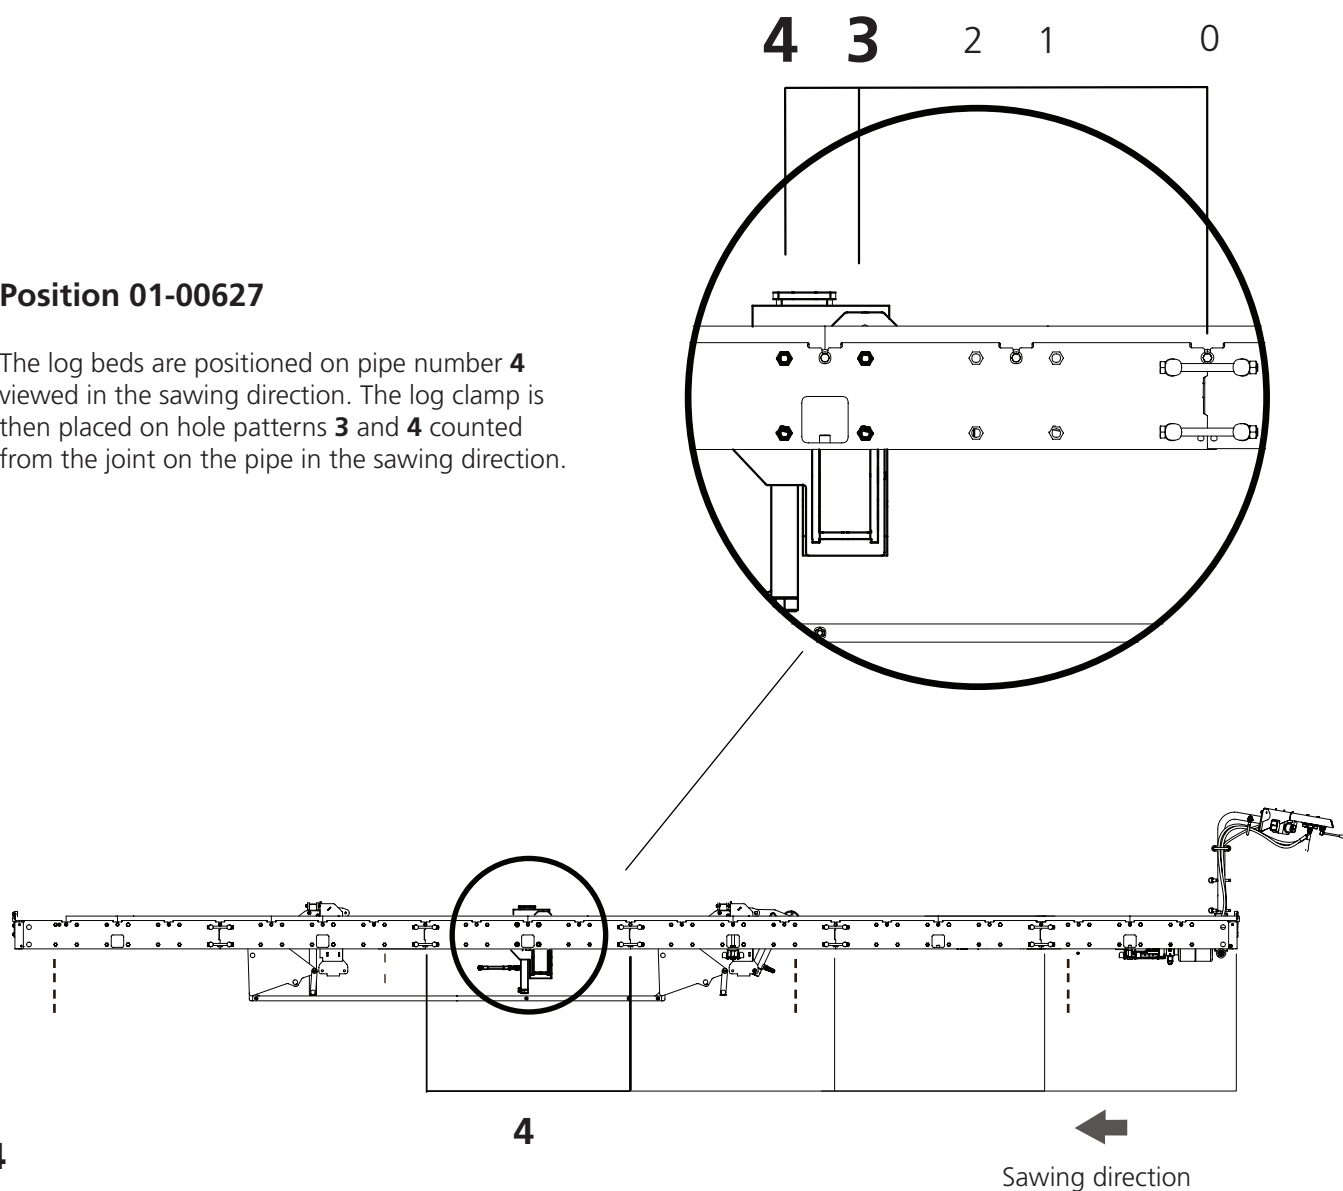




01-00627

03-01976


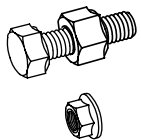


4 x – M12x100 +M12



4 x – M12

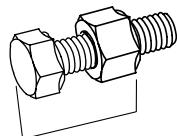

78,5mm

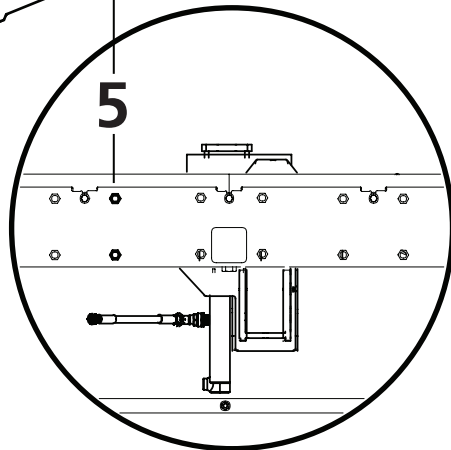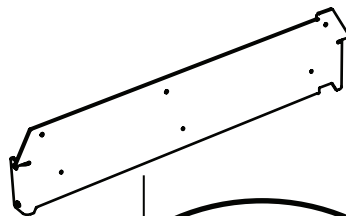


2 x – M12x30

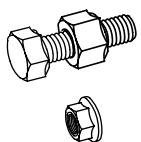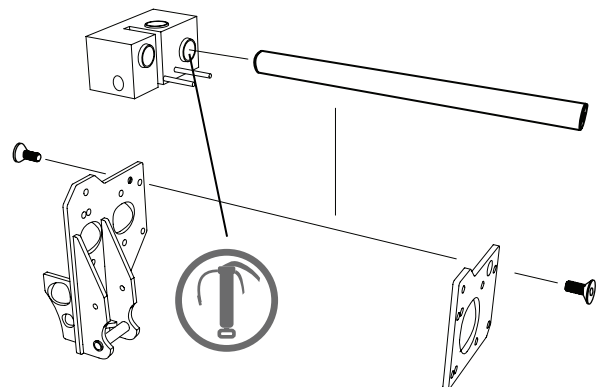


8 x – M12x100 +M12


8 x – M12

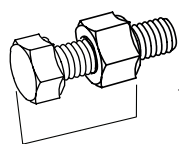

78,5mm

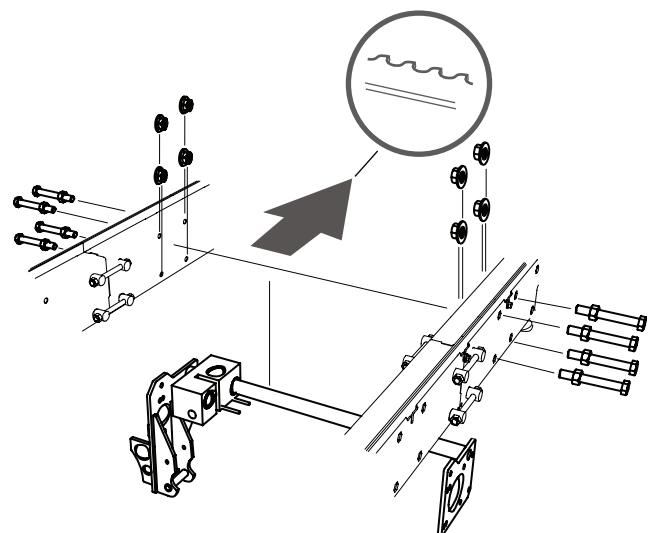



2 x – M12x30

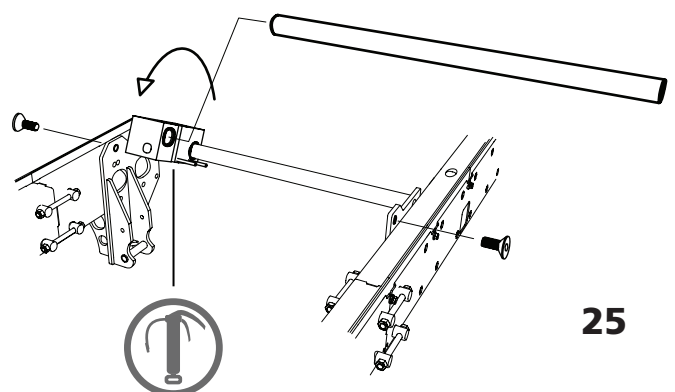







01-00627



4

-  1 x – M10x110
-  1 x – M10x140
-  2 x – M10
-  1x – 03-02868 (105mm)
-  1x – 03-02878 (77mm)

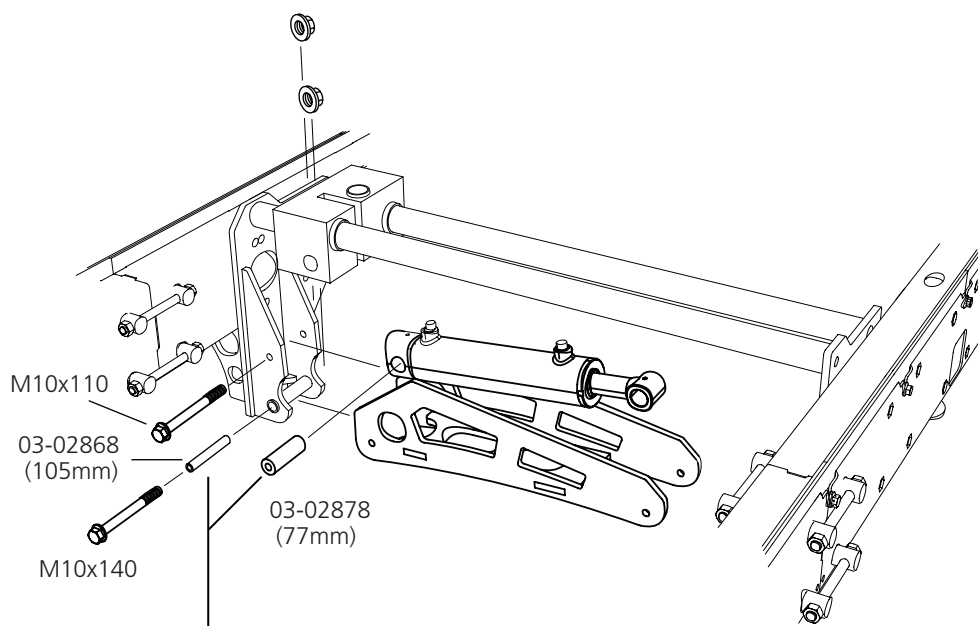

5

-  1 x – M10x100
-  1 x – M10x110
-  1 x – M10x140
-  3 x – M10
-  2x – 03-02878 (77mm)
-  2x – 03-02879 (35mm)
-  1x – 03-02868 (105mm)

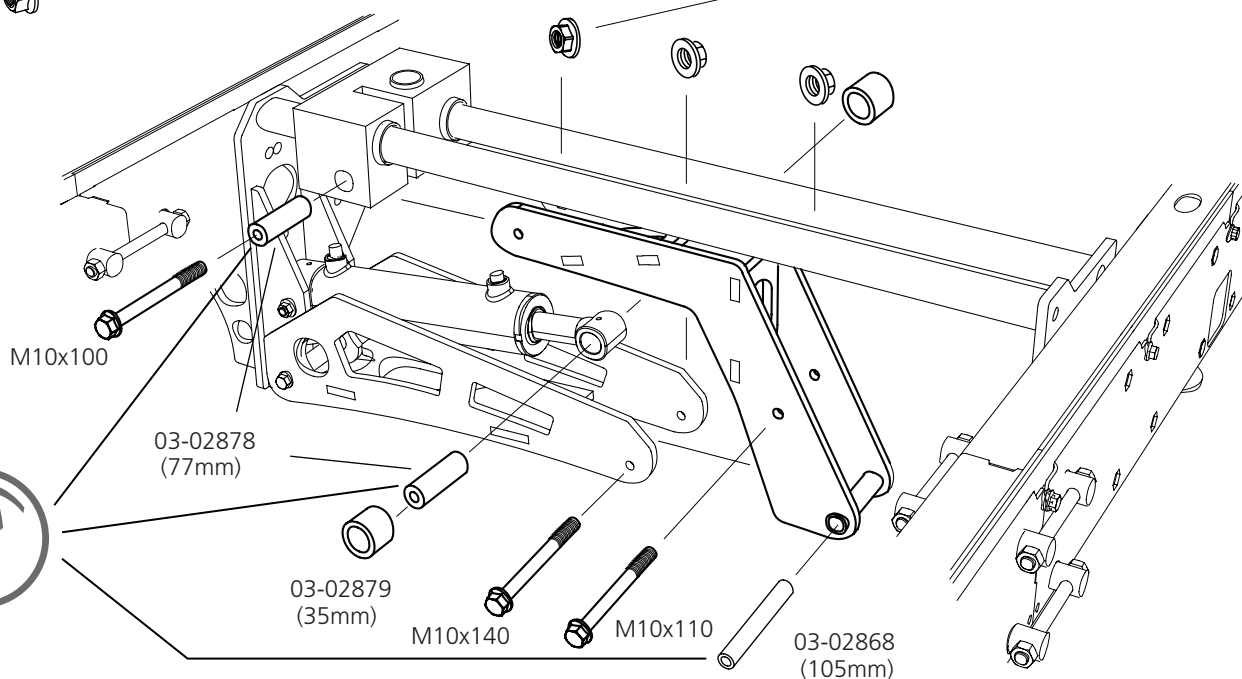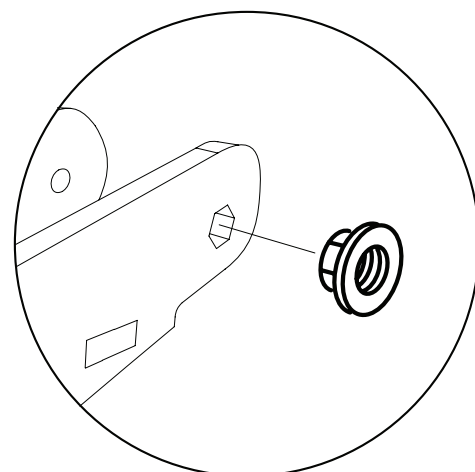




01-00627

6




2 x – M8

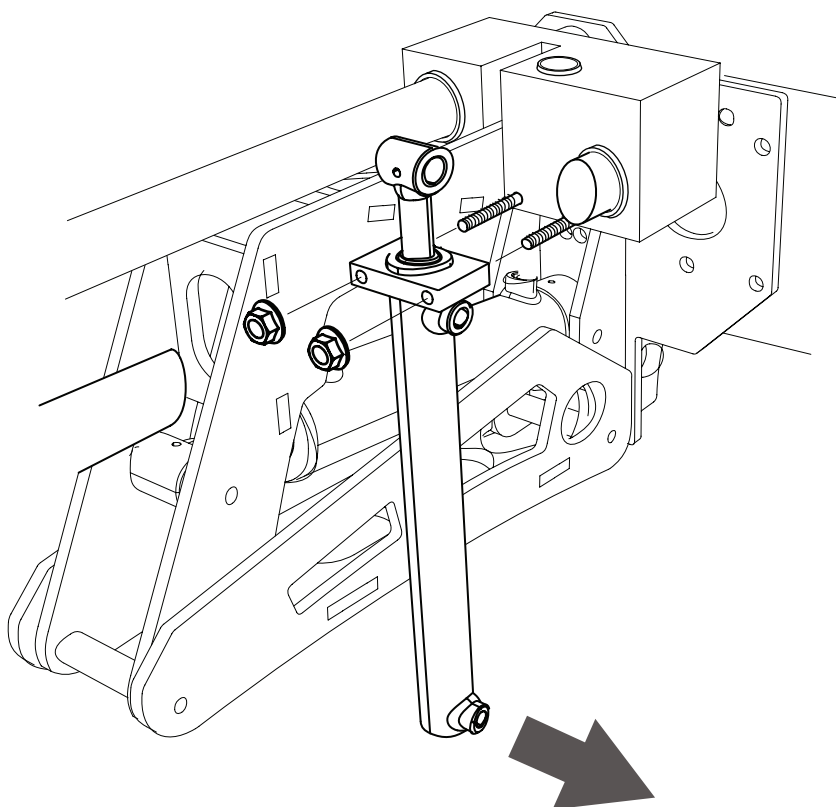


7




1 x – M12x30



1 x – M16x100




1 x – M16

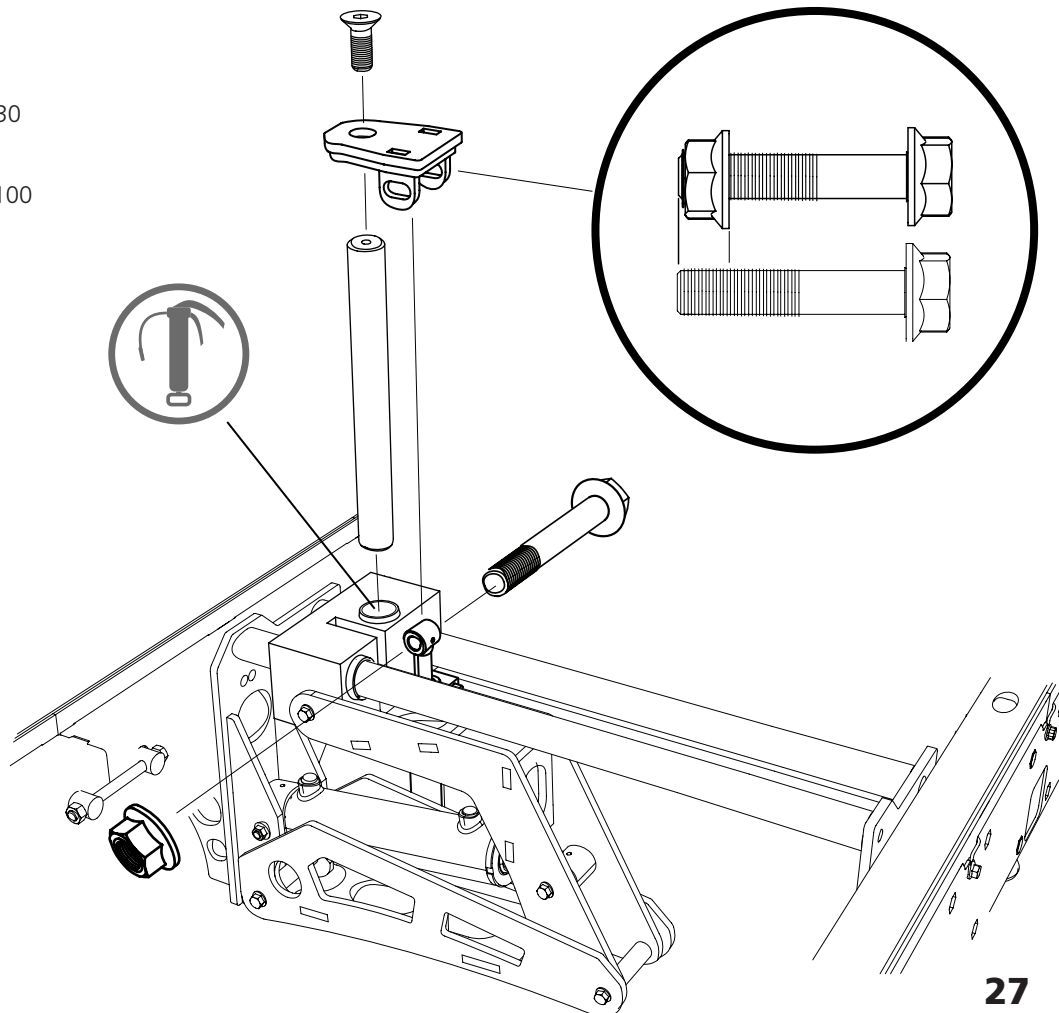



00-00102


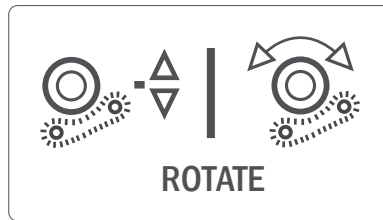


We recommend laying out all fasteners on a tray or similar to make the task easier.

To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.


Position 00-00102

The log beds are positioned on pipe number **4** viewed in the sawing direction. The beds are then placed on hole pattern **6** counted from the joint on the pipe in the sawing direction.

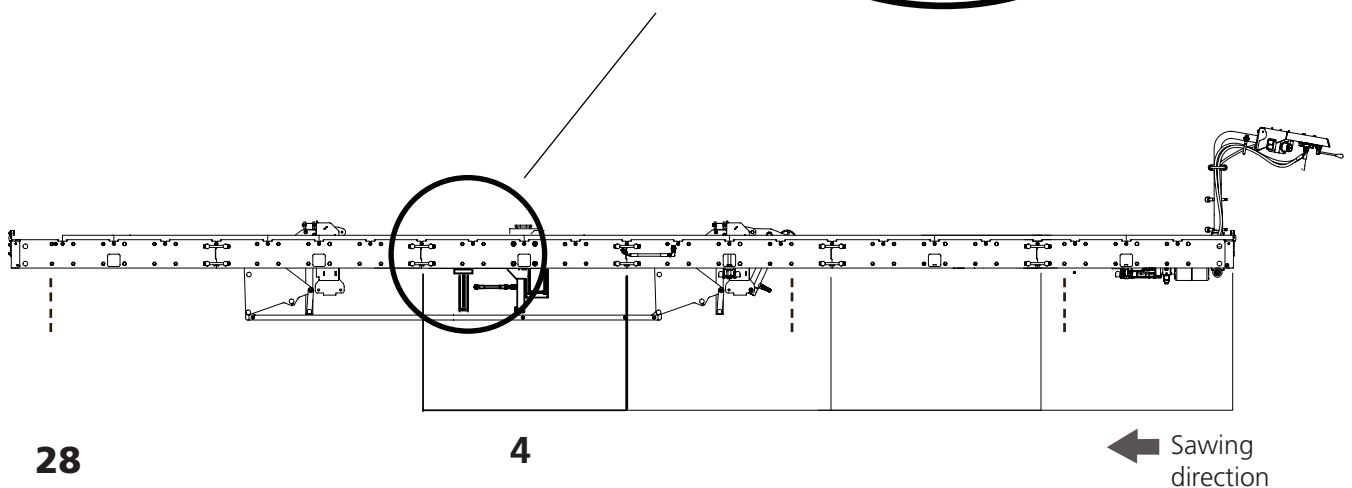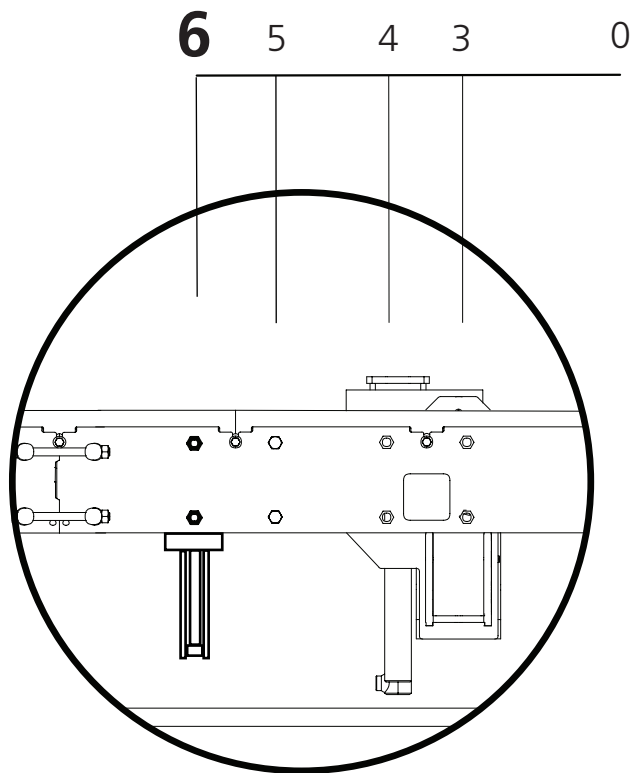





00-00102

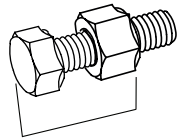

78,5mm

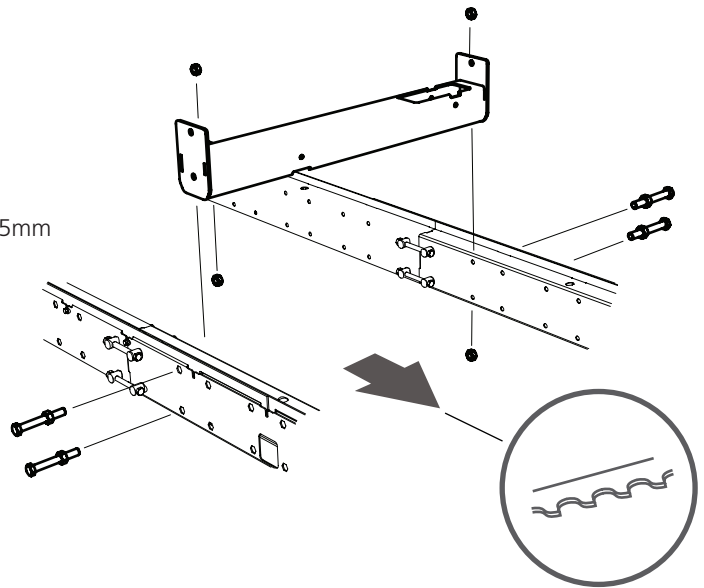

1




4 x – M12x100 +M12



4 x – M12




2




4 x – M10x70



4 x – M10

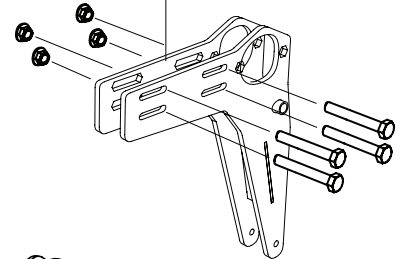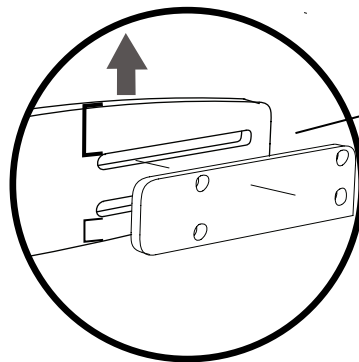


3




1 x – M10x110



1 x – M10




1x – 03-02894 (90,5mm)

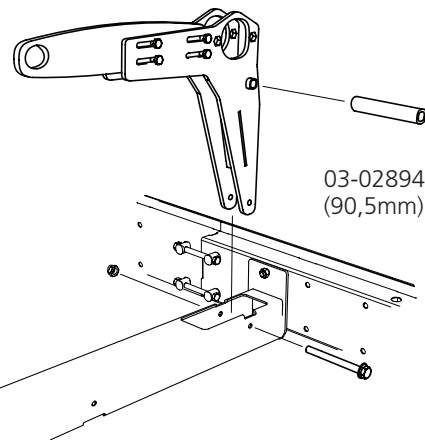


03-02894
(90,5mm)



4



1 x – M10x110



1 x – M10x75



2 x – M10




1x – 03-02878 (77mm)



1x – 03-02898 (46,5mm)



2x – 03-02898

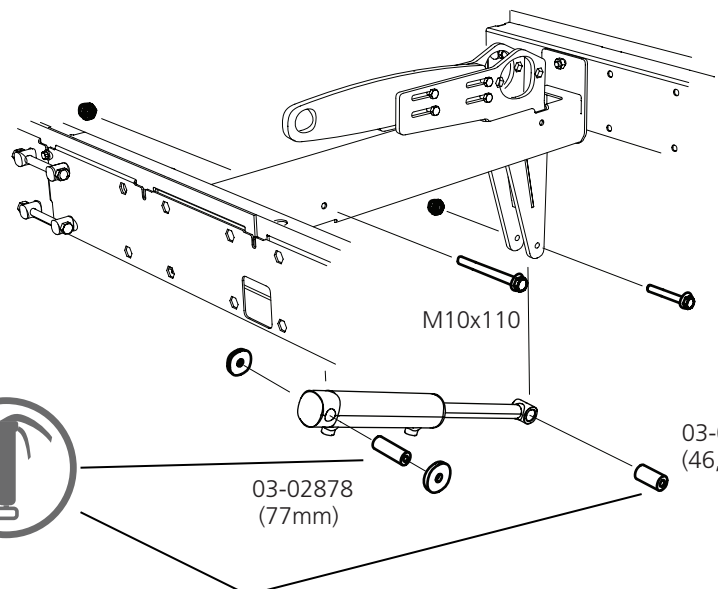


M10x110

03-02878
(77mm)

03-02898
(46,5mm)



00-00102

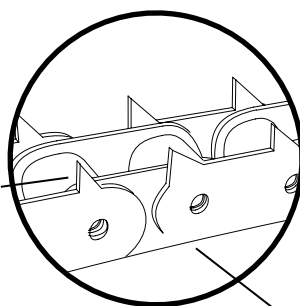

5




2 x – M12x30





2 x – M12




1x – 04-00437



04-00550 B751pro
04-00435

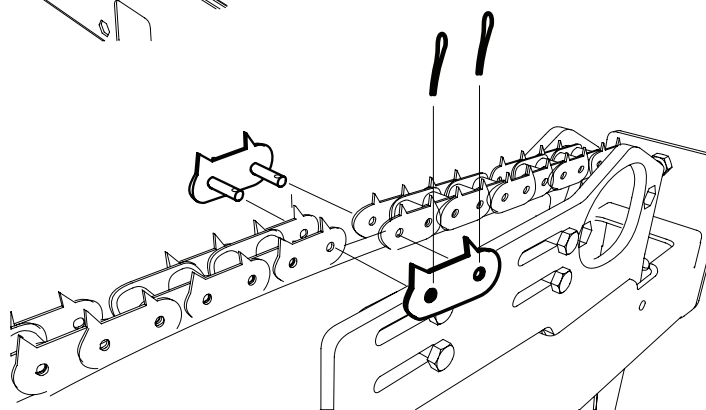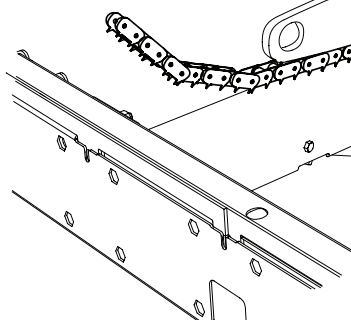

6

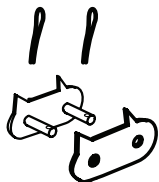


1x - 04-00554

7

Adjusting chain tension

Adjust the chain tension by releasing the screws holding the guide bar, then tighten the chain using a chisel or a breaking bar. Then re-tighten the screws.

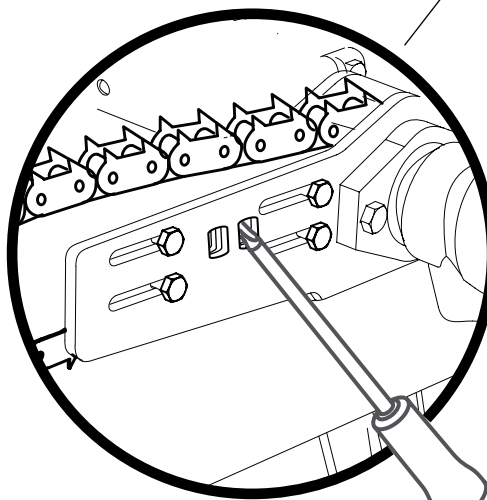



8310-001-0205



LOAD

Position 8310-001-0205


The log loaders are positioned on pipes number **3** and **5** viewed in the sawing direction.

Count the hole patterns from the pipe joint.



We recommend laying out all fasteners on a tray or similar to make the task easier.

To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.

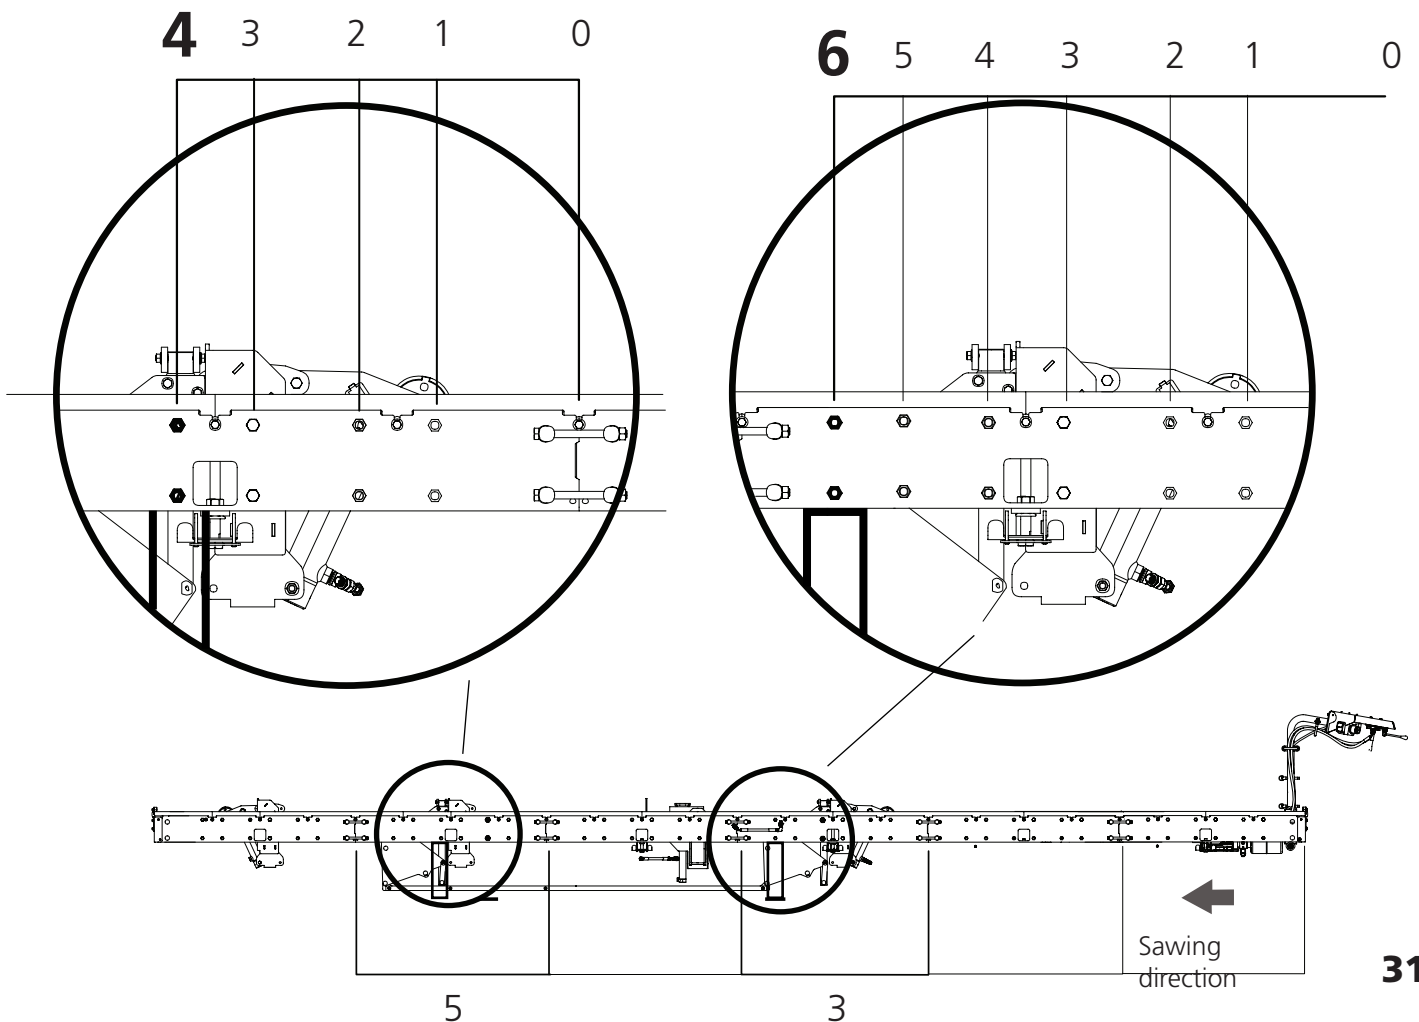



8310-001-0205

1




4 x – M10x20




4 x – M10



4 x – M10

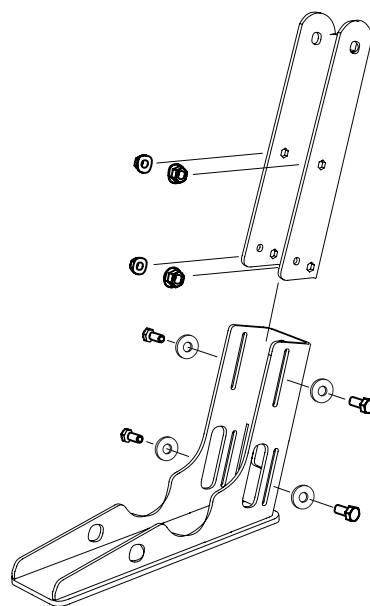




2

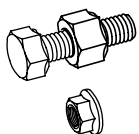


2 x – M12x100 + M12



2 x – M12

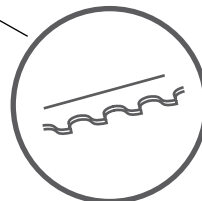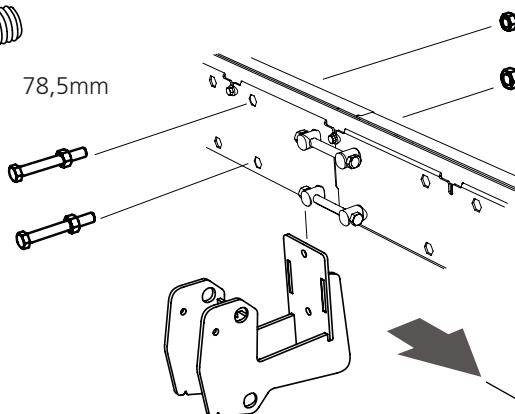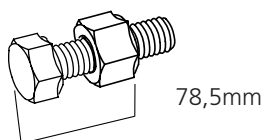

3



1 x – M12x130





1 x – M12



1 x – M12



1x – 03-03094 (97mm)

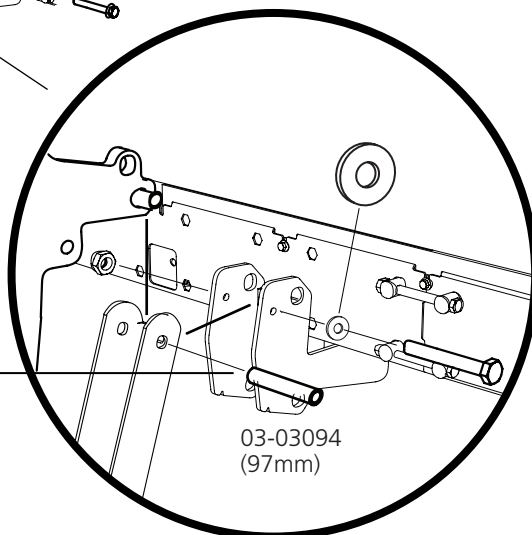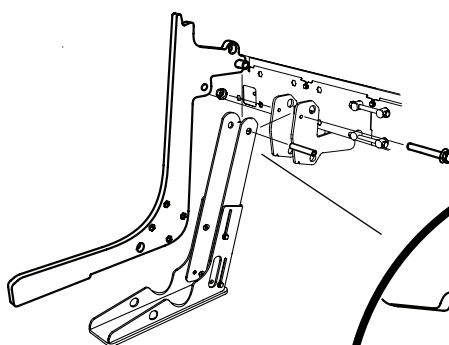


03-03094
(97mm)




8310-001-0205


4

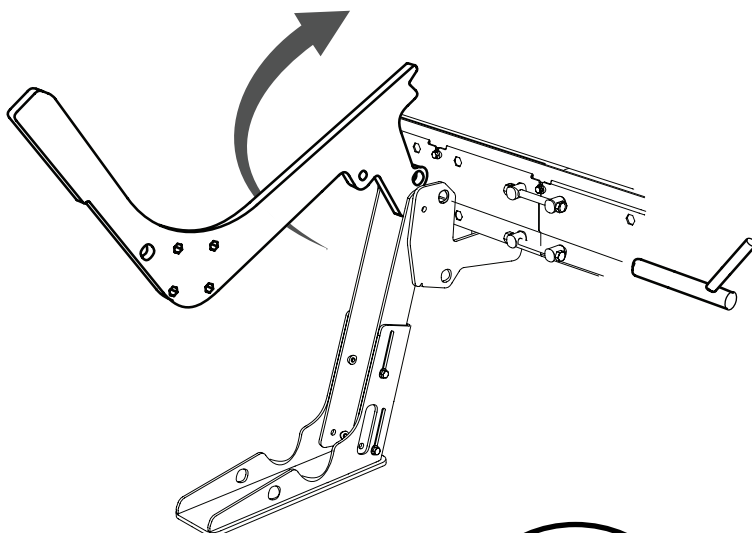

5

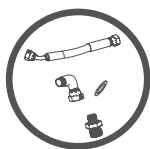

04-00468



1 x – M12x110




1 x – M12



1 x – M12



1x – 03-03105 (78mm)

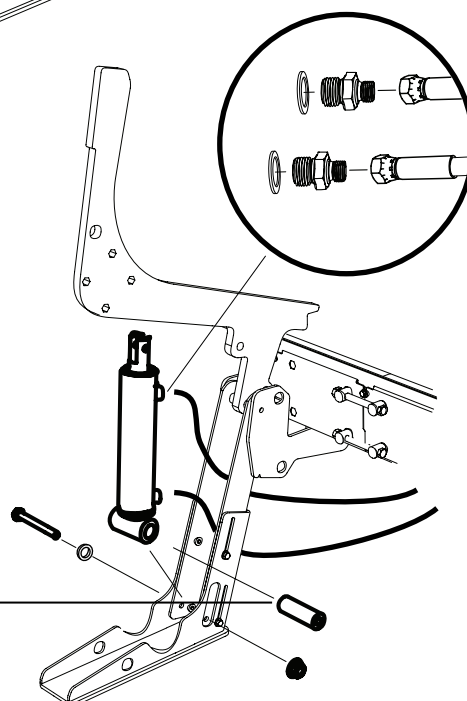

6




1 x – M12x55



1 x – M12



1x – 03-03102 (21,8mm)

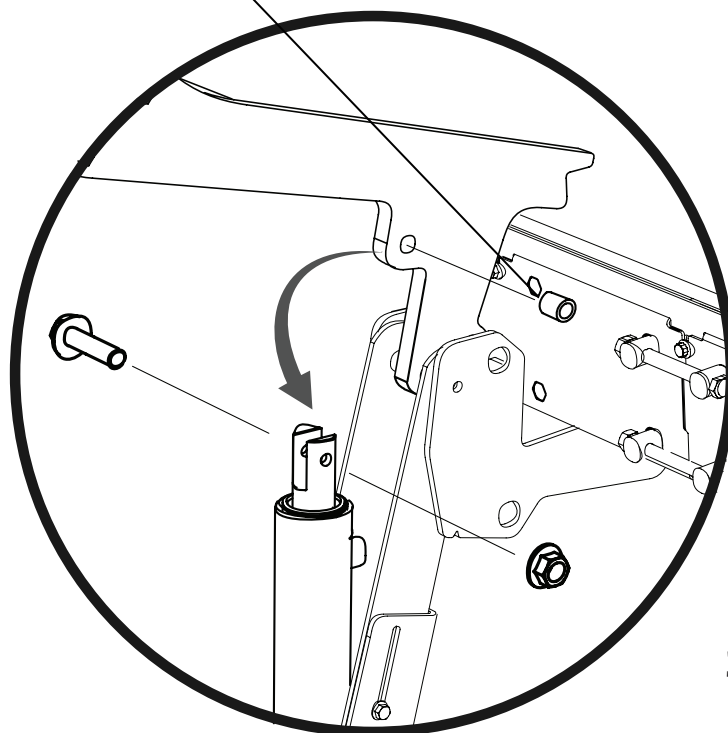



8310-001-0205


7



4 x – M10x25



4 x – M10

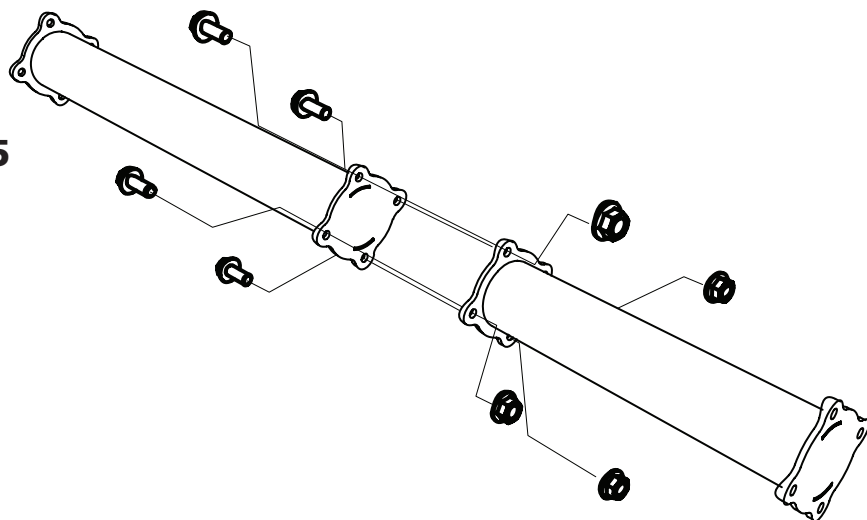


8



4 x – M10x30



4 x – M10

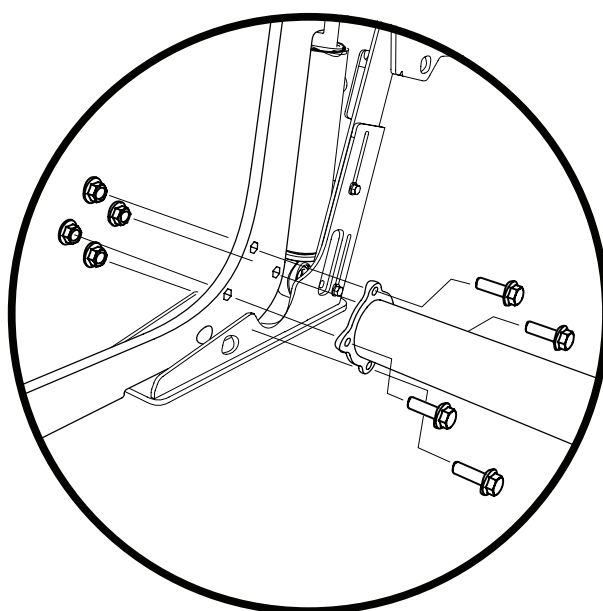


9





4 x – M8x40



4 x – M8



2 x

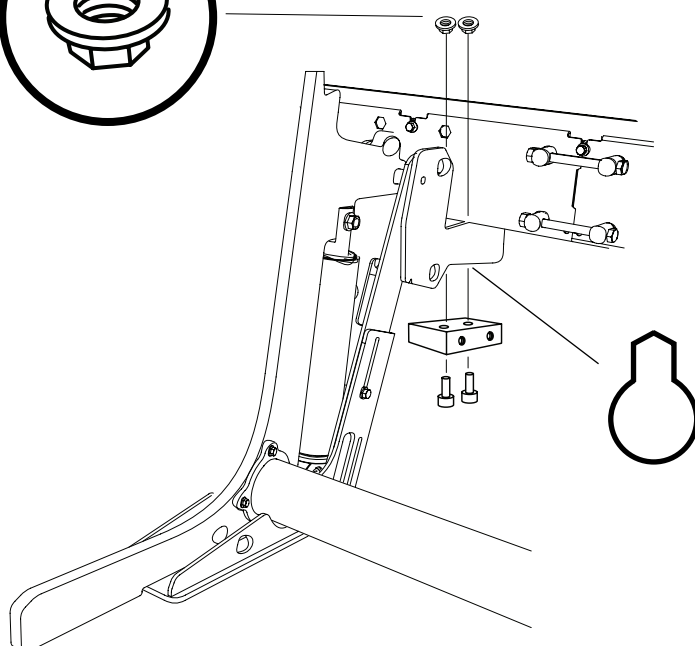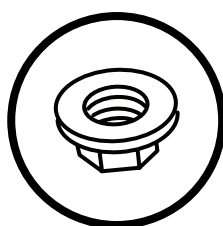



01-00560



To start the next step, the parts from the packages are needed. **01-00560**. We recommend laying out all fasteners on a tray or similar to make it easier to find screws.



To be able to mount new functions in the rails, it is important to release existing log beds in order to facilitate installation of the new functions.

1




4 x – M10x25



4 x – M10


2

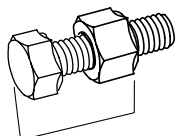

78,5mm



2 x – M8x20




1 x – M12x90 +M12



1 x – M12


3



2 x – M12x90 +M12





2 x – M12

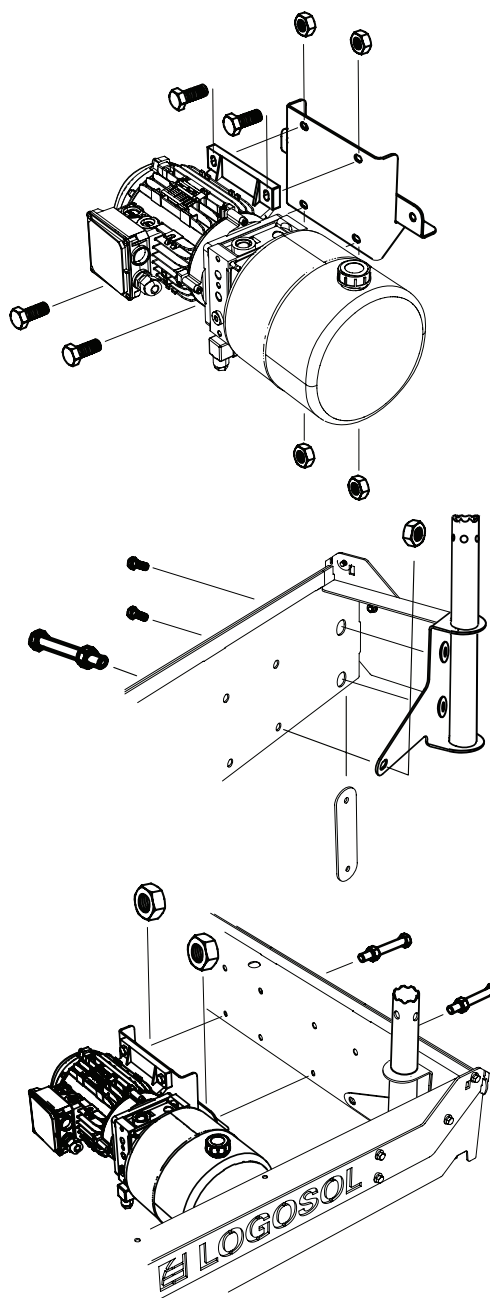



01-00718


1

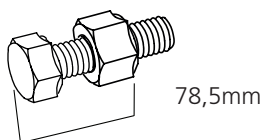

3 x – M12x100 +M12



2 x – M12

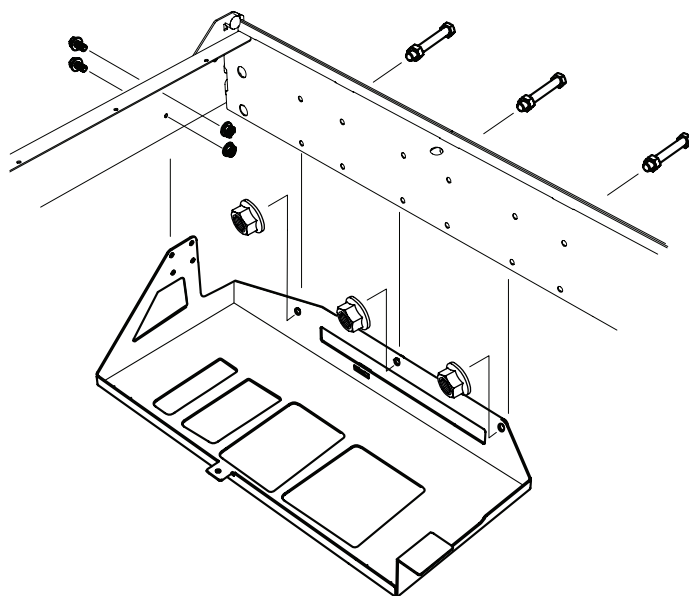


2



1 x – M8x20




1 x – M8

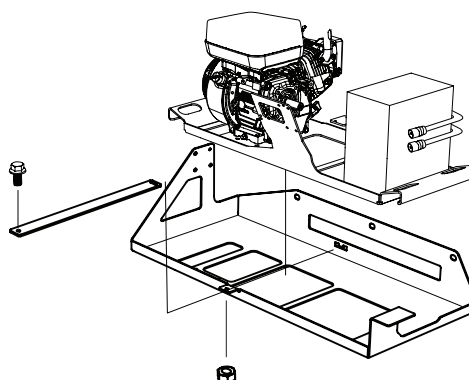

01-00560


1



4 x – M6x16



4 x – M6

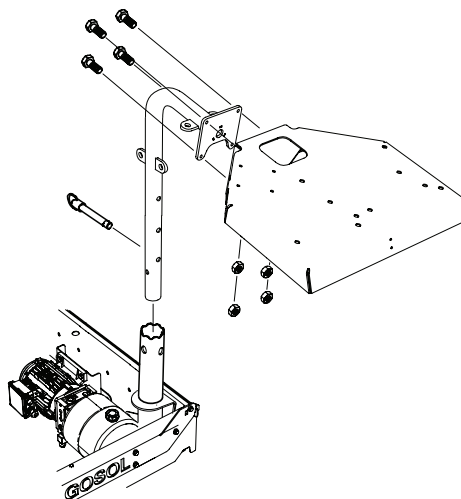

2




6 x – M8x14



4 x – M4





4 x – M4

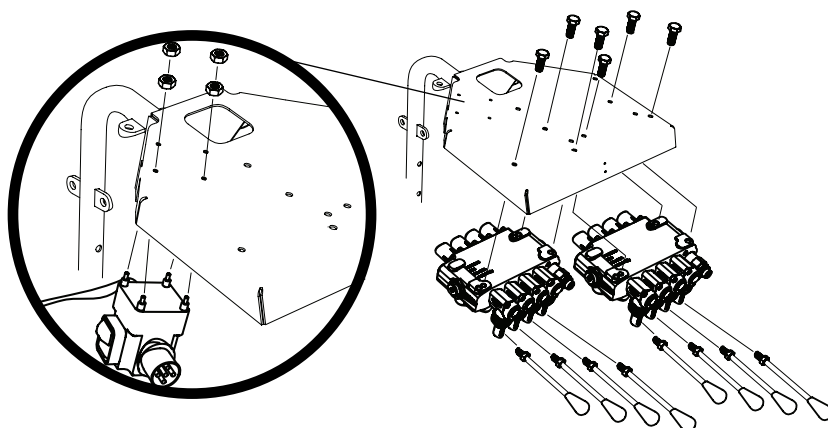

CONNECTION VALVE/ HYDRAULIC CYLINDERS


VALVE BLOCK 1

Four functions can be connected to the valve block. The functions are connected into the lines with connectors

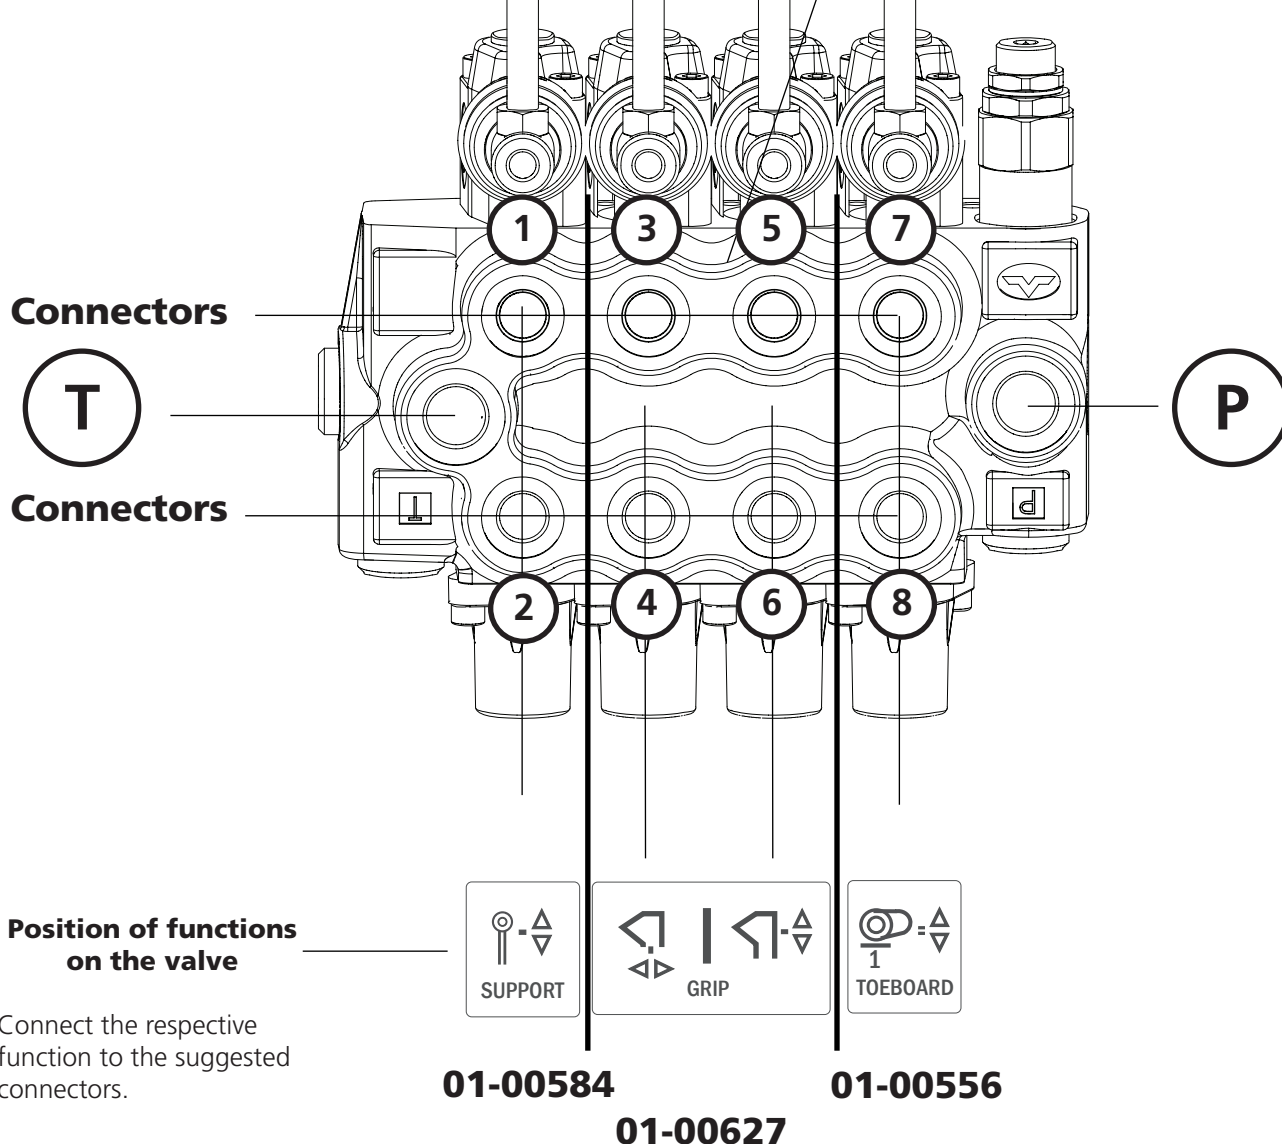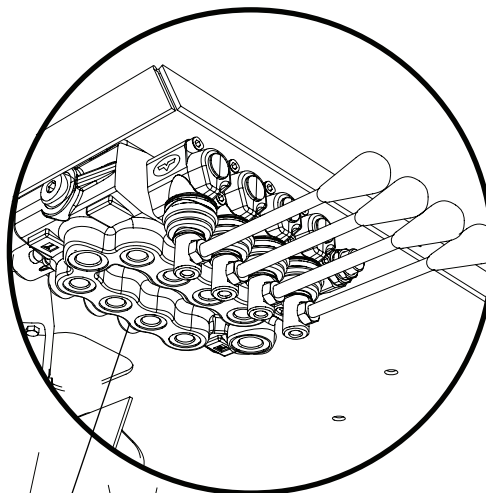

Connect the respective function to the suggested connectors.

2

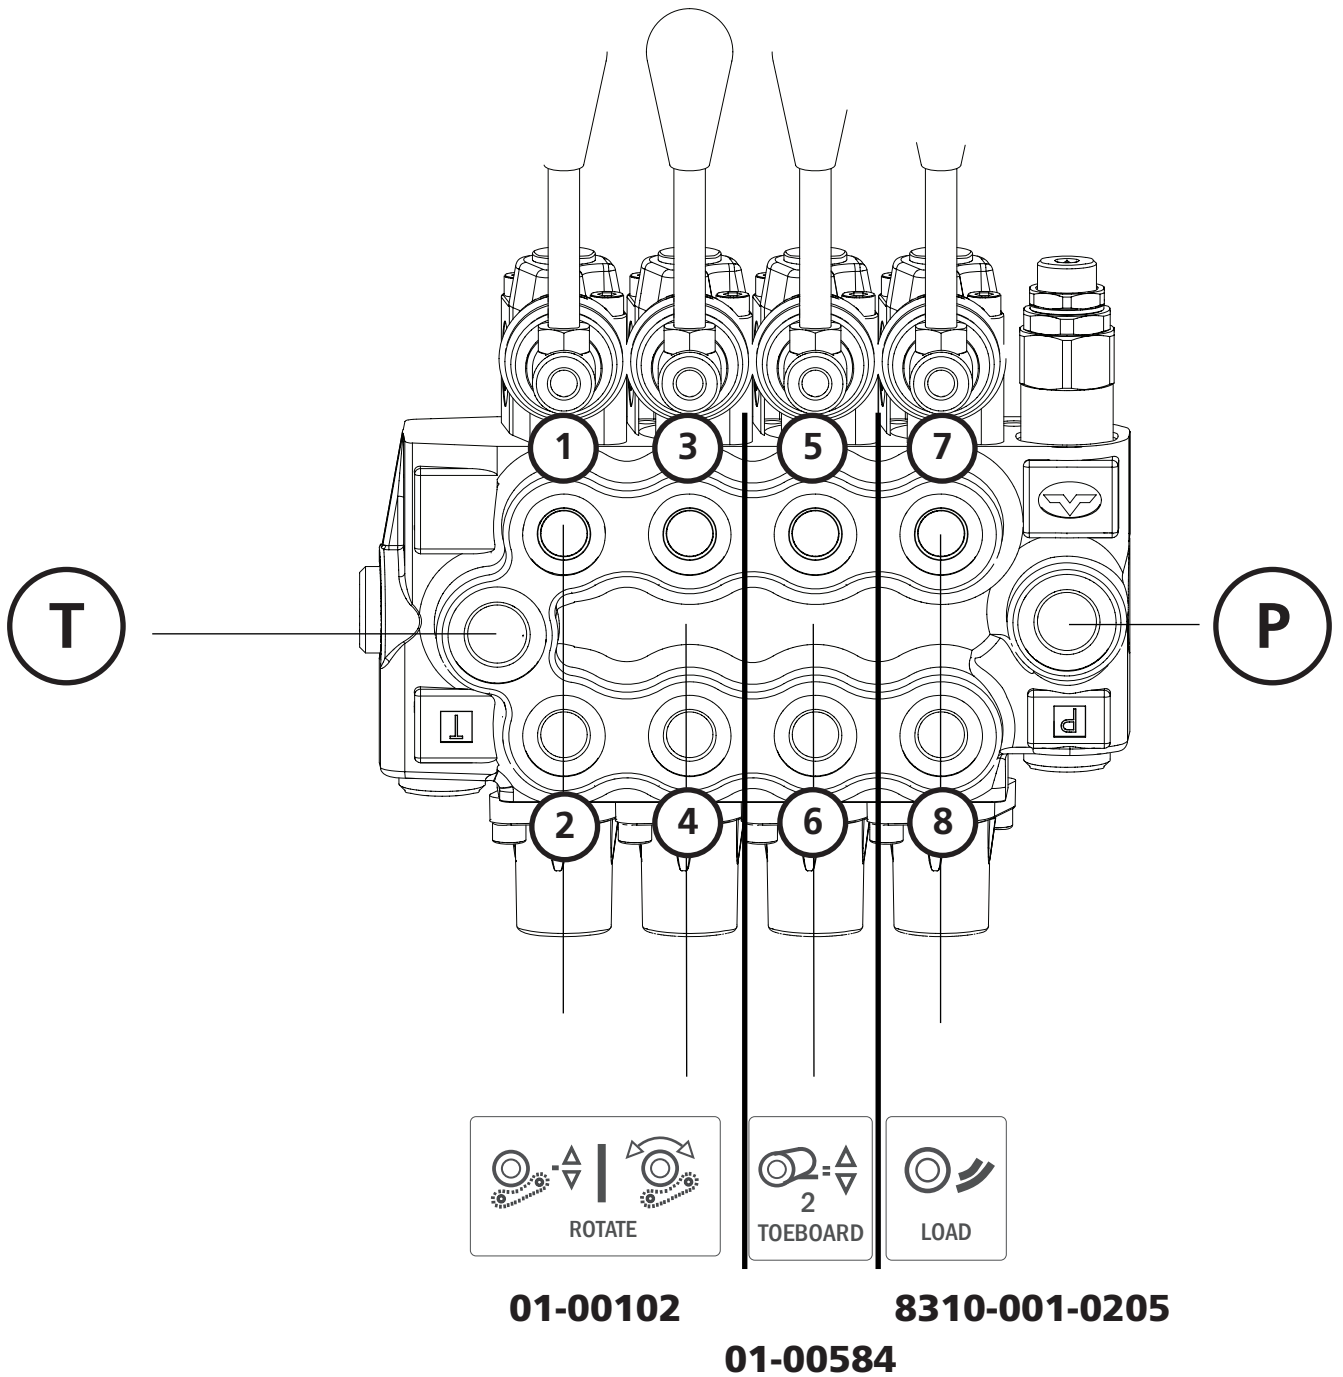





Parallel coupling valves

For valve 2 to function properly, it must be connected to valve 1. Connect the valves as shown in the illustration below. Check that all sealing surfaces are clean before tightening.


Carryover plug T:2

In order for the valve to function properly, a plug in the T:2 port needs to be removed. Unscrew the cover, remove the plug and replace the lid.

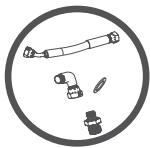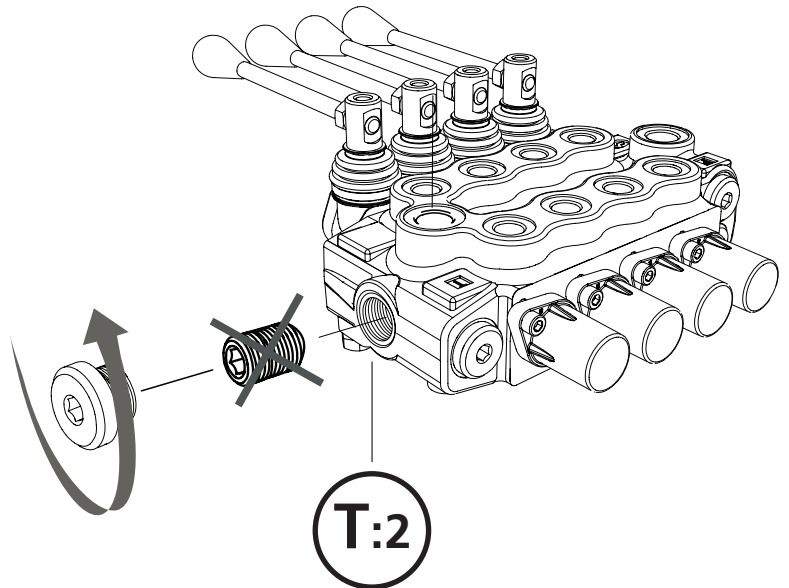

1x - 04-00439

1x - 04-00444

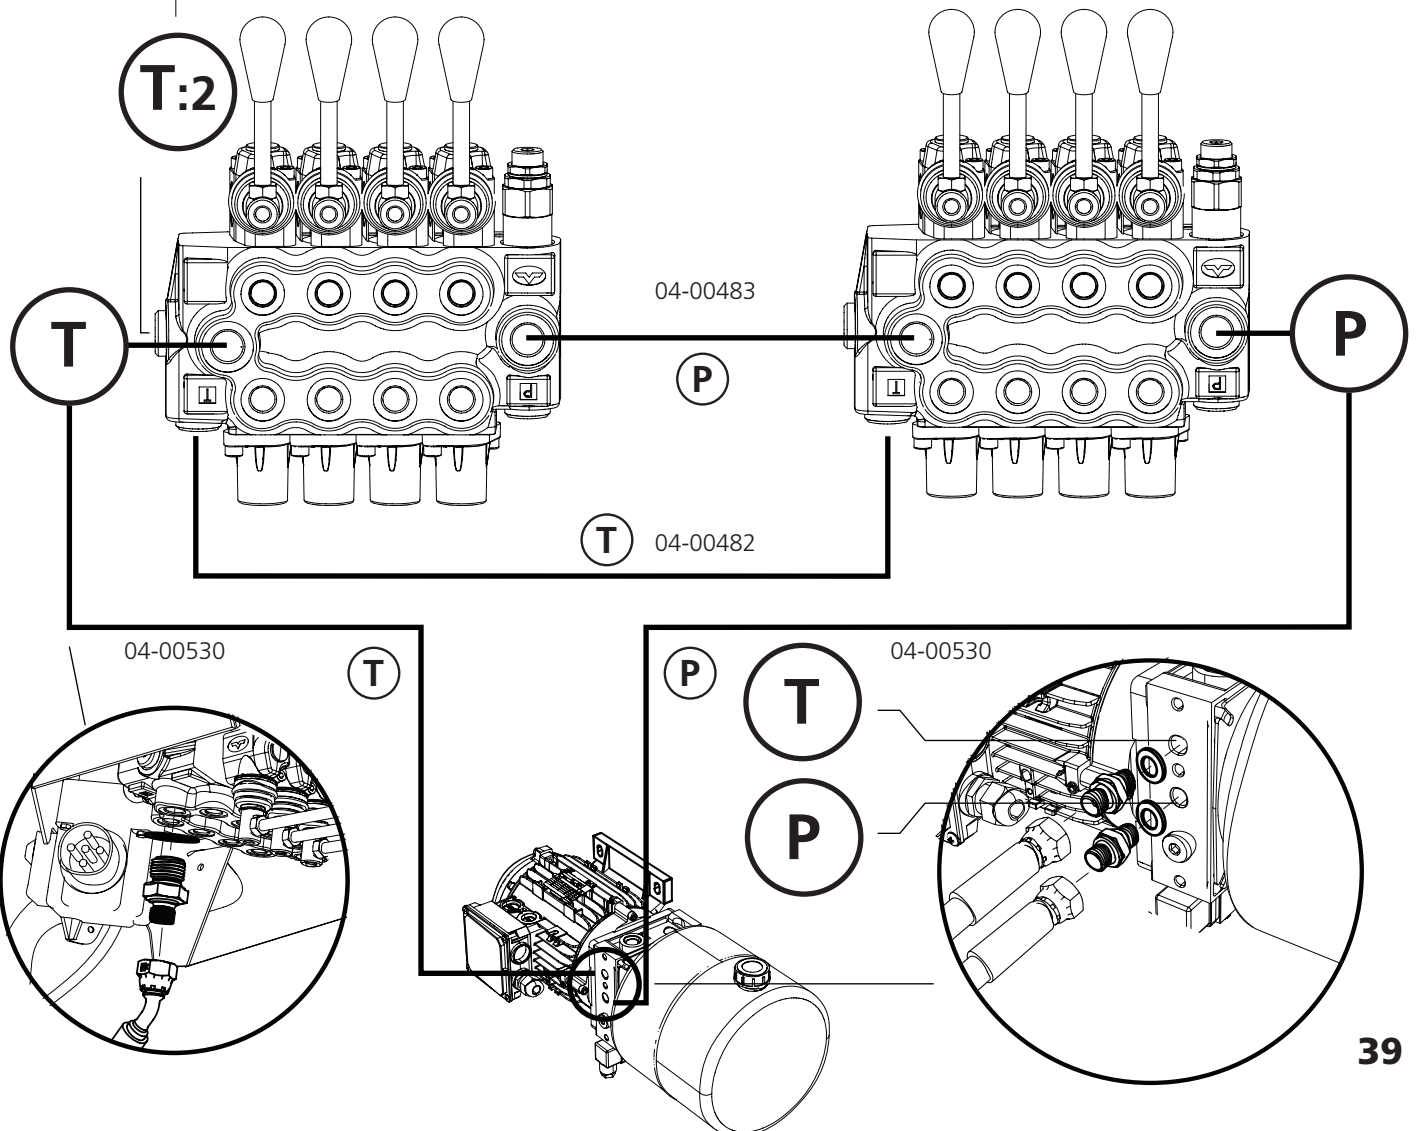





01-00718

Connection T/P petrol unit

The petrol unit has quick couplings on the P/T, mount the quick couplings on the pump and tank hoses and connect it into the petrol unit. The connection in the valves is the same for both units.

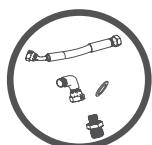


1x - 04-00574

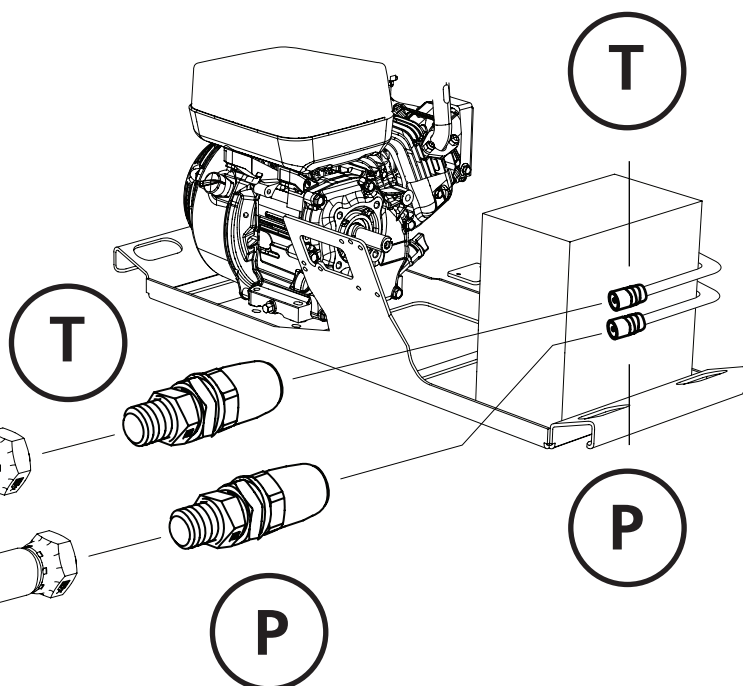

VALVE BLOCK


Hydraulic cylinders

To facilitate connection of the hydraulic cylinders, we define the connections as piston side and rod side.

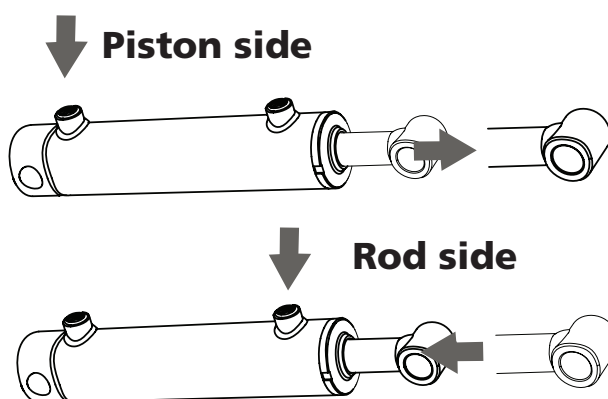

Connecting hydraulic cylinder

Logosol recommends connecting the piston connections from the hydraulic cylinders on the piston side of the valve block.

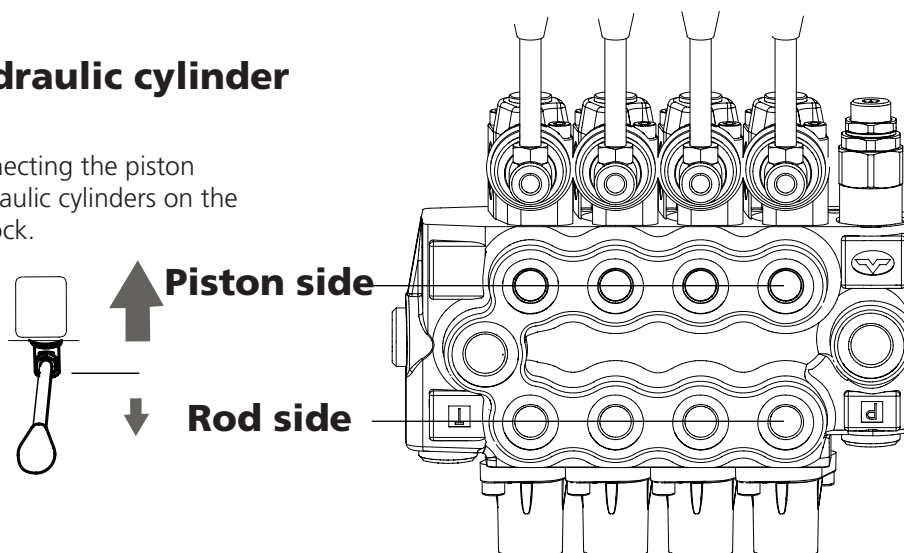

Connecting hydraulic cylinders

Fit the hoses onto the hydraulic cylinder. Note the location of the respective hose on the cylinder and valve. The hoses connected to the piston side of the cylinder shall be connected to the piston side of the valve. **(A)** Note the illustration showing the side of the sawmill into which the hoses should be installed for each function. **(B)**

Then perform the procedure on the other functions based on the respective instruction.

Double-check that all connections are properly tightened before starting work on the first start-up of the machine.



Warning! Cuts. Never handle pressurized hydraulic hoses, oil from a pressurized hose can penetrate the skin and cause serious injury.




Do not lift or handle hydraulic equipment connected to the hoses or couplings.




Handle hydraulic hoses and couplings carefully during assembly and maintenance work. Avoid sharp bends on hydraulic hoses. Sharp bends damage the hoses and increase the risk of breakdown.

Connection angle


the illustration shows the connection angle of the hoses for each function in top view.

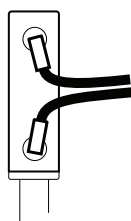

01-00584

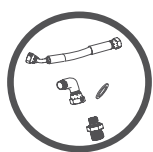


1x - 04-00539

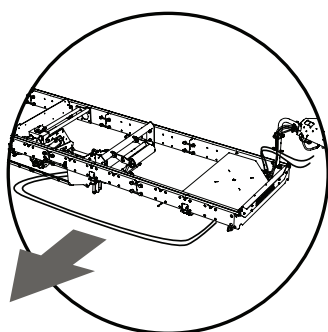

Position of hydraulic hose

The illustration shows the side of the saw bed to which the hoses should be installed for each function.

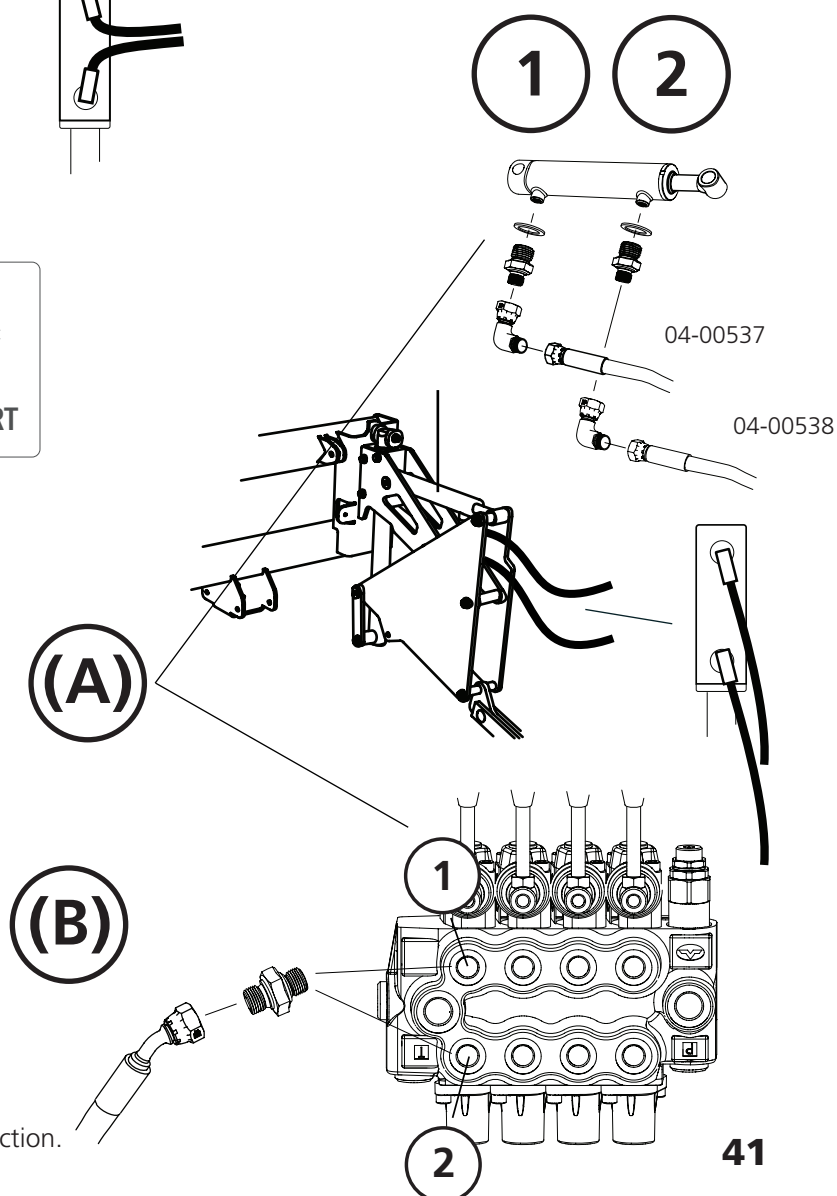






01-00627







1x - 04-00441

1x - 04-00442

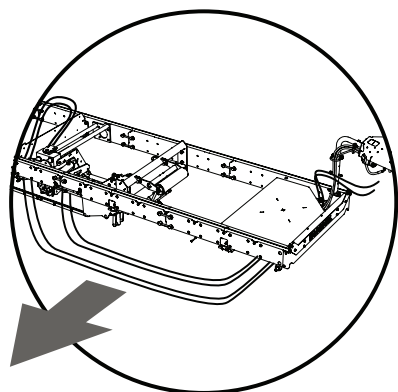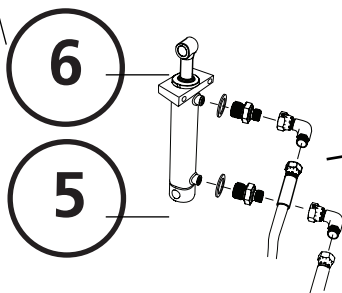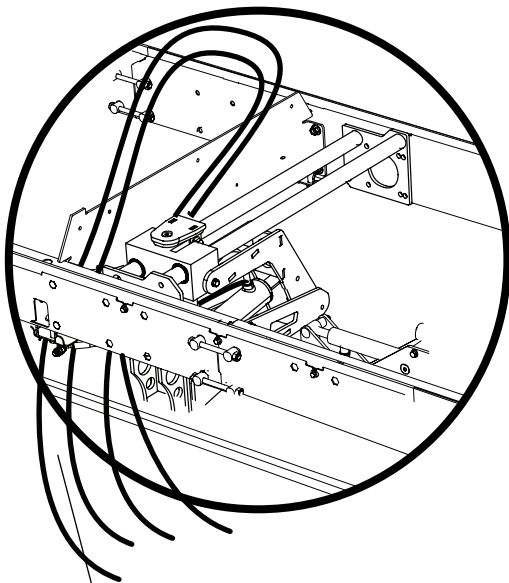


04-00535



04-00536

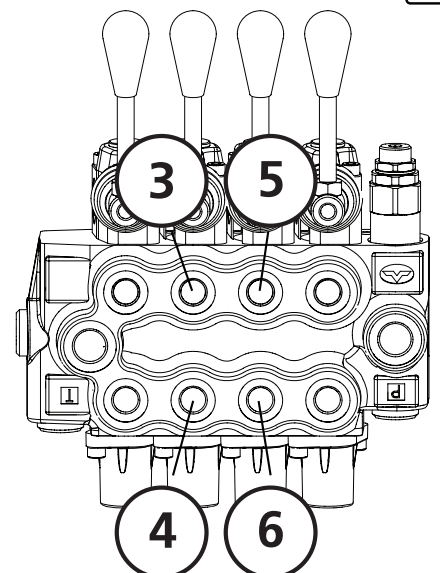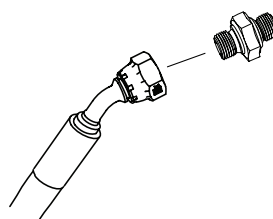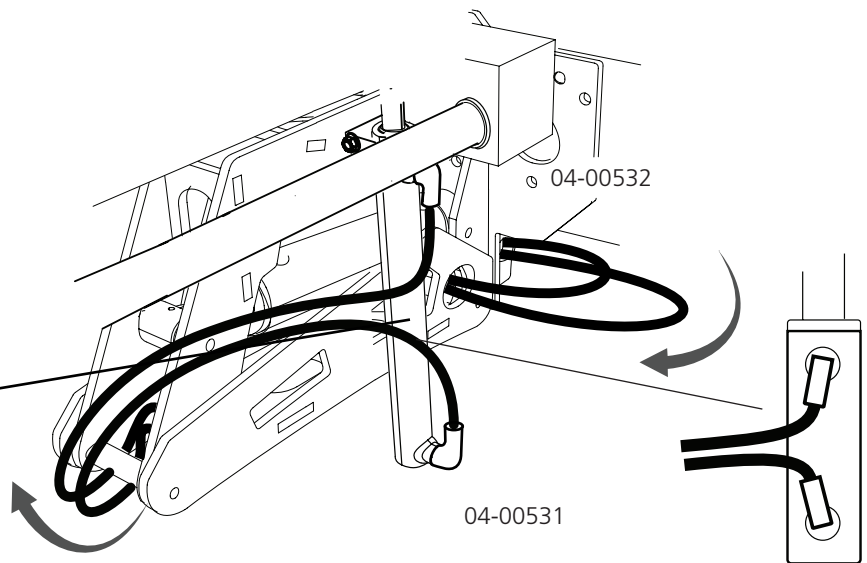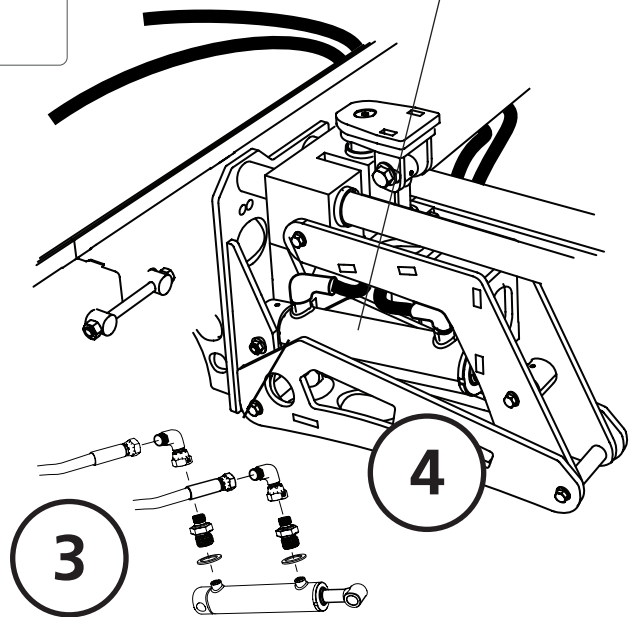


01-00584

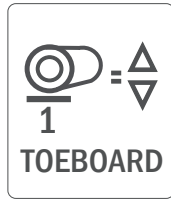



04-00440

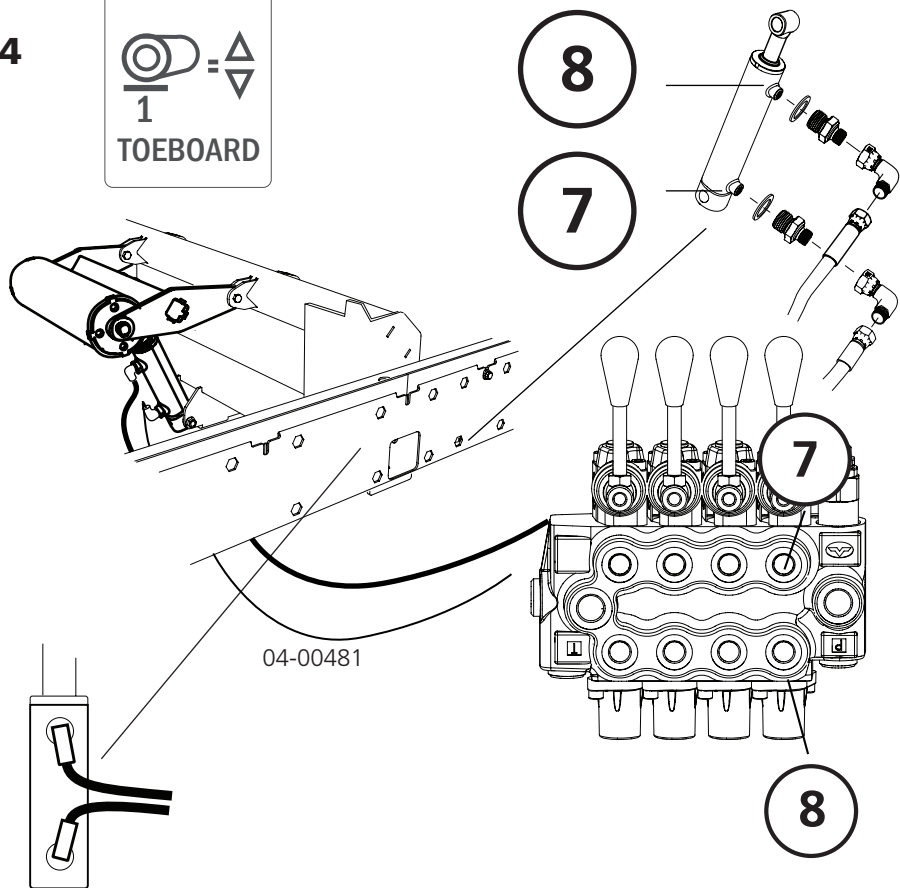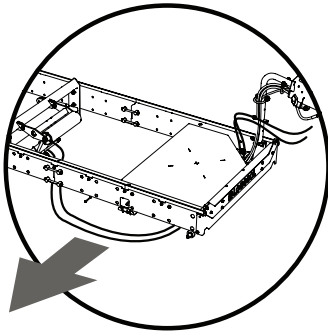

01-00102

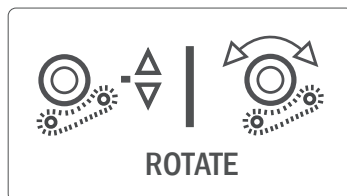

04-00474
04-00477

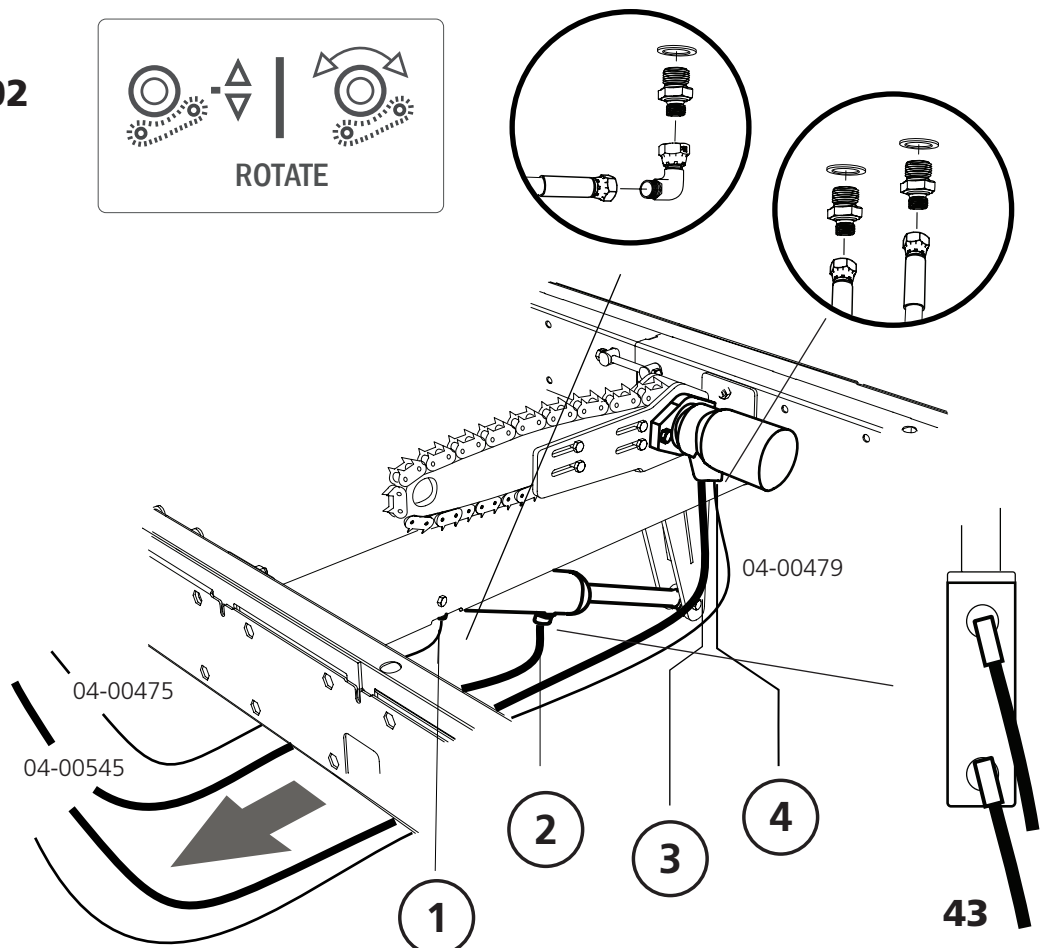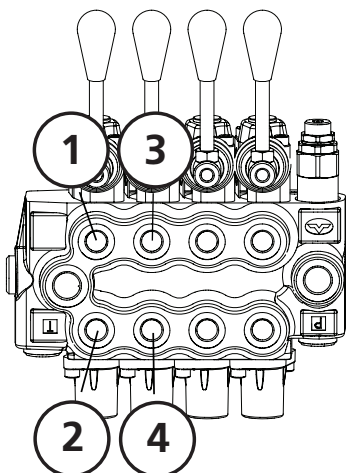







01-00584




04-00478

6



5

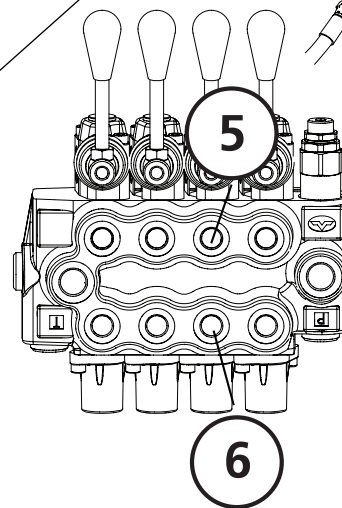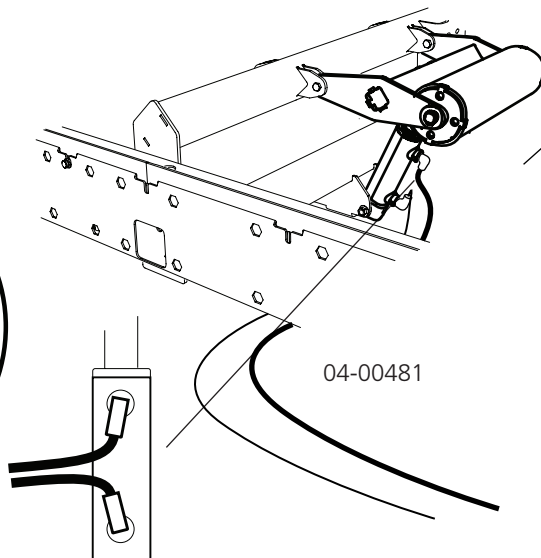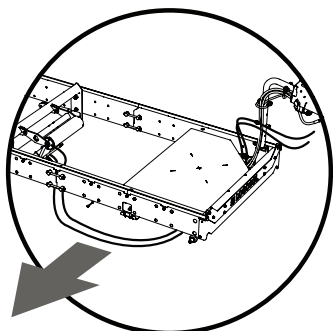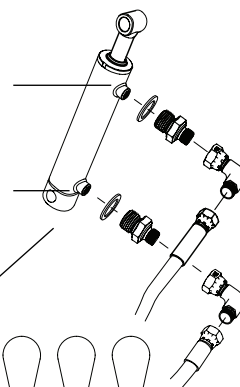

01-00604

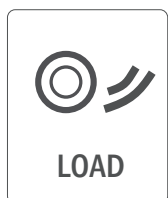

04-00468

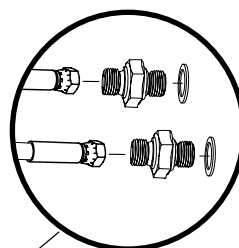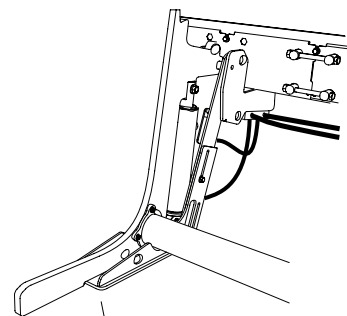

04-00472




04-00471

04-00470

04-00470

8

7

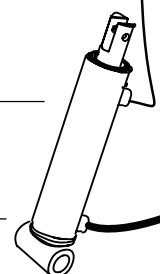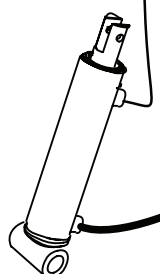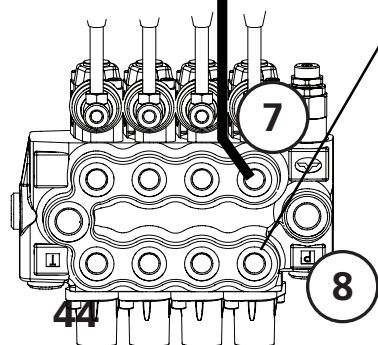

HYDRAULIC HOSE


Securing hydraulic hose

The hydraulic hoses shall be secured beneath the log bed on its route between the functions and the operating position. Secure the hoses with the brackets supplied. Be sure to stretch the hoses, try to minimize the amount of hose hanging between the brackets and ensure that they are not pinched so that the brackets cause wear to the hoses.

At the operating position, hang up and secure the excess hose beneath the work platform with the straps. Assembly of the platform is on the next page.

Fit the cable cover over the hoses on the part that is below the valves.




The hydraulic hoses shall be secured beneath the log bed on its route between the functions and the operating position. Using the brackets supplied, be sure to stretch the hoses so that they do not hang down between the brackets and ensure that they are not pinched so that the brackets cause wear to the hoses.



10x – M10x80





10 x – M10

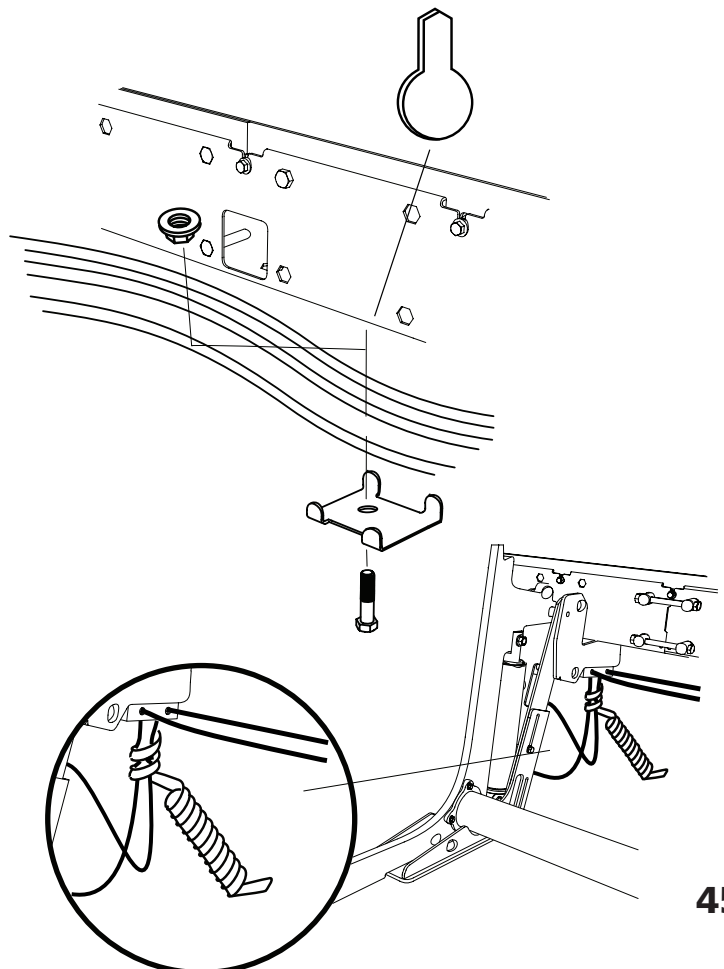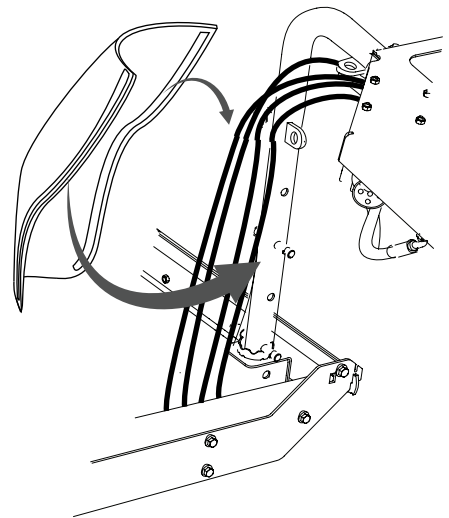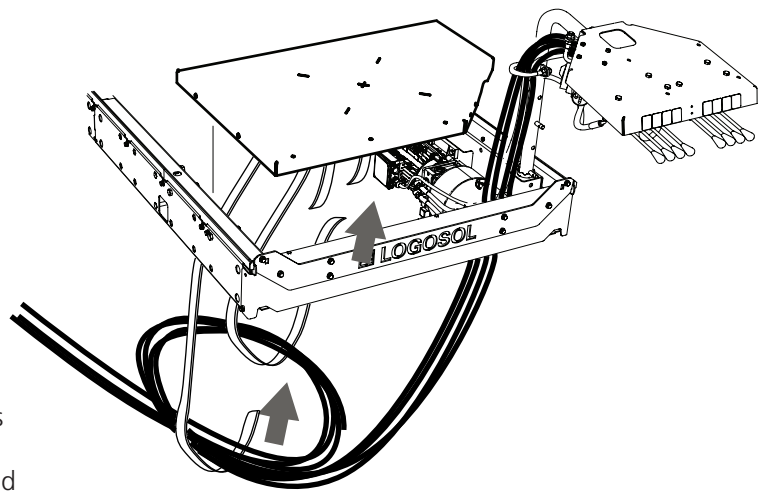

Operating position


The hydraulic hoses shall be secured on their route up to the operating position. Using the brackets supplied, be sure to collect the hoses in a neat bundle and also ensure that they are not pinched so that the brackets cause wear to the hoses. When the hose brackets are mounted, proceed to assemble the floor above the hydraulic unit.

-  2x – M12x25
-  2x – M12x90
-  4 x – M2
-  4 x – M12x90 + M12
-  4 x – M12

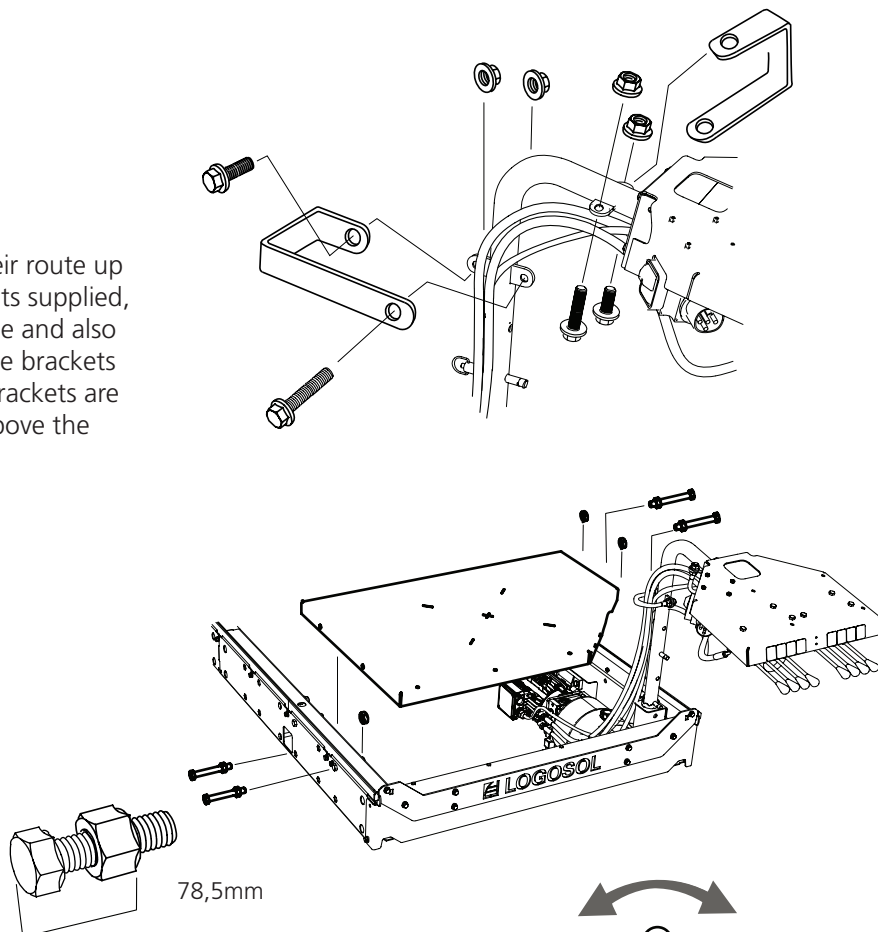


Adjusting log support

The angle of the log supports is adjustable. The goal is to achieve a 90 degree angular ratio in relation to the log bed. Undo the screws that hold the log supports in the bed. Note that the upper screw towards the centre of the rail should only be very slightly loosened. Then use the knob to adjust the angle. When the angular ratio is 90 degrees, tighten the fastening screws and the knob.

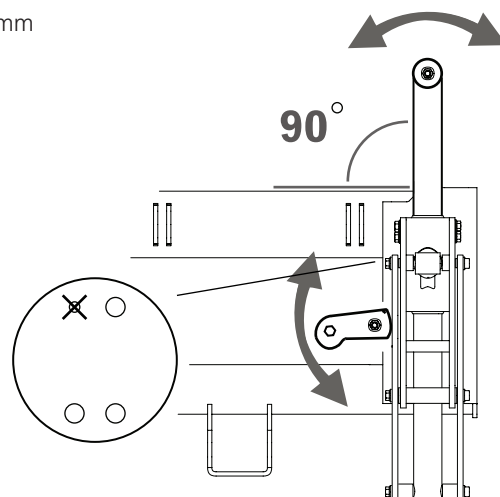


Adjusting log bed

If, after installation, the log supports are at different heights in relation to each other, the log beds must be adjusted. It is the length of the linkage that determines the height of the log supports. To adjust, undo the log beds' screw joints and adjust the beds in the oblong grooves so that the log supports end up at the same level. Then re-tighten the screw joints.

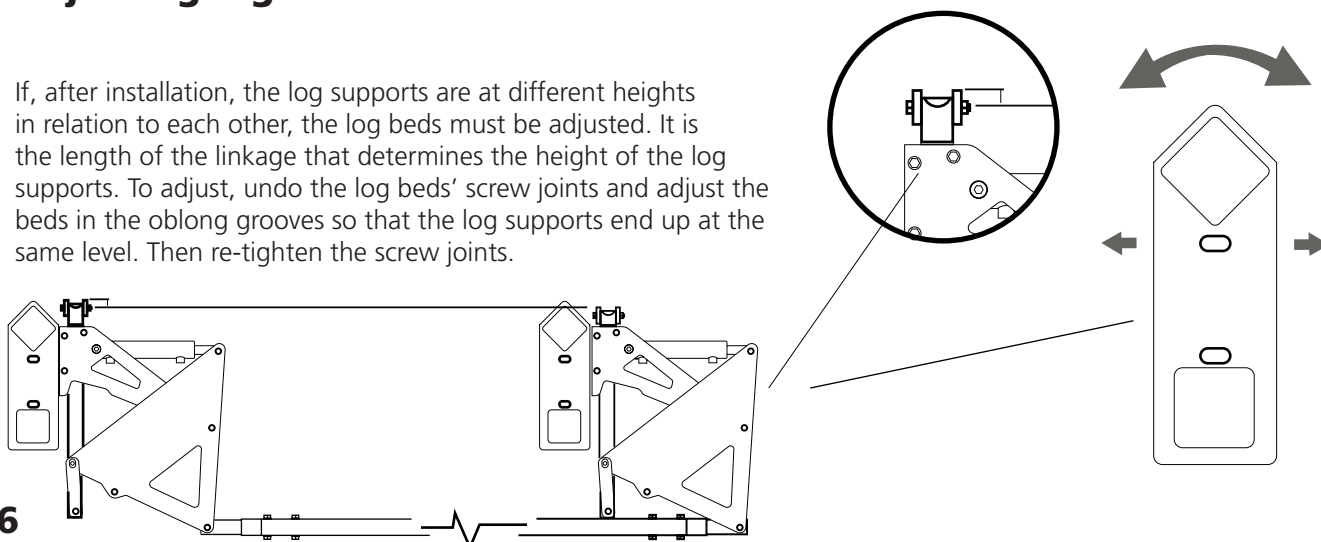


ADJUSTMENT

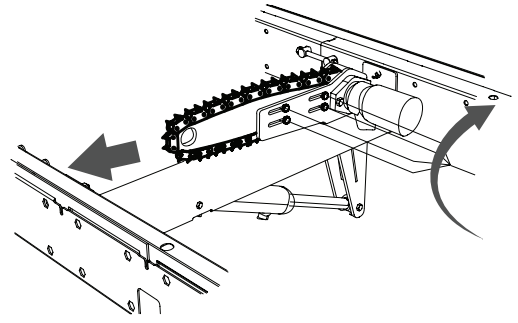


Adjusting chain tension

Adjust the chain tension by undoing the screws holding the guide bar, then tighten up the chain using a breaking bar. Then re-tighten the screws.

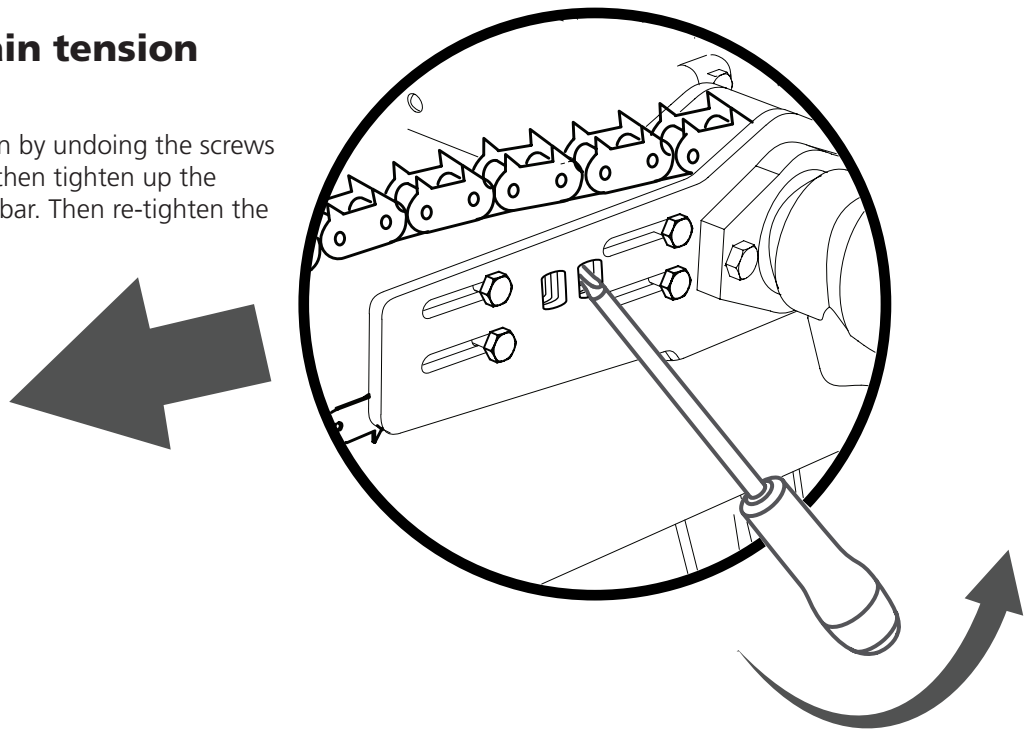

Adjusting log loader foot

In order for the log loader to work, the foot must be adjusted so that it provides support against the ground. Undo the screws and drop the foot down, check the angle of the leg against the marking, and then secure the foot.

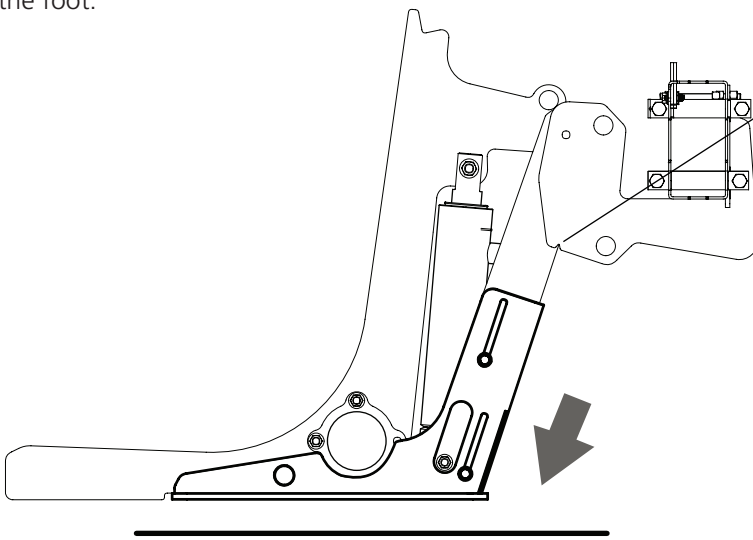

When the leg touches the lowest point of the marking, the leg is at the right angle.

FIRST START-UP



Warning! Fire risk. Hydraulic oil is flammable, do not perform hot work in the vicinity of hydraulic components and equipment.



Warning! Pinch risk. Do not remain within the work area when the hydraulic cylinders are loaded.



Warning! Cuts. Never handle pressurized hydraulic hoses, oil from a pressurized hose can penetrate the skin and cause serious injury.



Warning! Burn injuries. Allow the equipment to cool down before working with hydraulic units and hoses. The hydraulic oil can reach high temperatures during use.



Handle hydraulic hoses and couplings carefully during assembly and maintenance work. Avoid sharp bends on hydraulic hoses. Sharp bends damage the hoses and increase the risk of breakdown.



Do not lift or handle hydraulic equipment connected to the hoses or couplings.



Always use hydraulic oil prescribed by Logosol when working with the equipment.



Always wipe up any spillage of hydraulic oil from the product and the working area. Residual hydraulic oil constitutes a slip hazard to users.



Always use absorbent cloths beneath the equipment when working with the machine.


First start-up

When all assembly and connections are completed, check that all couplings on the machine are properly tightened. Then fill the tank with oil.

Then start the hydraulic pump and run one function at a time, it may take a little while for the oil to fill the system and force the air out. Place absorbent cloth beneath the couplings for each function that is started up. Check the tightness of the couplings.


It might be necessary to refill with oil several times before there is oil in the entire system. Be careful not to run the oil tank empty while filling the hydraulic hoses. If the tank becomes empty, a lot of air enters the system and it then takes longer than necessary before it is forced out.

If the pump is not activated in connection with start-up, check that the pump's coupling is not phase-inverted.

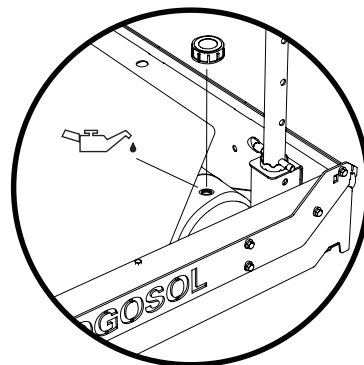











Hydraulic oil

Hydraulic oil:
(ISO VG 32)









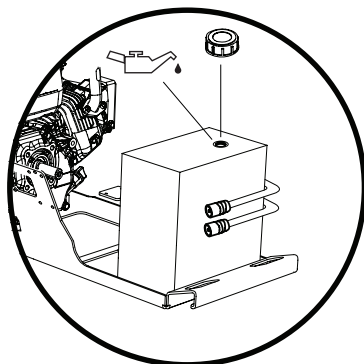


USE

If the functions have been connected as described, the function shall be as in the illustrations below.

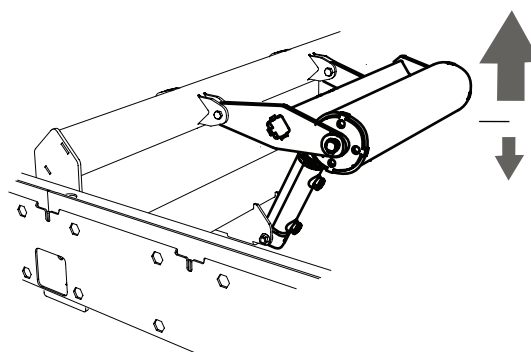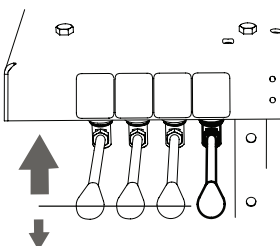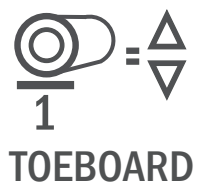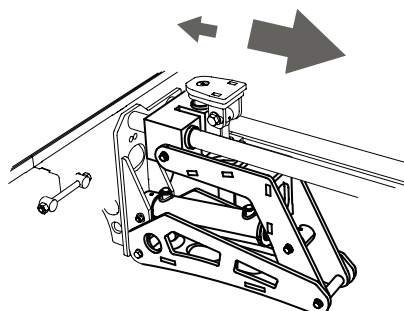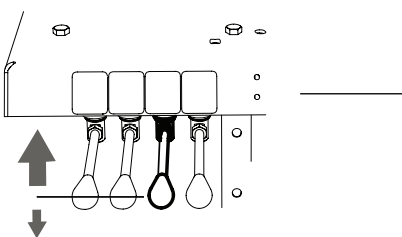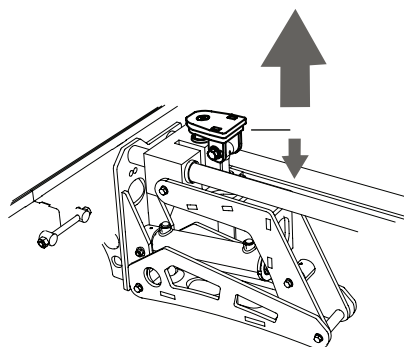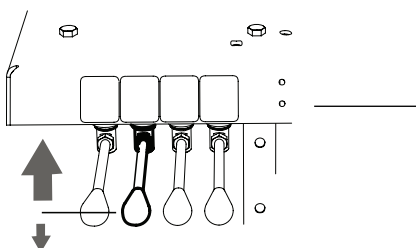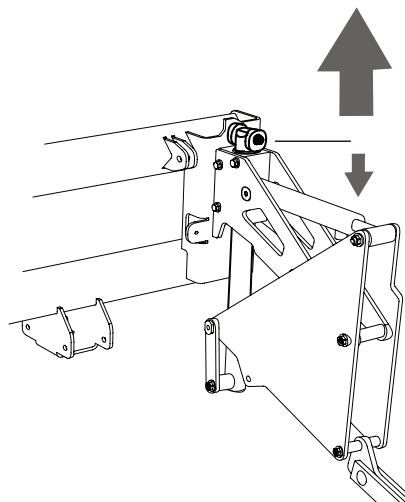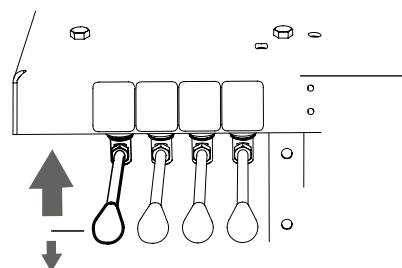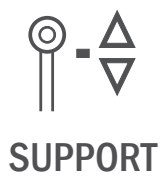

USE

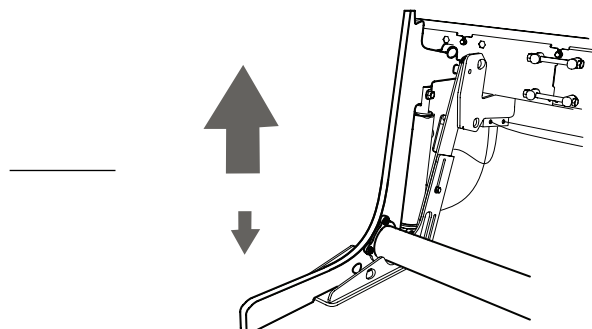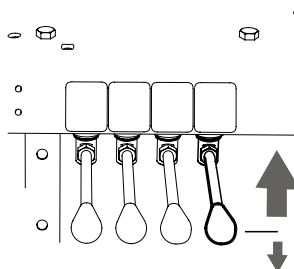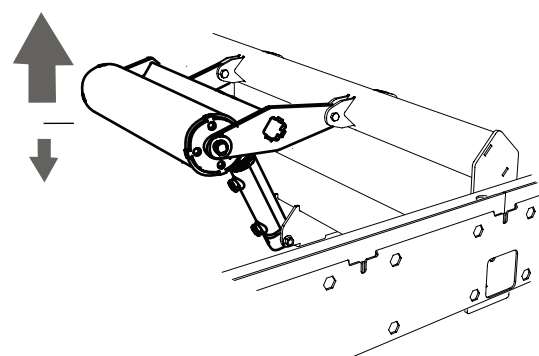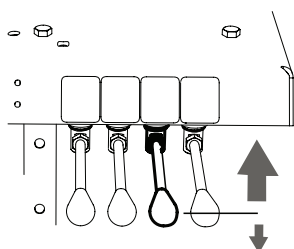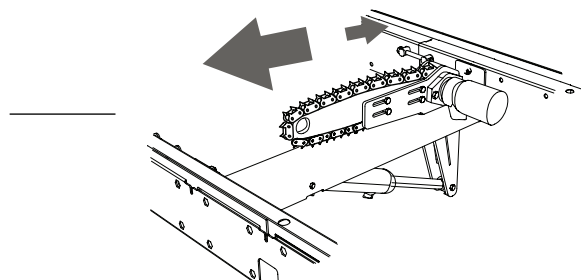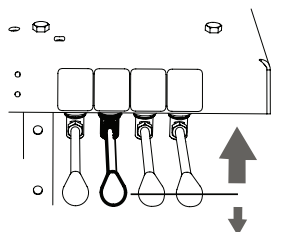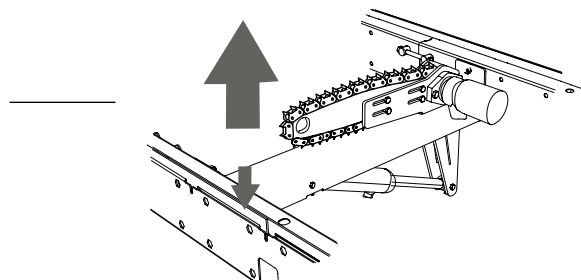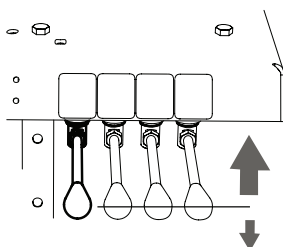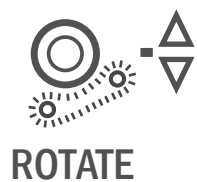

TRANSPORT

Transporting the machine


If the machine has a trailer kit and is to be transported, check that everything on the machine is secure. The following hydraulic functions must be placed in transport position before transportation. Before transportation, make sure that there will not be any collisions between the functions.

Transport position for the log loader

The log loaders must be placed in the transport position before the sawmill can be transported. Start by putting the loaders in their top position, secure the lifting arms (1).


Then lift the log loader foot using the hydraulic lever. Then secure the foot in the log lift arm (2), note that the Foot needs to be in its top position in the adjusting grooves.

! Note that the saw head's blade tensioning arm must be positioned so that the T-handle is parallel to the rails so as not to collide with the log loader in transport position.

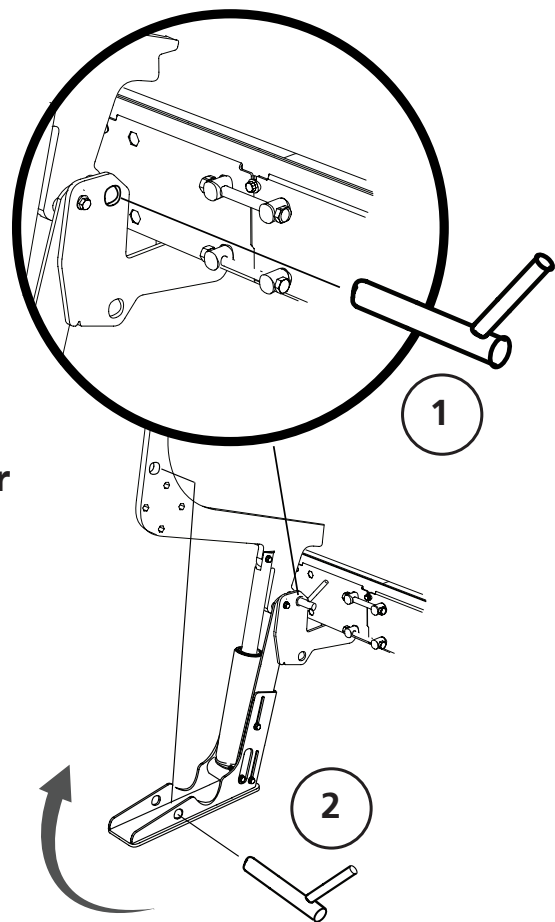


Transport position for the log supports

The log supports must be placed in the top position during transport, otherwise there is insufficient ground clearance and there is a risk of damaging the machine.

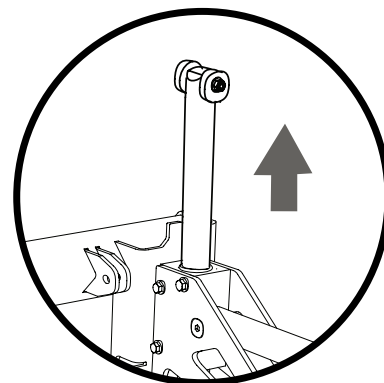


Transport position of log clamp

The log clamp must be placed in its innermost position before transport in order to maximise ground clearance.

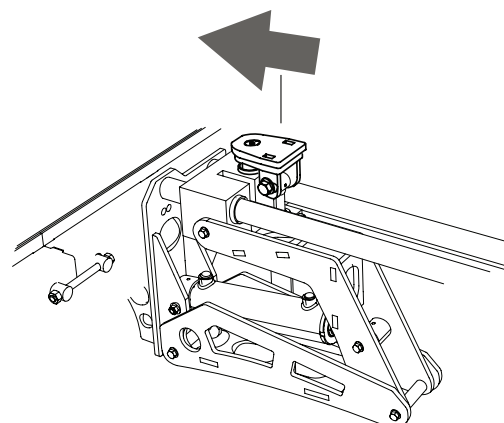



01-00627

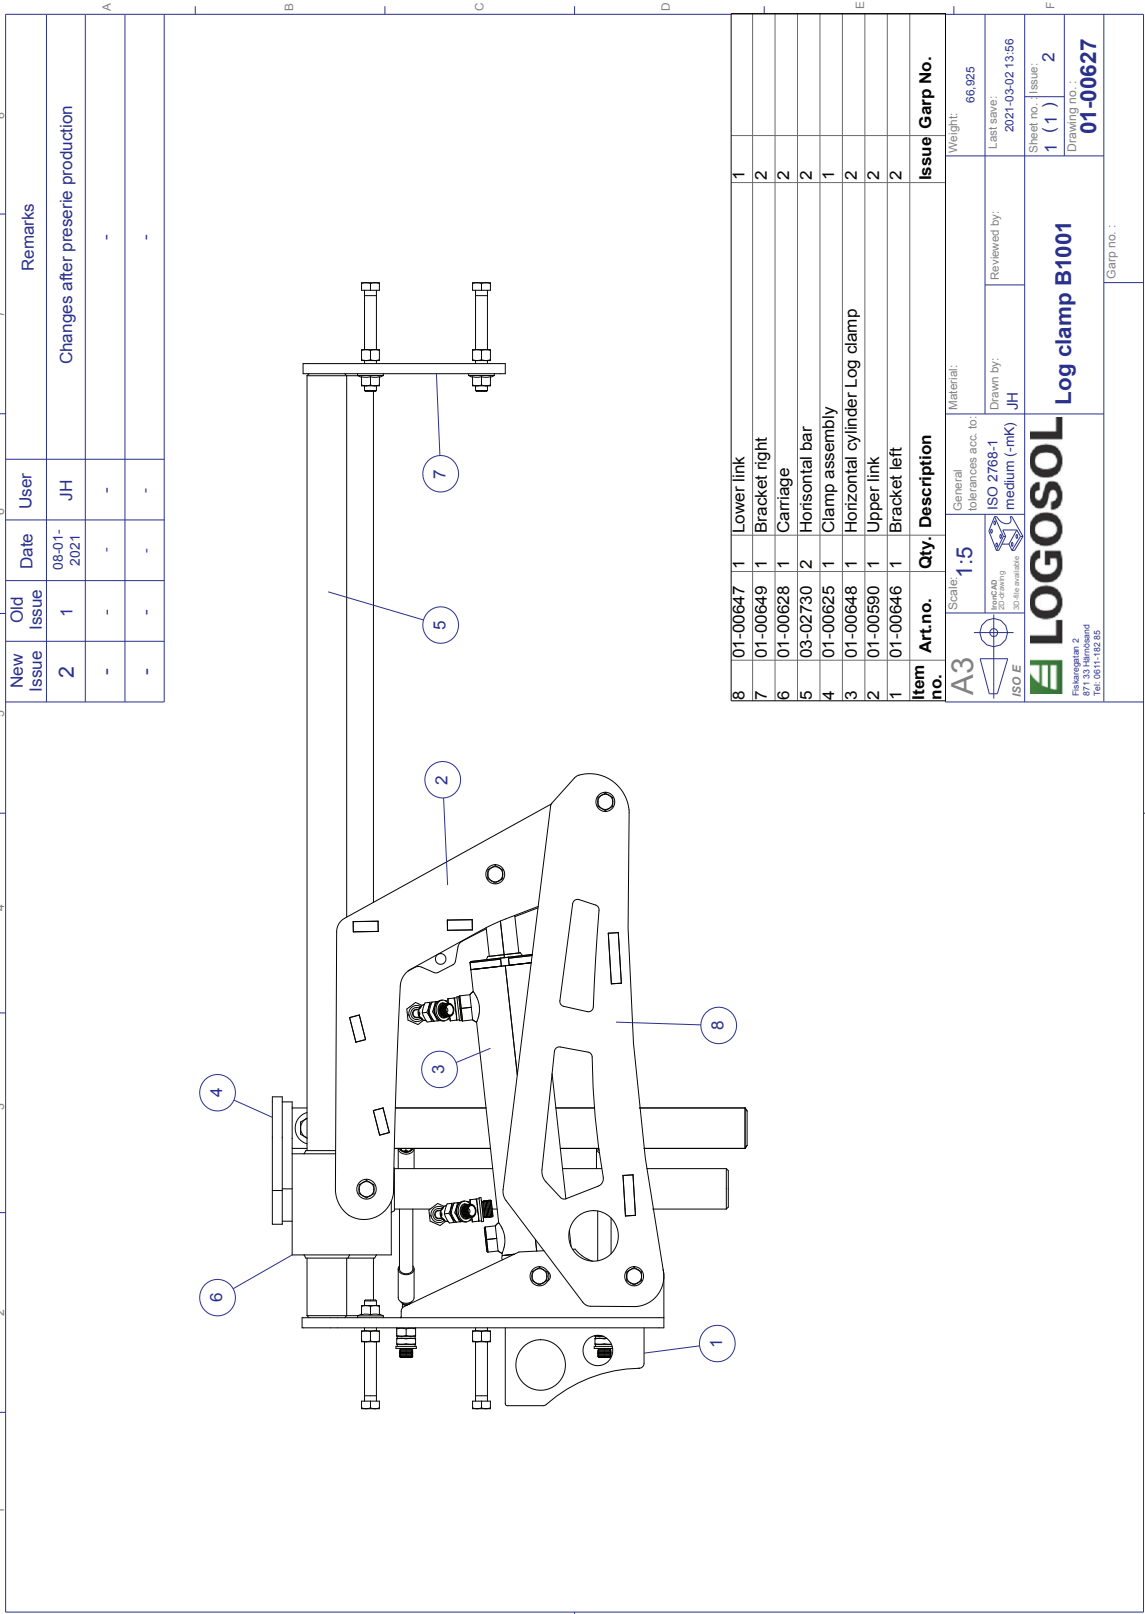

Item no.	Art.no.	Qty.	Description	Issue	Garp No.
8	01-00647	1	Lower link	1	
7	01-00649	1	Bracket right	2	
6	01-00628	1	Carriage	2	
5	03-02730	2	Horizontal bar	2	
4	01-00625	1	Clamp assembly	1	
3	01-00648	1	Horizontal cylinder Log clamp	2	
2	01-00590	1	Upper link	2	
1	01-00646	1	Bracket left	2	

A3	Scale: 1:5	General tolerances acc. to: ISO 2768-1 medium (-mk)	Material: 66.925
ISO E	Drawn by: JH	Reviewed by:	Last save: 2021-03-02 13:56
LOGOSOL	Sheet no: 1 (1)	Issue: 2	Sheet no: 1 (1)
Fransgårdens 2	Log clamp B1001		Drawing no: 01-00627
161 0511-182 85	Garp no.:		



01-00556

New Issue		Old Issue	Date	User	Remarks
-		-	-	-	-
-		-	-	-	-
-		-	-	-	-

14 04-00440		1	Toe board	2
13 M6S M10x35		2	Sexkantsskruv	1
12 03-02926		2	Spacer 16x2 8	1
11 M6S M10x70		1	Sexkantsskruv	1
10 M6MF M10		4	Flansmutter	1
9 M6S M10x100		1	Sexkantsskruv	2
8 03-02878		1	Ø25x7	2
7 03-02898		1	Ø25x7	2
6 04-00428		1	Jotek 702/1 HYDRAULCYLINDER DUBBELVERKANDE 21	2
5		2	Retaining ring SGA 20	1
4 BRB 20		2	Planbricka	1
3 02-00483		1	Toeboard arm	2
2 03-03041		1	Axle Ø20x540	1
1 02-00485		1	Log roller	1


ite	Art.no.	Qty	Description	Issu
m	n			e
A3	Scale: 1:5	General tolerances acc. to ISO 2768-1	Material: 12.296	
ISO E	ISO 2768-1	medium (-mk)	Drawn by: 2021-03-22 13:22	
LOGOSOL			Hydraulic toeboard 1	
Fiskarsvägen 2 871 33 Hämmeå Tel 0811-162 88			Sheet no. 1 (1)	Issue: 1
			Drawing no. 01-00673	
			Gap no.:	

Exploded view

Assembled view



01-00584

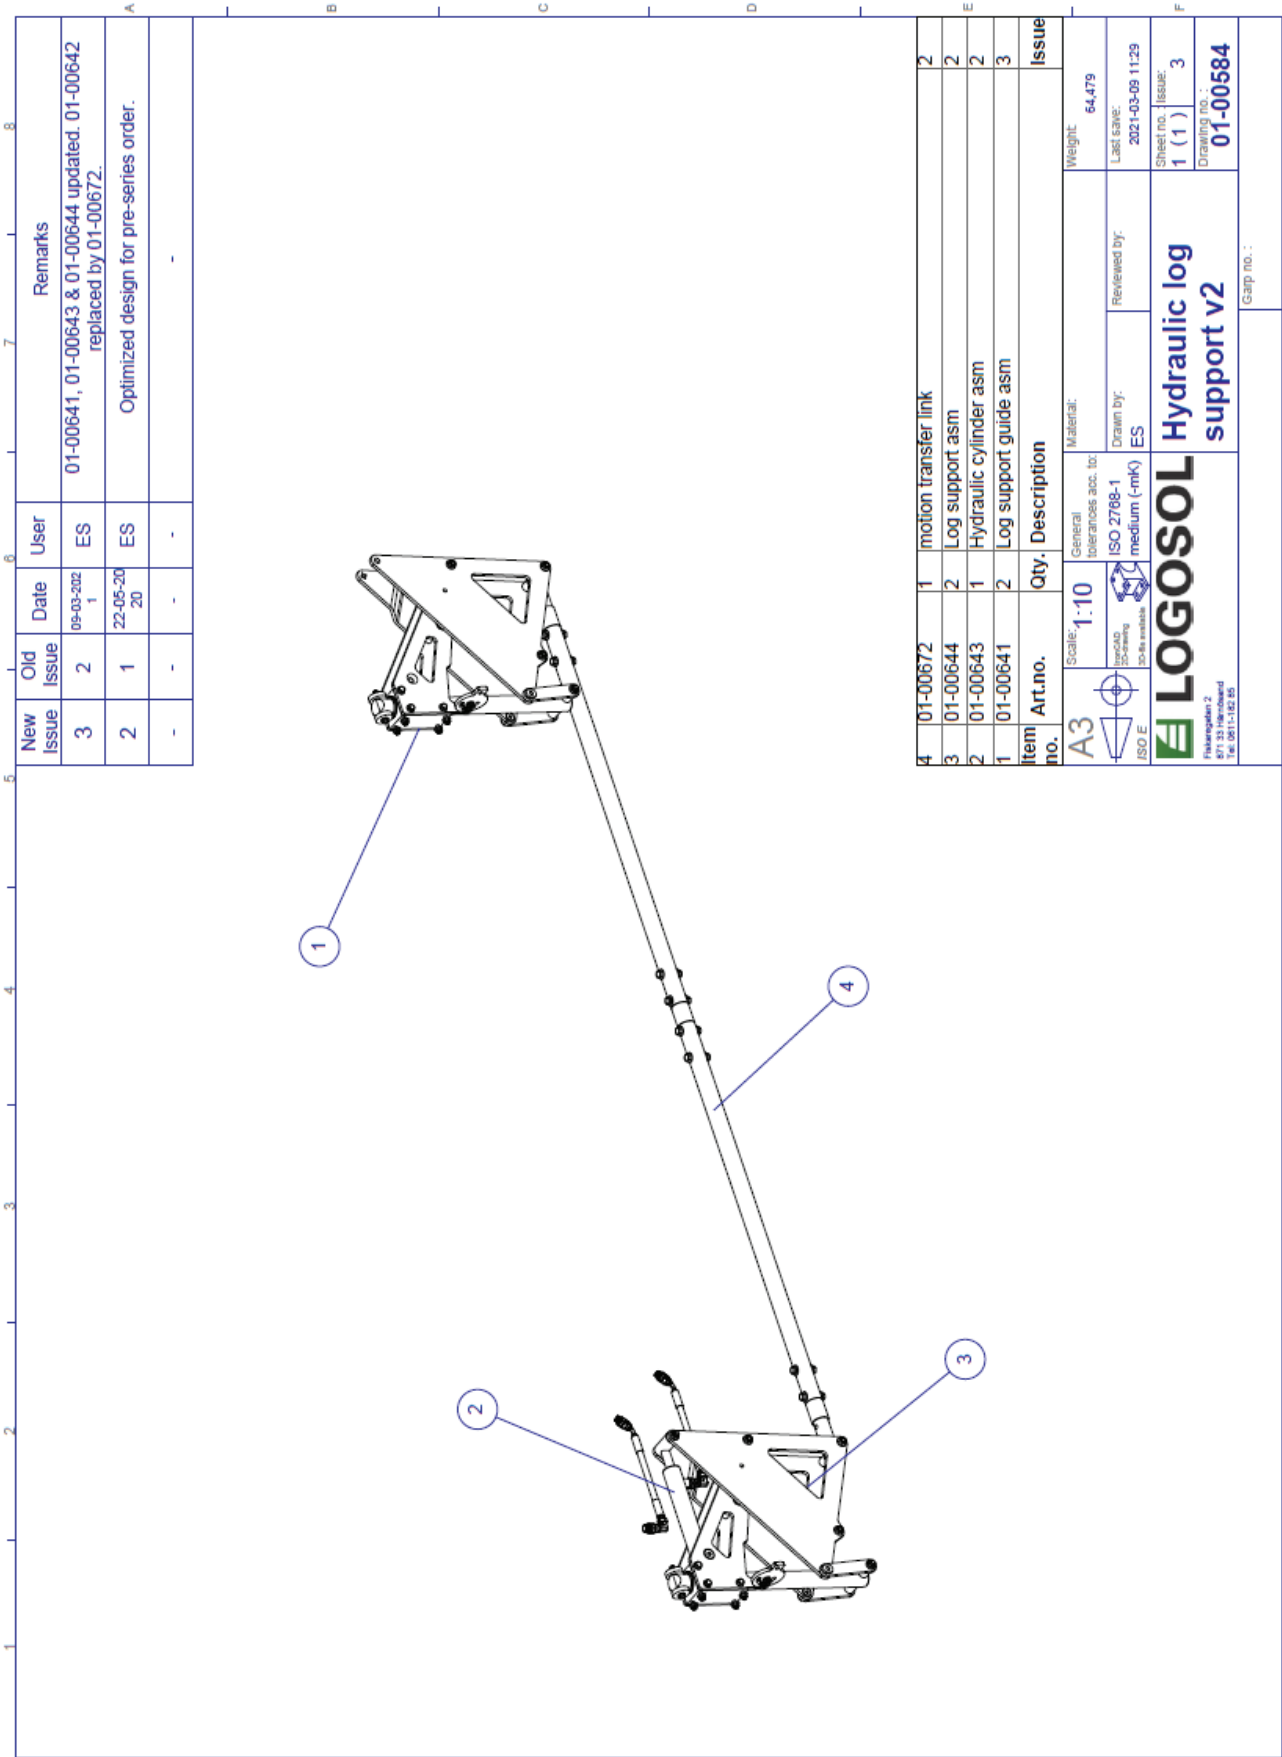


New Issue	Old Issue	Date	User	Remarks
3	2	05-03-2021	ES	01-00641, 01-00643 & 01-00644 updated, 01-00642 replaced by 01-00672.
2	1	22-05-2020	ES	Optimized design for pre-series order.
-	-	-	-	-

4	01-00672	1	motion transfer link	2
3	01-00644	2	Log support asm	2
2	01-00643	1	Hydraulic cylinder asm	2
1	01-00641	2	Log support guide asm	3
Item no.	Art.no.	Qty.	Description	Issue
A3 Scale: 1:10 General tolerances acc. to: ISO 2768-1 medium (-mK) Material: 64.479 Weight: 64.479				
Drawn by: ES Reviewed by:				Last save: 2021-03-09 11:29 Sheet no. 1 (1) Issue: 3
Hydraulic log support v2 Drawing no.: 01-00584				
Filipvangheluwe 3 87133 Heteren Nederland Tel: 0611-182 85 Garp no.:				



01-00644

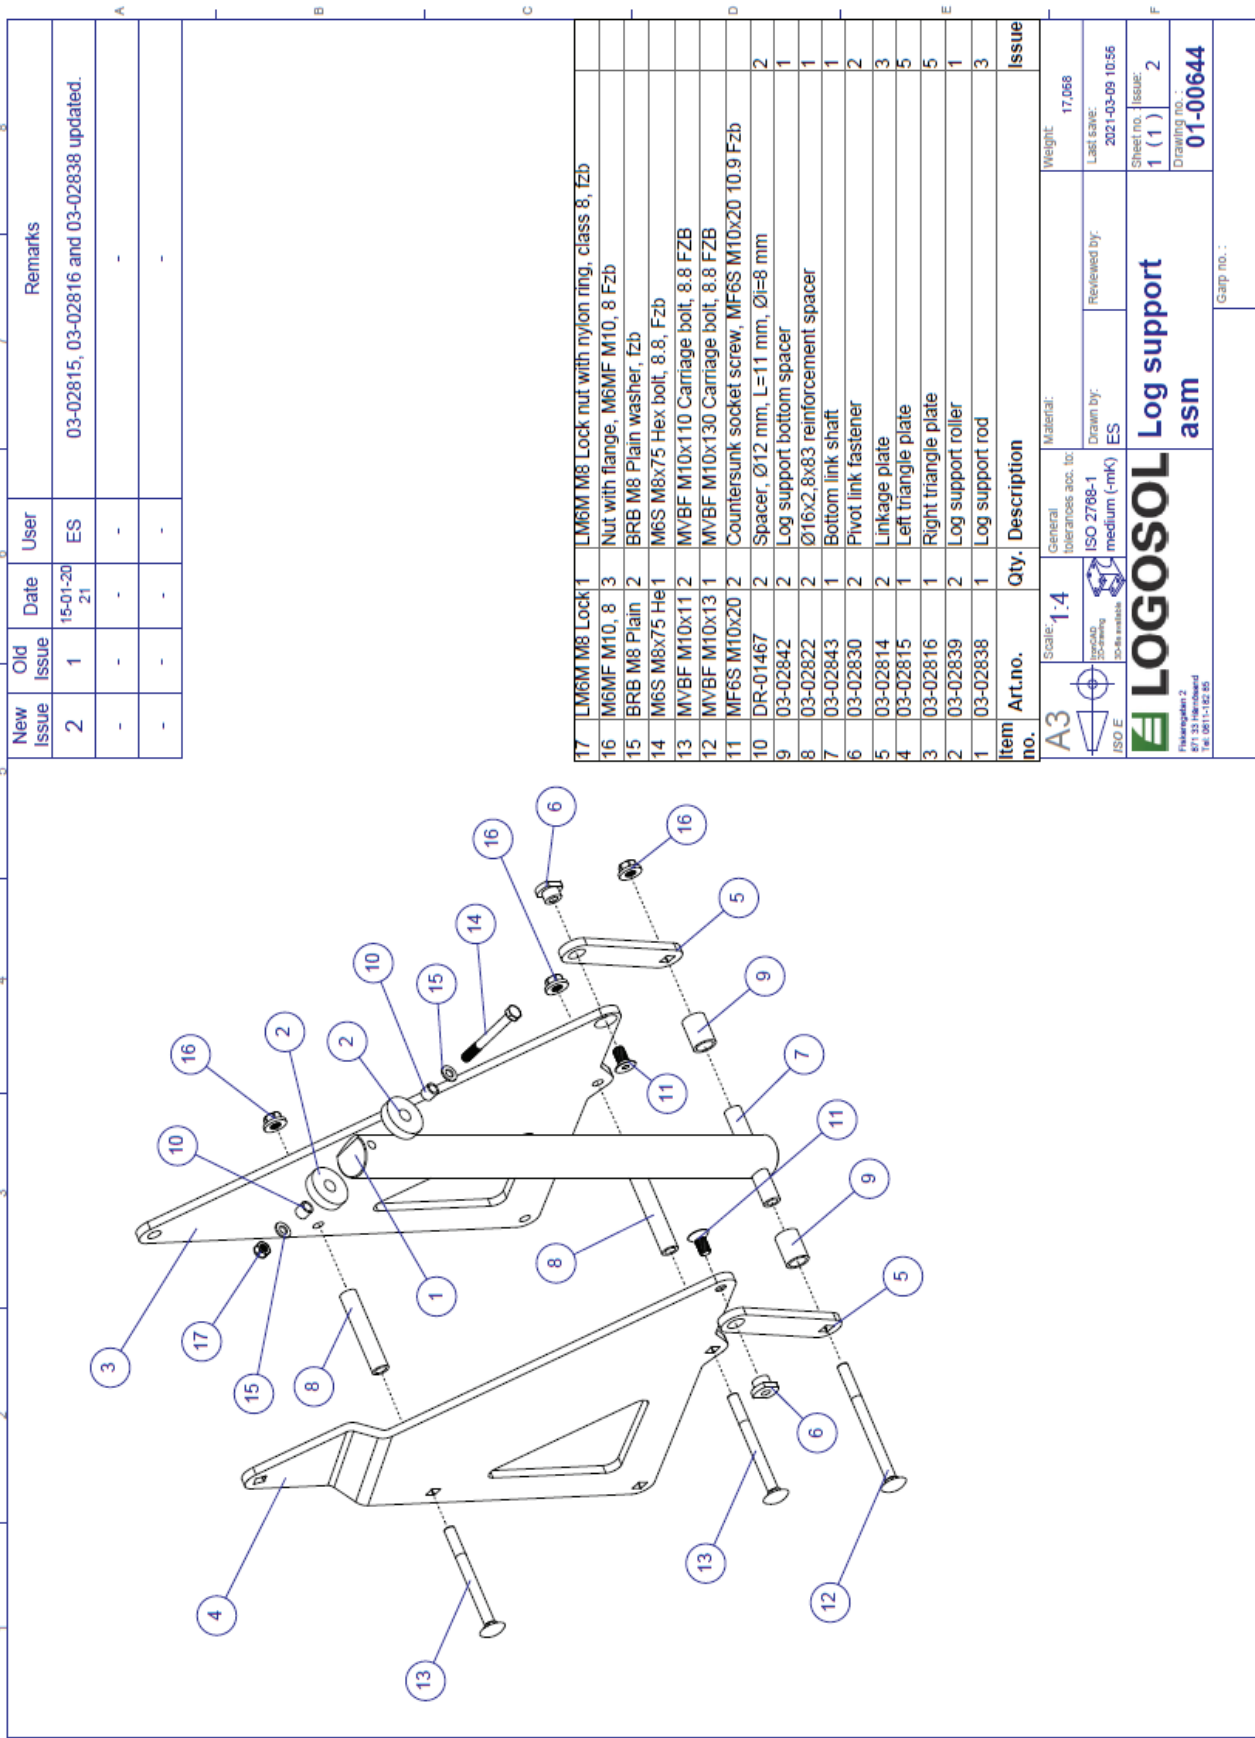

New Issue	Old Issue	Date	User	Remarks
2	1	15-01-2021	ES	03-02815, 03-02816 and 03-02838 updated.
-	-	-	-	-
-	-	-	-	-

Item no.	Art.no.	Qty.	Description	Issue
17	LM6M M8 Lock1	1	LM6M M8 Lock nut with nylon ring, class 8, fzb	
16	M6MF M10, 8	3	Nut with flange, M6MF M10, 8 Fzb	
15	BRB M8 Plain	2	BRB M8 Plain washer, fzb	
14	M6S M8x75 He1	1	M6S M8x75 Hex bolt, 8.8, Fzb	
13	MVBF M10x11 2	1	MVBF M10x110 Carriage bolt, 8.8 FZB	
12	MVBF M10x13 1	1	MVBF M10x130 Carriage bolt, 8.8 FZB	
11	MF6S M10x20 2	2	Countersunk socket screw, MF6S M10x20 10.9 Fzb	
10	DR-01467	2	Spacer, Ø12 mm, L=11 mm, ØI=8 mm	2
9	03-02842	2	Log support bottom spacer	1
8	03-02822	2	Ø16x2.8x83 reinforcement spacer	1
7	03-02843	1	Bottom link shaft	1
6	03-02830	2	Pivot link fastener	2
5	03-02814	2	Linkage plate	3
4	03-02815	1	Left triangle plate	5
3	03-02816	1	Right triangle plate	5
2	03-02839	2	Log support roller	1
1	03-02838	1	Log support rod	3

Scale:	General tolerances acc. to:	Material:	Weight:
A3	1:4	ISO 2768-1 medium (-mk)	17,068

Drawn by:	Reviewed by:	Last save:
ES	ES	2021-03-09 10:56

Sheet no.:	Issue:
1 (1)	2

Drawing no.:	01-00644
--------------	----------

Logosol	Log support asm
---------	-----------------

Polkarpukhin 2 871 531 111 Tel. 0011-152 85	Garp no. :
---	------------




01-00642

<



01-00644

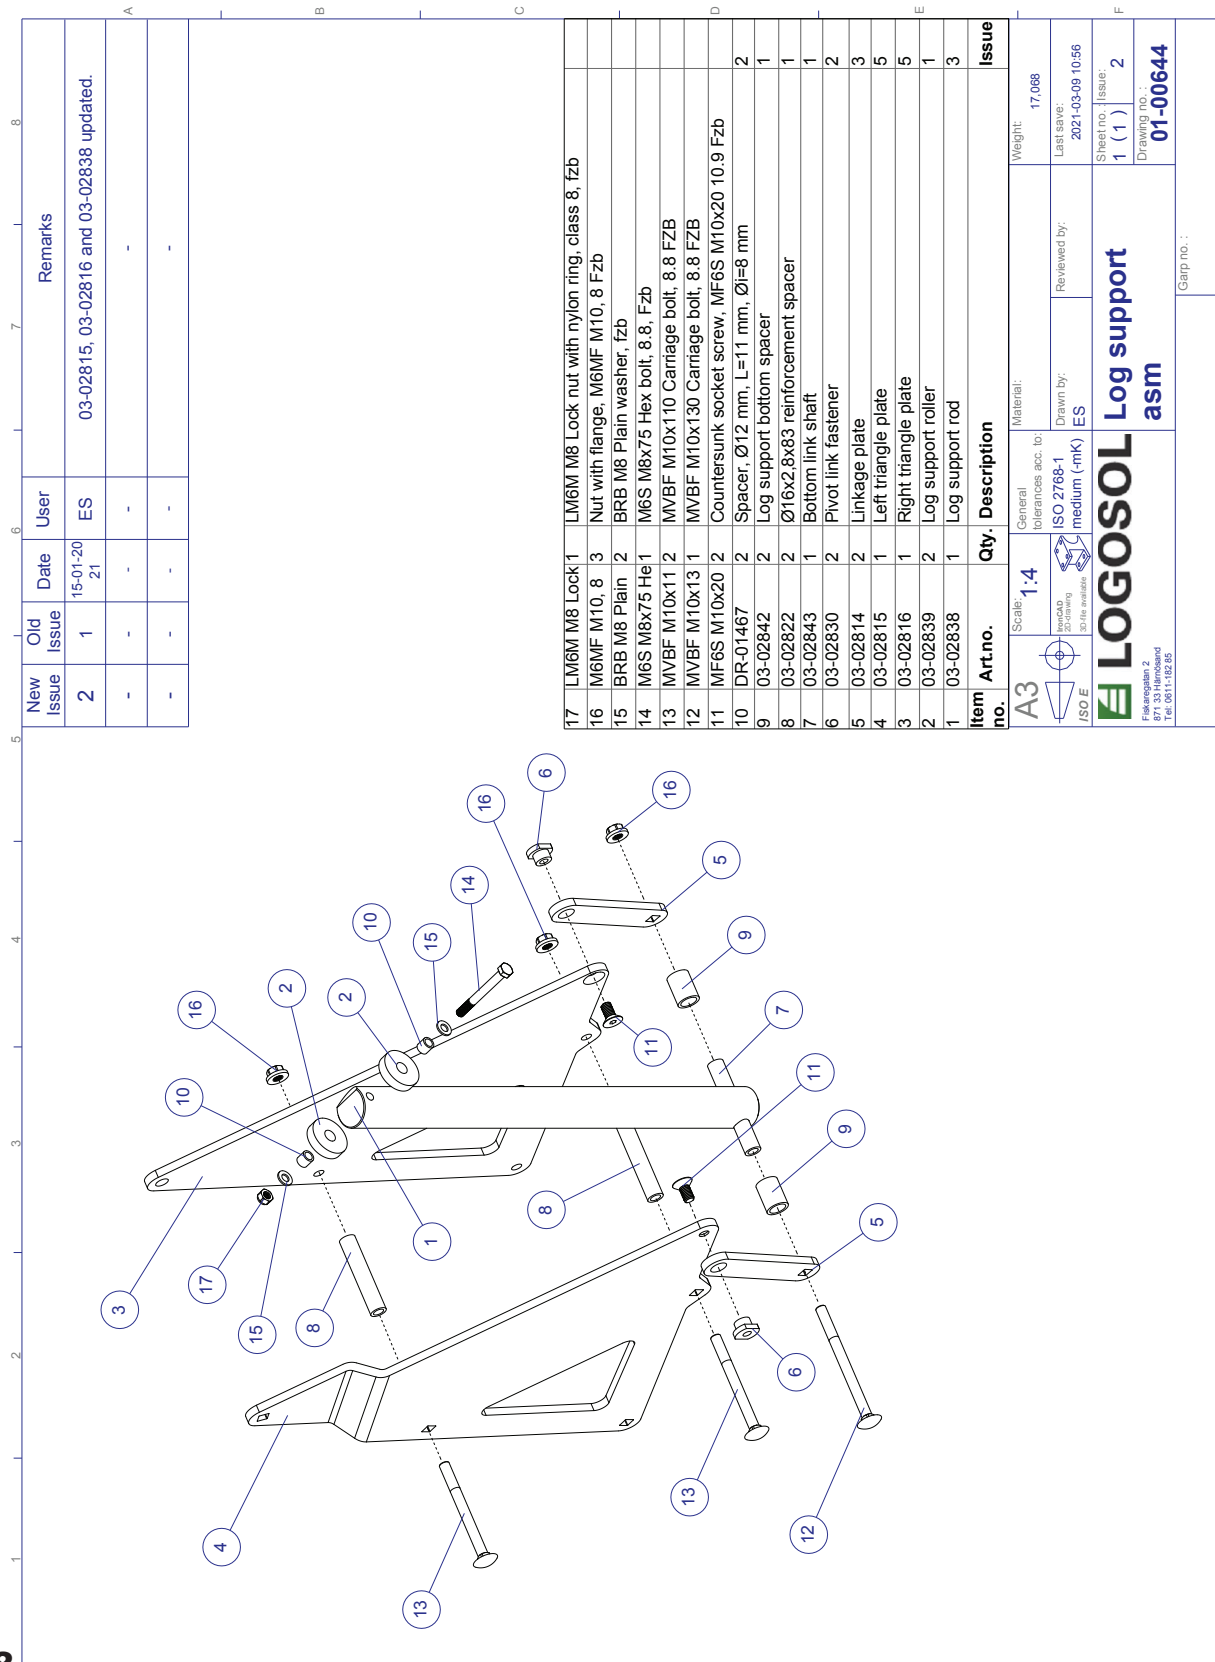


New Issue	Old Issue	Date	User	Remarks
2	1	15-01-2021	ES	03-02815, 03-02816 and 03-02838 updated.
-	-	-	-	-
-	-	-	-	-

Item no.	Art.no.	Qty.	Description	Issue
17	LM6M M8 Lock 1	1	LM6M M8 Lock nut with nylon ring, class 8, fzb	
16	M6MF M10, 8	3	Nut with flange, M6MF M10, 8 Fzb	
15	BRB M8 Plain	2	BRB M8 Plain washer, fzb	
14	M6S M8x75 He1	1	M6S M8x75 Hex bolt, 8.8, Fzb	
13	MVBF M10x11	2	MVBF M10x11 Carriage bolt, 8.8 FZB	
12	MVBF M10x13	1	MVBF M10x13 Carriage bolt, 8.8 FZB	
11	MF6S M10x20	2	Countersunk socket screw, MF6S M10x20 10.9 Fzb	
10	DR-01467	2	Spacer, Ø12 mm, L=11 mm, ØI=8 mm	2
9	03-02842	2	Log support bottom spacer	1
8	03-02822	2	Ø16x2.8x83 reinforcement spacer	1
7	03-02843	1	Bottom link shaft	1
6	03-02830	2	Pivot link fastener	2
5	03-02814	2	Linkage plate	3
4	03-02815	1	Left triangle plate	5
3	03-02816	1	Right triangle plate	5
2	03-02839	2	Log support roller	1
1	03-02838	1	Log support rod	3

A3	Scale: 1:4	General tolerances acc. to: ISO 2768-1 medium (m-k)	Material:	Weight: 17.068
			Drawn by: ES	Last save: 2021-03-08 10:56
			Reviewed by:	Sheet no.: 1 (1)
			Log support	Issue: 2
			asm	Drawing no.: 01-00644
				Garp no.:



01-00672

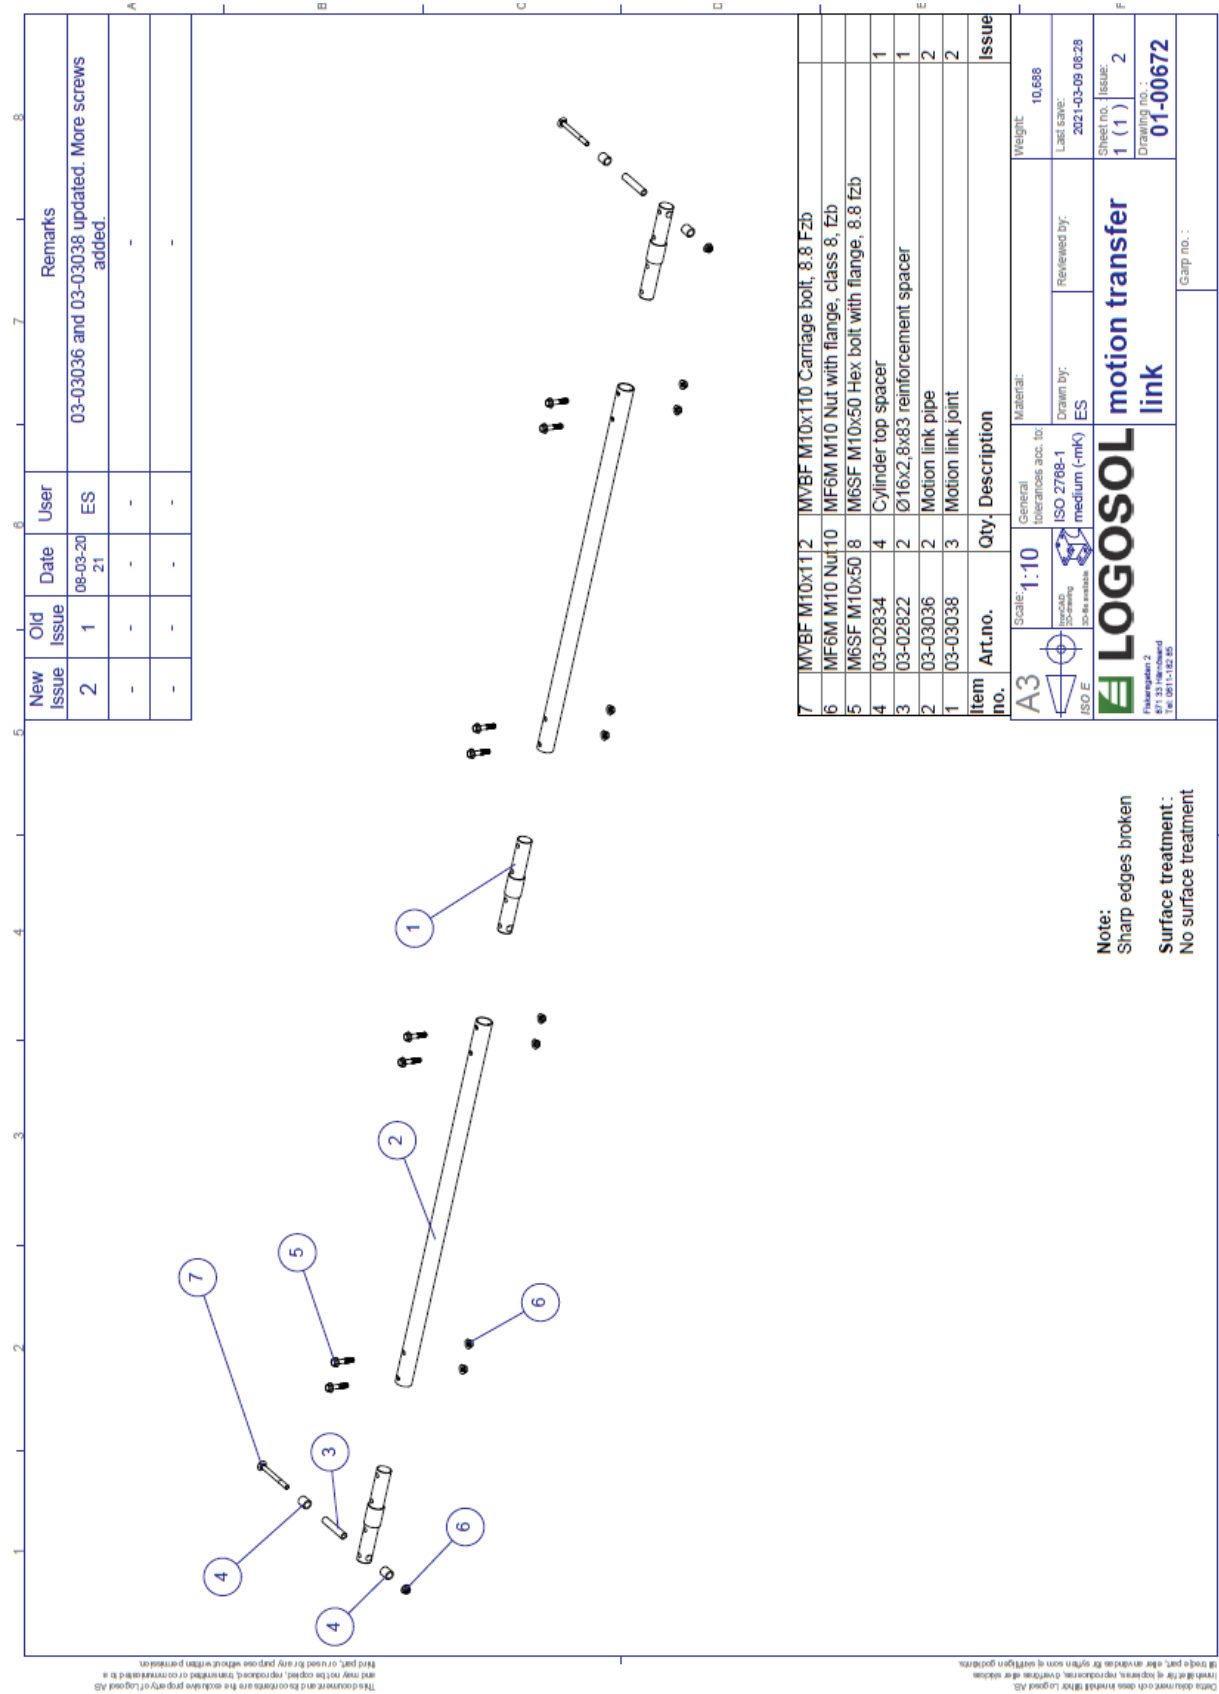




01-00634

Detta dokument och dess innehåll tillhör Logosol AB.
Innehållet får ej kopieras, reproduceras, överföras eller spridas.
All tredje part, eller användare för system som ej utvecklat godkänns.


This document and its contents are the exclusive property of Logosol AB
and may not be copied, reproduced, transmitted or communicated to a
third party, crossed for any purpose without written permission.

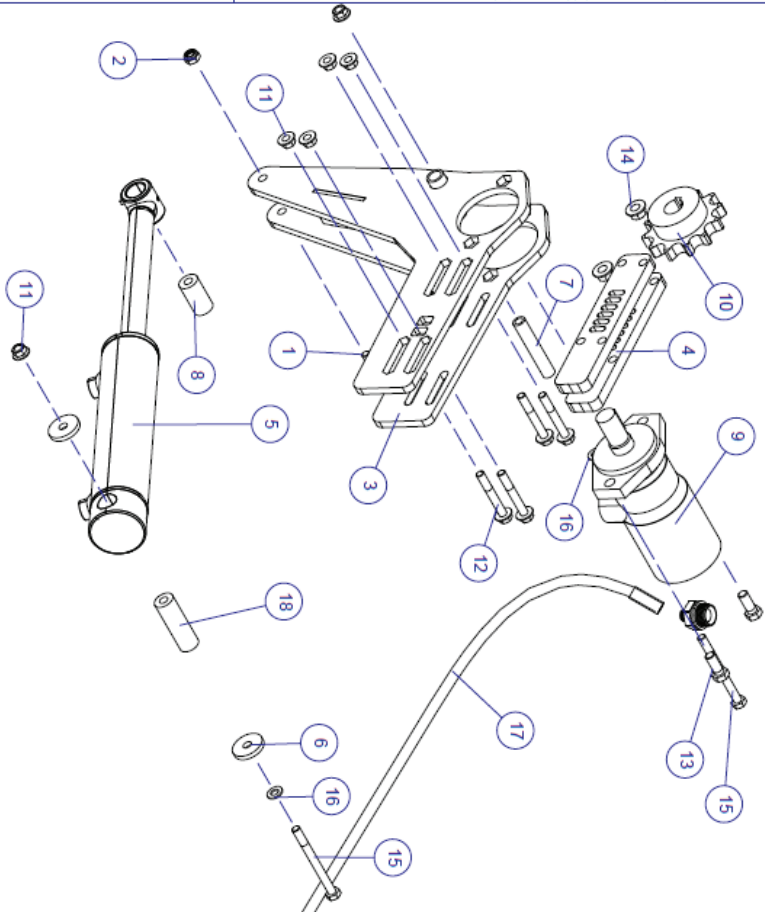

New Issue	Old Issue	Date	User	Remarks
4	2	09-05-20 21	MS	New rev before serial production
2	1	19-03-20 21	MS	Prototyp 3
-	-	-	-	-


Item no.	Art.no.	Qty.	Description	Issue
18	03-02878	1	Ø25x7	3
17	04-00477	1	Log rotator (rotate) assm.	2
16	BRB 10	2	Washer	
15	M6S M10x110	2	Hexscrew	
14	M6MF M12	2	Flangrenut	
13	M6S M12x30	2	Hexscrew	
12	M6SF M10x70	4	Flangescrew M6SF DIN 6921	
11	M6MF M10	6	Flangrenut	1
10	04-00437	1	Sprocket-116-12-S, Ramsstrom	1
9	04-00436	1	Pmc hydraulics MP3150CDP art.nr 1028864	1
8	03-02898	1	Ø25x7	4
7	03-02894	1	Spacer 16x2,8	4
6	03-02893	2	Cylinder spacer	4
5	04-00438	1	jotek HFR 60/30-200	1
4	03-02895	2	Sword shim 15mm	5
3	02-00463	1	Rotator arm	4
2	Lock nut M10	1	Lock nut M10	
1	M6S M10x75	1	Hex screw M10x75	

A3	Scale: 1:5	GENERAL INFORMATION: ISO, ISO	Weight: 42,714
ISO E	ISO 2768-1 medium (m-k)	Material: MS	Label name: 2021-05-10 14:48
LOGOSOL	Drawn by: MS	Reviewed by:	Sheet no: 1 (1)
Rotating arm assembly	Comp no.:		Issue: 4
01-00634			



CC

HYDRAULIC DIAGRAM

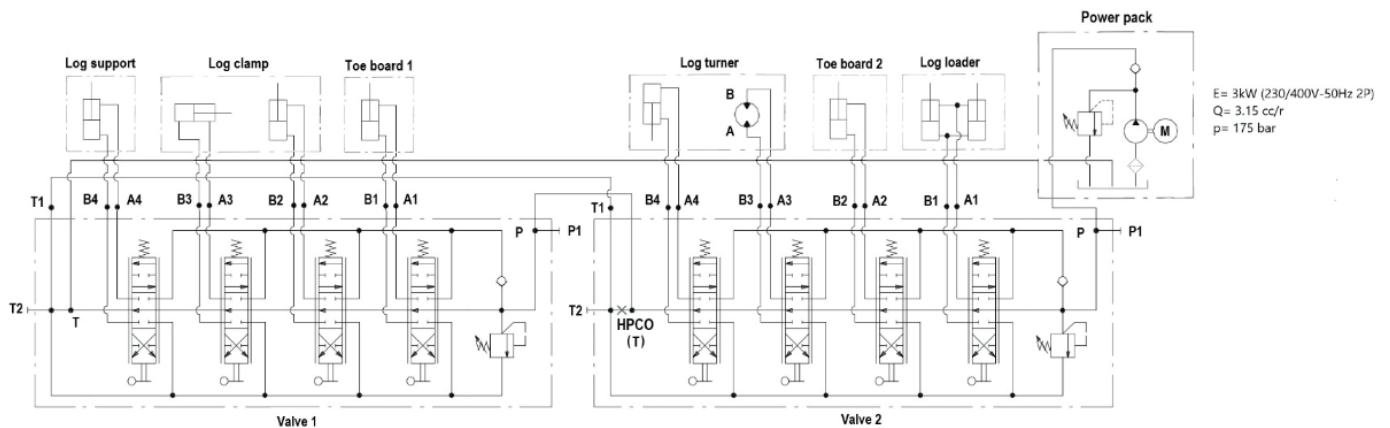

TROUBLESHOOTING SCHEDULE

PROBLEM/SYMPTOM	PROBABLE CAUSE	ACTION
Nothing happens when you activate the levers	Low oil level in the tank Fuse has tripped Incorrect hose connection on the valve Pump motor runs in the wrong direction (Phase-inverted motor)	Check the oil level and refill if necessary Check fuses in fuse cabinets Check connection has been executed as in the manual. Phase-inverted motor in the coupling.
The pump does not start when the power is turned on	Fuses have tripped Connectors not put together properly	Check fuses check connectors
Oil leaking from the machine	Check whether leaking coupling is tightened Check hoses for leaks	Re-tighten loose couplings Replace damaged hoses
One or more functions are perceived to be under-powered.	Low oil level in the tank Leakage in the system Air in the system Damaged hydraulic cylinder	Check the oil level in the tank Re-tighten loose couplings Replace damaged hoses Run the functions one by one until the air is forced out of the system to the tank Run the piston rod out into its end position, turn off the machine. If there is a lot of play in the piston, the gasket and piston control may be broken.
Functions move jerkily	Low oil level in the tank Leakage in the system Air in the system	Check the oil level in the tank Re-tighten loose couplings Replace damaged hoses Run the functions one by one until the air is forced out of the system to the tank
Sawn blocks are not perpendicular	Log supports not aligned Sawmill not aligned	Adjust the log supports perpendicular to the saw bed Check against alignment sequence in the sawmill manual



Declaration of Conformity

In accordance with Directive 2006/42/EC, Annex 2A

Logosol AB
Fiskaregatan 2
871 33 Härnösand
SWEDEN

hereby declares that **Logosol Hydraulic B1001/B751**

has been manufactured in conformity with:
Machinery Directive 2006/42/EC
EMC Directive 2004/108/EU

and has been manufactured in conformity with the
following harmonised standards:
EN ISO 12100:2010
EN 60204-1:2006
EN 50370-1, -2.

Härnösand 2022-03-03
CEO Fredrik Forssberg

The Logosol logo features a stylized icon on the left, resembling a square with horizontal lines, followed by the word 'LOGOSOL' in a bold, uppercase, sans-serif font.

LOGOSOL

Fiskaregatan 2, 871 33 Härnösand, SWEDEN
+46 611 182 85 | info@logosol.com | www.logosol.com