


## USER MANUAL

TRANSLATION OF ORIGINAL USER MANUAL

Ref. no. 0458-395-5013

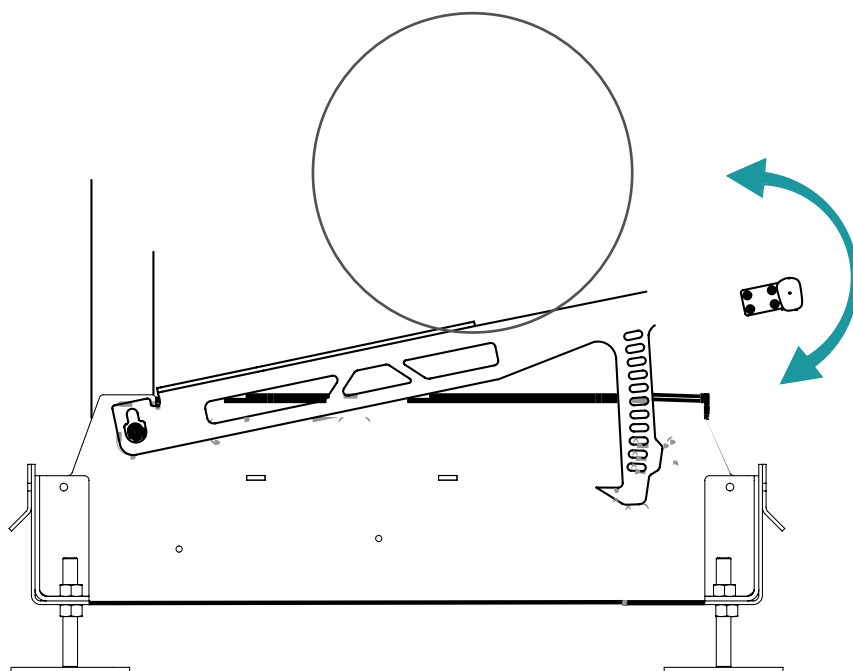

## MANUAL TOE BOARD



Read through the user manual carefully and make sure you understand its contents before you use the equipment.


EN

# COMPONENTS

Check that all the components are included in the shipment.




Bolt bag  
8200-005-0050

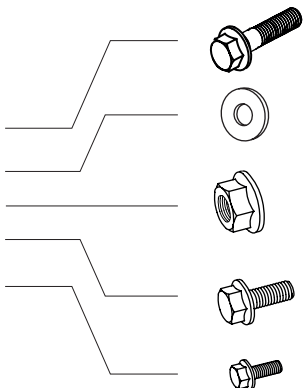


- |         |                   |               |
|---------|-------------------|---------------|
| — 1 x — | Hex bolt M8x50    | 9007-319-1850 |
| — 3 x — | Flat washer M8    | 9291-021-0180 |
| — 3 x — | Tensilock nut M8  |               |
| — 1 x — | Flange bolt M8x20 | 9018-346-1800 |
| — 4 x — | Flange bolt M5x16 | 9018-346-0516 |



- |         |                    |               |
|---------|--------------------|---------------|
| — 1 x — | Spacer sleeve 11mm | 9291-020-0005 |
|---------|--------------------|---------------|

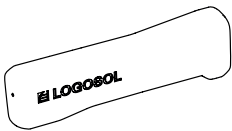


- |         |                |          |
|---------|----------------|----------|
| — 1 x — | Plastic handle | 03-01782 |
|---------|----------------|----------|

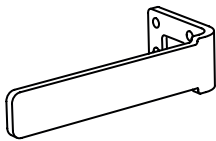

- |         |              |          |
|---------|--------------|----------|
| — 1 x — | Handle plate | 03-02067 |
|---------|--------------|----------|




- |         |      |          |
|---------|------|----------|
| — 1 x — | Hook | 03-02068 |
|---------|------|----------|

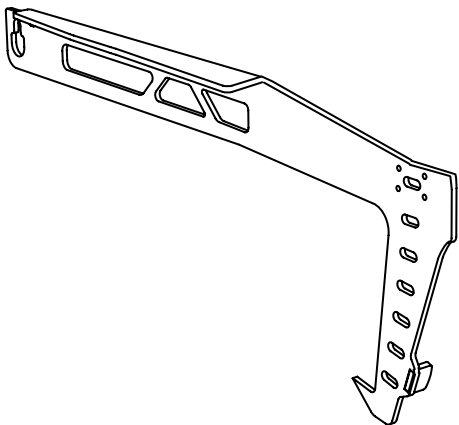

- |         |             |          |
|---------|-------------|----------|
| — 1 x — | Lifting arm | 02-00351 |
|---------|-------------|----------|



User manual    0458-395-5013

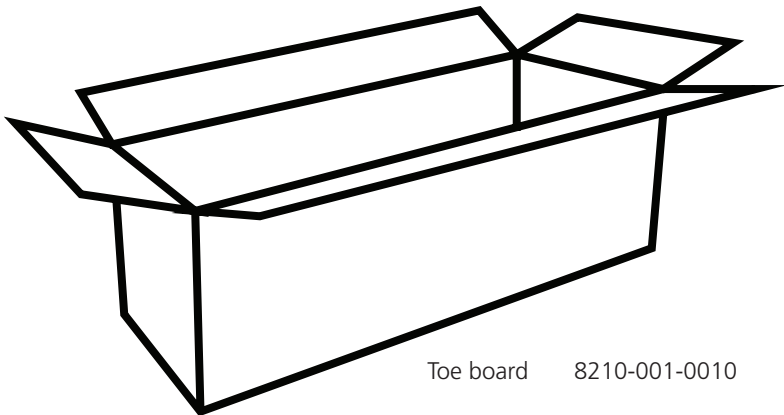

Toe board    8210-001-0010

# ASSEMBLY

The toe board is an optional attachment for the sawmill and should be fitted to one of the cross bunks.




Read all the assembly instructions before beginning the assembly, and then follow the step-by-step instructions during the assembly.



Order of assembly

## EXPLODED VIEW

Toe board

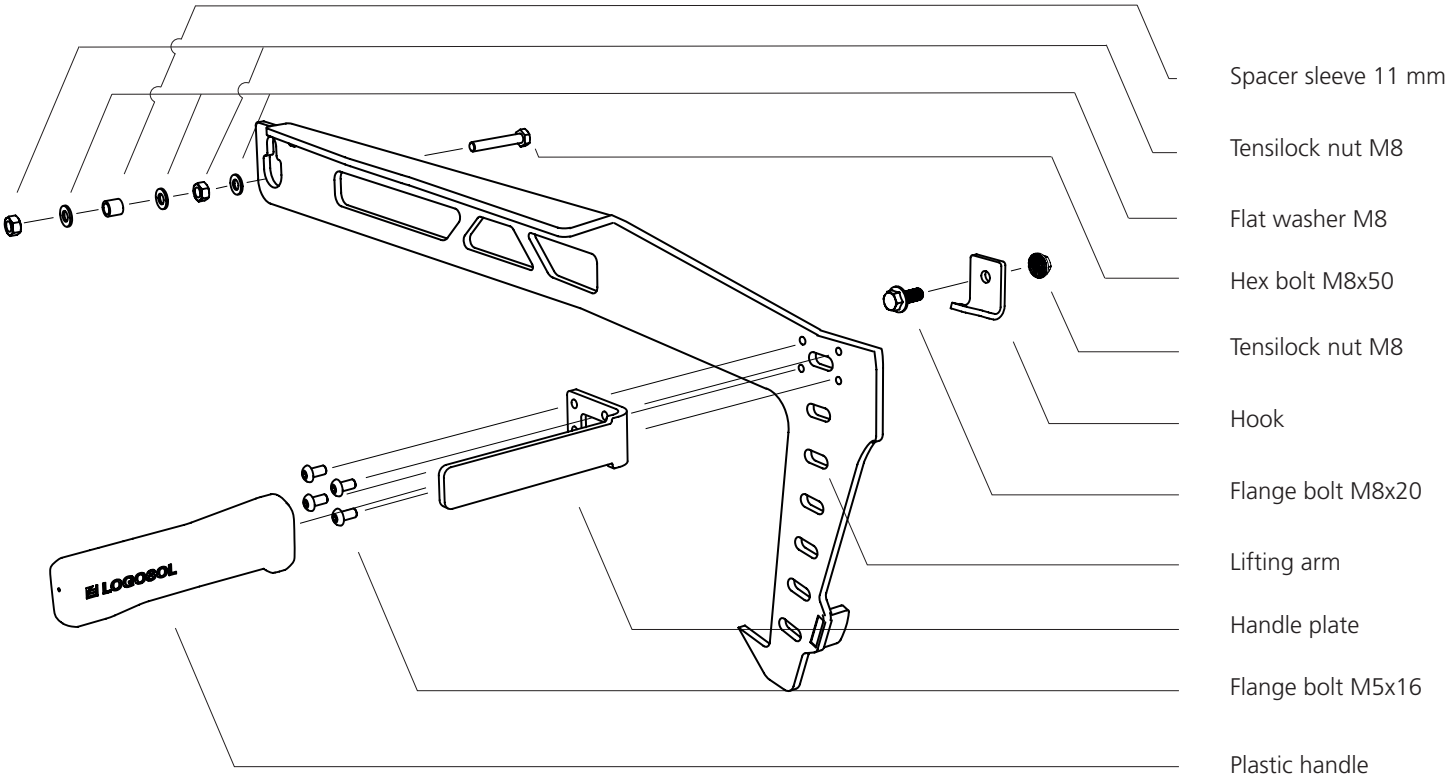


# ASSEMBLY

1

Fit the plastic handle on the handle plate.


-  — 1 x — Handle
-  — 1 x — Handle plate

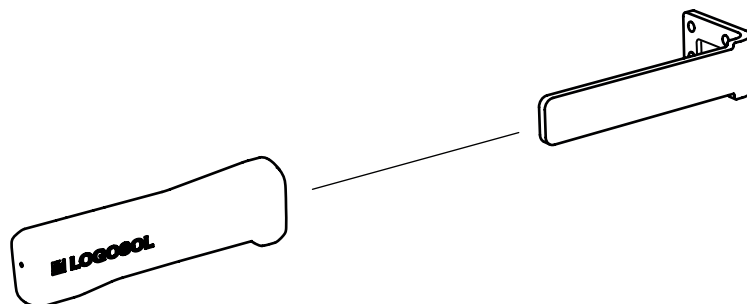

2

Screw the handle to the lifting arm.


-  — 1 x — Lifting arm
-  — 1 x — Handle
-  — 4 x — Flange bolt M5x16

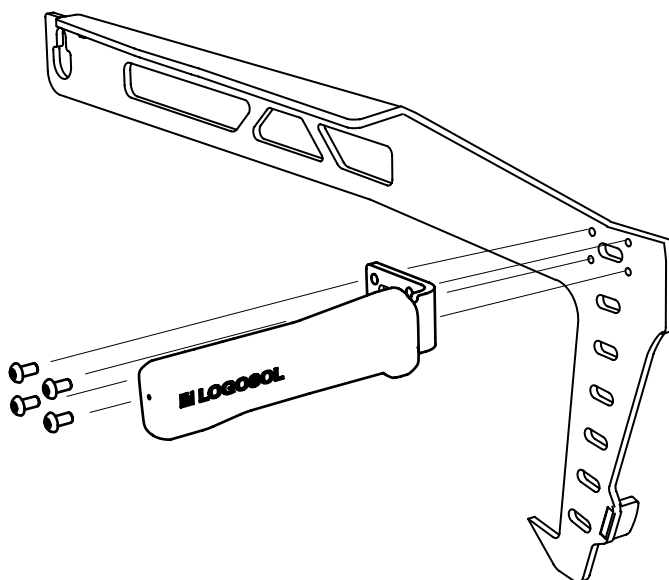

3

Screw the hook to the cross bunk.

-  — 1 x — Hook
-  — 1 x — Flange bolt M8x20
-  — 1 x — Tensilock nut M8

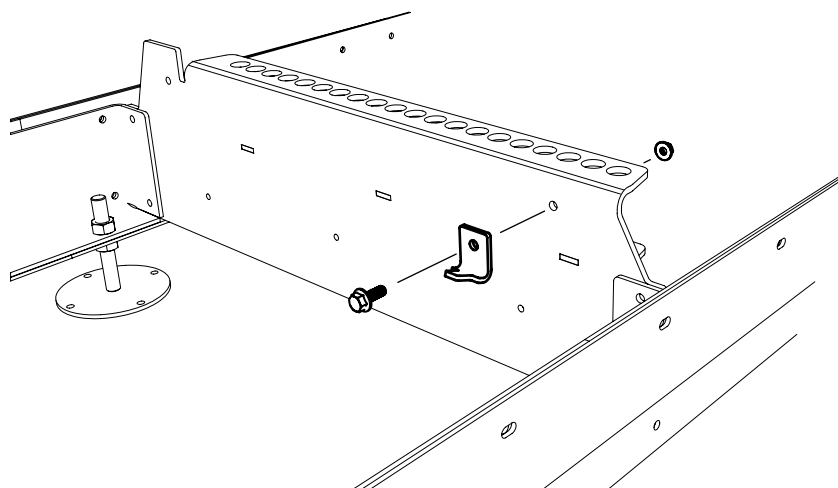

# ASSEMBLY


4

Fit the bolting in the cross bunk. Note that one of the spacer sleeves is taken from the cross bunk.

-  — 1 x — Hex bolt M8x50
-  — 3 x — Flat washer M8
-  — 2 x — Tensilock nut M8
-  — 1 x — Spacer sleeve 11mm




Spacer sleeve taken from the cross bunk.

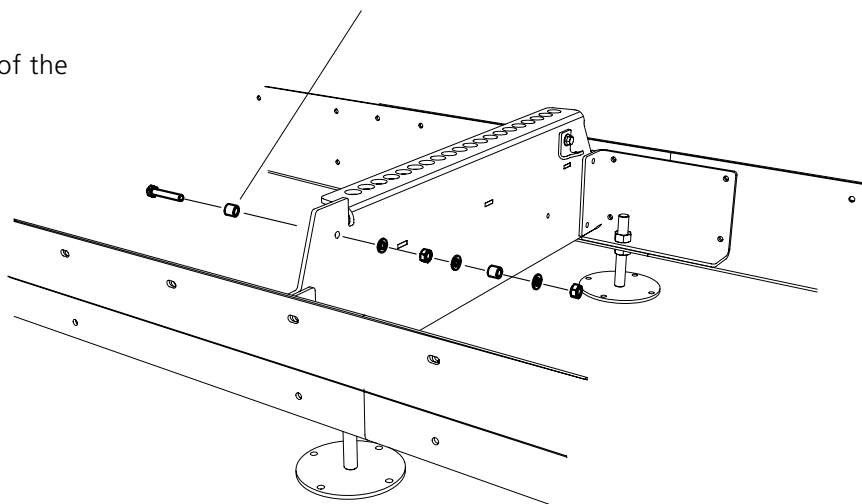


5

Hang the toe board up on the attachment points on the cross bunk.

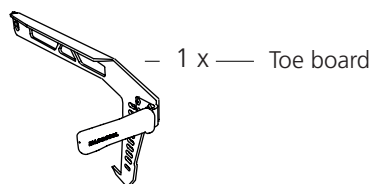


— 1 x — Toe board

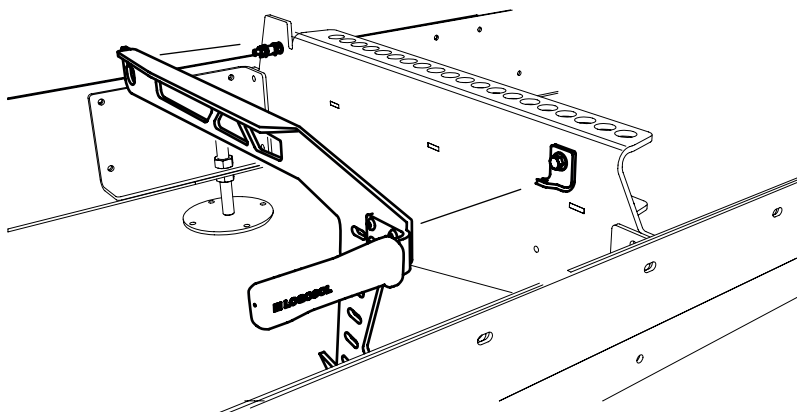

# USING THE TOE BOARD


## COMPENSATE FOR TAPERED LOGS

Use the toe board to compensate for tapered logs. Lift the log at its narrow end until the pith of the log is level.

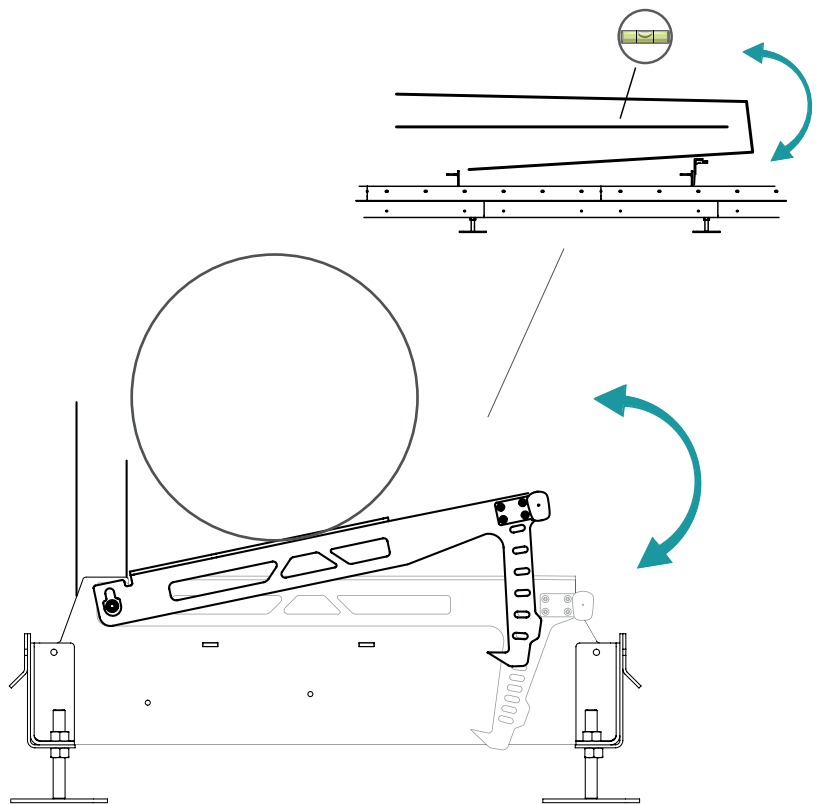

## ROTATE LOGS

When you are going to rotate a log before taking the next cut, you can use the toe board as a cant hook.

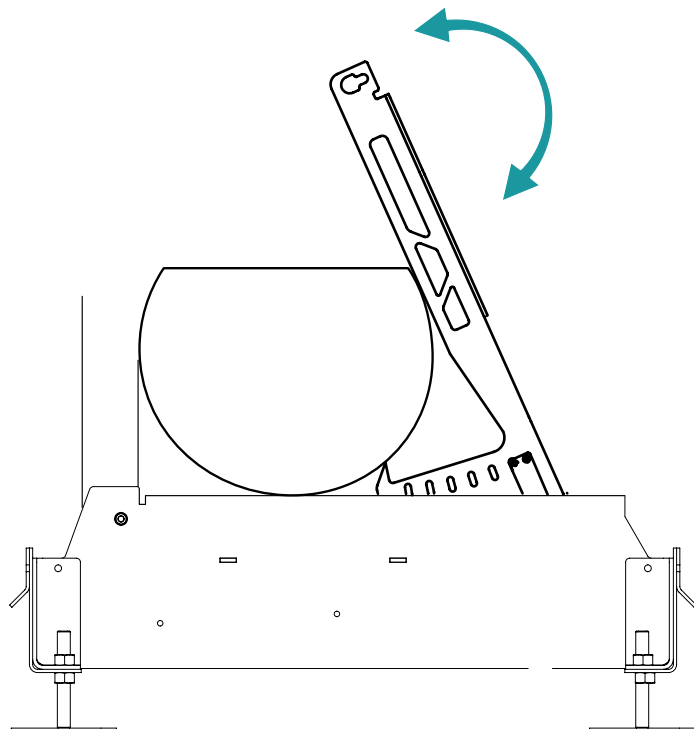

# NOTES



**LOGOSOL SWEDEN**

Fiskaregatan 2 13, S-871 33 Härnösand, SWEDEN

Phone +46 611 182 85 | Fax +46 611 182 89

[info@logosol.com](mailto:info@logosol.com) | [www.logosol.com](http://www.logosol.com)