

# Log House Moulder **LM410**

## Timmerfräs- och balkhyvel **LM410**



**ASSEMBLING PETROL ENGINE**  
**MONTERING BENSINMOTOR**



## Assembling petrol engine | Montering av bensinmotor









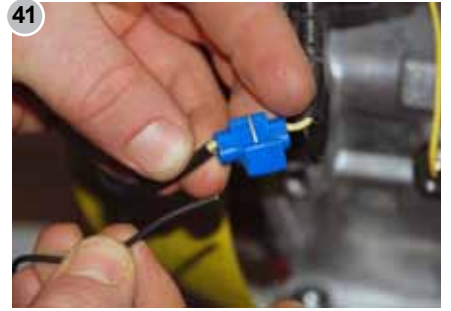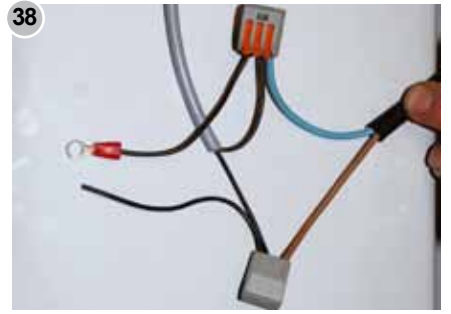



- 1.** Remove the air filter.
- 4.** Remove the throttle lever and fit the wire holder.
- 9.** Fit the spring in the hole that gives the most traction power to the throttle lever.
- 10.** Do not over-tighten the nut since it is important that the throttle lever on the handle still can move without difficulty. The throttle lever must return to its idling mode after being released.
- 30.** Tighten the belt by raising the engine.
- 33.** Make sure that the pulleys are in line with each other.

- 1.** Demontera luftrenaren.
- 4.** Demontera gasreglaget och montera vajerhållaren.
- 9.** Flytta retur fjädern till det hål som ger mest dragkraft på reglaget.
- 10.** Dra inte muttern hårdare än att reglaget fortfarande löper lätt.
- 30.** Spänn remmen genom att höja motorn.
- 33.** Kontrollera remskivornas linjering.